



Product handleiding

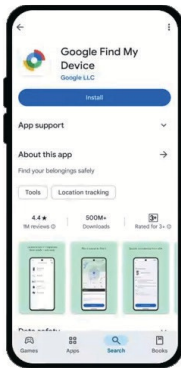

Zorg ervoor dat u Android 9.0 of hoger heeft geïnstalleerd, en dat u de app 'Google's Find Hub' heeft gedownload.

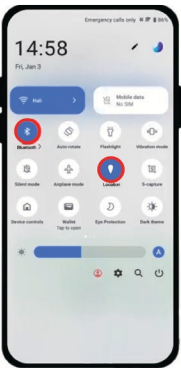


Controleer of bluetooth en locatie voorzieningen aanstaan op uw Android toestel.

Product handleiding




Druk één keer op de aan/uit-knop van de GPS tracker om deze in te schakelen. Plaats de tracker in de buurt van uw Android telefoon, en klik op 'verbinden' in de pop-up die verschijnt op uw telefoon.

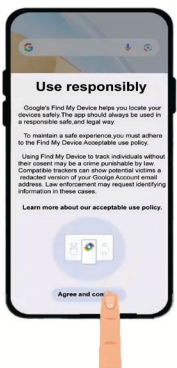


Volg de instructies op het scherm en tik op 'Akkoord en doorgaan'.

Product handleiding

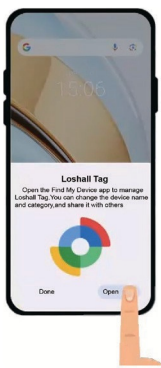


Tik op 'Gereed' om het koppelen en verbinden te voltooien.

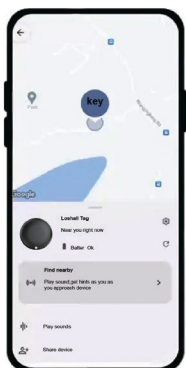


Of tik op "Open App" om de "Google Find Hub"-app te openen en de locatie van de GPS tracker te kunnen zien.

Product manual

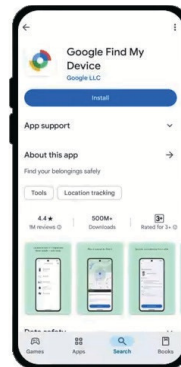


Ensure you have Android 9.0 or higher installed and that you have downloaded the app "Google's Find Hub."

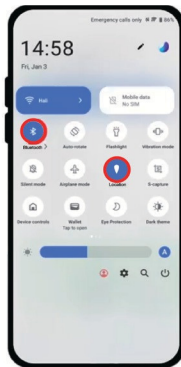


Check if Bluetooth and location services are enabled on your Android device.

Product Manual

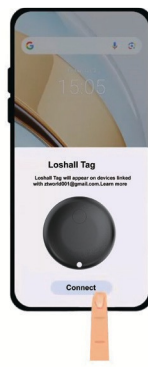


Press the power button of the GPS tracker once to turn it on. Place the tracker near your Android phone, and click 'connect' in the pop-up that appears on your phone.

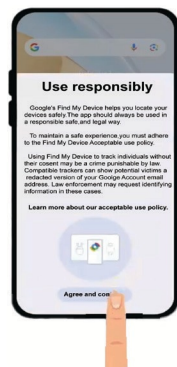


Follow the instructions on the screen and tap "Agree and continue."

Product manual

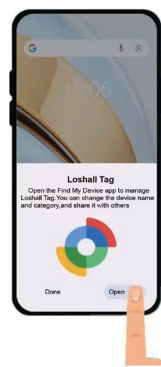

Tap "Done" to complete the pairing and connection.

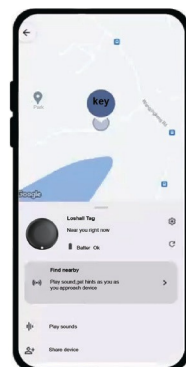

Tap on "Open App" to open the "Google Find Hub" app and view the location of the GPS tracker.



GPS-tracker

Product handleiding



Works with Android
Find My Device

Product handleiding

Positie en traject verifiëren

1. Wanneer dit apparaat wordt achtergelaten en niet langer binnen het bereik van uw Android-apparaat is, ontvangt u een pop-upmelding op uw Android-telefoon.
2. Wanneer dit apparaat buiten uw zicht is maar zich in de buurt bevindt: Open de "Find My Device"-app, zoek het gekoppelde apparaat in de lijst en tik op "Geluid afspelen" om het een geluidssignaal te laten geven. Volg het geluid om het apparaat te lokaliseren en tik op "Geluid stoppen" zodra u het hebt gevonden.
3. Op afstand lokalisering

Open de "Find My Device"-app, navigeer naar de lijst en selecteer dit apparaat door te scrollen of te tikken. Na selectie toont het scherm een kaartinterface die de actuele locatie van het apparaat weergeeft (indien online) of de laatste bekende locatie (indien offline). De kaart past automatisch de schaal aan om zich te concentreren op het gebied waar het apparaat zich bevindt en toont een marker. Locatie-updates worden in realtime weergegeven wanneer het apparaat binnen het bereik van het Find My Device-netwerk is (bijv. wanneer er Android-apparaten in de buurt zijn die locatie-updates ondersteunen). Indien de locatie niet wordt bijgewerkt, toont het scherm: "Laatste update X minuten geleden".

Tik op het pictogram "Navigatie" of "Routebeschrijving" op de kaart.
De app opent vervolgens Google™ Maps om u gedetailleerde routebeschrijving te geven naar de locatie van uw eigendom.

Over Google™ Find My Device

Dit product maakt gebruik van het Google™ Find My Device-netwerk en het Android-ecosysteem om voorwerpen te lokaliseren. Het maakt daarbij gebruik van crowdsourced gegevens van nabijgelegen Android-apparaten om realtime of laatste bekende locaties weer te geven. Google™ en Find My Device zijn geregistreerde handelsmerken van Google™ LLC, beschermd door intellectuele-eigendomsrechten en mogen niet zonder toestemming worden gebruikt. In overeenstemming met de privacyrichtlijnen van Google wordt locatiegegevens van de gebruiker versleuteld en uitsluitend gebruikt voor het lokaliseren. Deze gegevens worden niet gedeeld met derden. Wij waarschuwen nadrukkelijk: dit product is uitsluitend bedoeld voor rechtmatig volgen van objecten; het volgen van personen is strikt verboden en kan in strijd zijn met de wet. De gebruiker is volledig verantwoordelijk voor correct gebruik. Controleer regelmatig de status en instellingen van het apparaat voor privacybehoed. Ga voor meer informatie naar findmydevice.google.com. Wij zijn niet aansprakelijk voor problemen die voortkomen uit misbruik of het niet naleven van de voorwaarden van Google.

Product handleiding

Index

1. Voordat u begint.
2. Aan de slag.
3. Snelle koppelmingsmethode.
4. Handmatig koppelen.
5. Positie en traject verifiëren.
6. Over Google™ Find My Device.
7. FCC-verklaring.
8. Over batterijgebruik en verwijdering.

Voordat u begint

Dit apparaat is een slimme zoeker die gebruikmaakt van Google's Find My Device-service, gekoppeld aan de "Google™ Find My Device"-app op uw Android-apparaat, om uw persoonlijke spullen snel en veilig te lokaliseren via Google™ Maps. Alle locatie-informatie blijft privé en zelfs Google™ heeft daar geen toegang toe.

1. Dit apparaat ondersteunt alleen de "Google™ Find My Device"-app. Zorg ervoor dat u de meest recente versie van de "Find My Device"-app downloadt en installeert uit de Google™ Play Store.
2. Dit apparaat is alleen compatibel met Android-apparaten waarop Android 9 of hoger draait.
3. Controleer of Bluetooth en locatievoorzieningen op uw Android-apparaat zijn ingeschakeld.

Aan de slag

1. **Inschakelen** Druk één keer op de aan/uit-knop om het apparaat in te schakelen.
2. **Uitschakelen** Druk twee keer snel op de aan/uit-knop en houd de knop bij de derde druk ingedrukt totdat u het uitschakelgeluid hoort.
3. **De werksatus van het apparaat controleren** Druk tweemaal snel op de aan/uit-knop. Wanneer u een bevestigingsgeluid hoort, betekent dit dat het apparaat succesvol is geactiveerd en zich in de normale bedrijfsmodus bevindt.
4. **Fabriekreset uitvoeren** Druk vier keer snel op de aan/uit-knop en houd de knop bij de vijfde druk ingedrukt totdat u het resetgeluid hoort.

Product handleiding

FCC-verklaring

1. Dit apparaat voldoet aan deel 15 van de FCC-regels. Het gebruik is onderworpen aan de volgende twee voorwaarden: (1) Dit apparaat mag geen schadelijke interferentie veroorzaken. (2) Dit apparaat moet alle ontvangen interferentie accepteren, inclusief interferentie die ongewenste werking kan veroorzaken.
2. Wijzigingen of aanpassingen die niet uitdrukkelijk zijn goedgekeurd door de partij die verantwoordelijk is voor naleving, kunnen de beveiliging van de gebruiker om het apparaat te bedienen ongeduldig maken.



Opmerking: Dit apparaat is getest en voldoet aan de eisen voor een digitaal apparaat van klasse B, volgens deel 15 van de FCC-regels.

Deze limieten zijn bedoeld om redelijke bescherming te bieden tegen schadelijke interferentie in een woonomgeving.

Dit apparaat genereert en kan radiofrequentie-energie uitzenden en, indien niet geïnstalleerd en gebruikt volgens de instructies, schadelijke interferentie met radiocommunicatie veroorzaken. Er is echter geen garantie dat interferentie zich in een bepaalde installatie niet zal voordoen. Als dit apparaat schadelijke interferentie met radio- of televisieontvangst veroorzaakt — wat kan worden vastgesteld door het apparaat aan en uit te zetten — wordt de gebruiker aangeraden de interferentie te corrigeren door een of meer van de volgende maatregelen:

- Richt of verplaats de ontvangstantenne opnieuw.
- Verhoog de afstand tussen het apparaat en de ontvanger.
- Sluit het apparaat aan op een stopcontact of een ander circuit waarop de ontvanger is aangesloten.
- Raadpleeg de dealer of een ervaren radio-/tv-technicus voor hulp.

Het apparaat is geïsoleerd om te voldoen aan algemene RF-blootstellingsvereisten. Het apparaat kan worden gebruikt in draagbare blootstellingsomstandigheden zonder beperking.

Product handleiding

Snelle koppelmingsmethode

1. Houd de aan/uit-knop ongeveer 3 seconden ingedrukt om het apparaat te activeren.
2. Houd het geactiveerde apparaat dicht bij uw Android-apparaat.
3. Er verschijnt een pop-up op uw scherm; tik op "Verbinden".
4. Volg de instructies op het scherm en tik op "Akkoord en doorgaan".
5. Tik vervolgens op "Gereed" om het koppelen en verbinden te voltooien.
6. Open de "Google™ Find My Device"-app en selecteer dit apparaat om de naam en categorie aan te passen.

Handmatig koppelen

Als u de snelle koppelmingspop-up hebt gemist, kunt u het apparaat handmatig instellen.

1. Open de "Instellingen".
2. Ga naar "Google™".
3. Tik op "Alle services".
4. Selecteer in het menu "Verbonden apparaten & delen" de optie "Apparaten".
5. Schakel "Zoeken naar apparaten" in de buurt.
6. Dit apparaat verschijnt nu in de lijst met beschikbare apparaten in de buurt.
7. Tik op het apparaat en volg de instructies op het scherm om de verbinding te voltooien.

Overige functies instellingen:

1. **Verloren-modus inschakelen**
Open de "Google™ Find My Device"-app, selecteer dit apparaat en tik op "Markeren als verloren" om de verloren-modus in te schakelen.
Voor vervolgins om contactgegevens in u wordt geïnformeerd zodra het apparaat wordt gevonden via het Google™ Find My Device-netwerk.
2. **Locatie delen**
Open de "Google™ Find My Device"-app, selecteer dit apparaat en tik op "Apparaat delen".
3. **Dit apparaat koppelen aan andere Android-apparaten**
Om dit apparaat te verwijderen van het gekoppelde Android-apparaat, moet u het eerst resetten. Na het voltooiën van dit proces kunt u het apparaat opnieuw starten en opnieuw koppelen aan een ander Android-apparaat.

Product handleiding

Over Batterijgebruik en -verwijdering

Onze producten bevatten verschillende soorten batterijen (bijv. knooppellen of oploadbare batterijen) afgestemd op ontwerp, gebruik en behoeften; raadpleeg de specificaties vooraf. Sommige producten bevatten knooppattertijen — bewaar ze veilig om te voorkomen dat kinderen ze kunnen bereiken, demanteren of inslikken; zoek onmiddellijk medische hulp als ze worden ingeslikt. Voor vervangbare batterijen: gebruik geschikt gereedschap voor zorgvuldig verwijderen, zorg voor de juiste polariteit en bewaar de handling als referentie. Wij geven prioriteit aan milieubescherming en circulaire economieprincipes. Verwijder gebruikte batterijen en verpakking verantwoord volgens de lokale regelgeving (bijv. EU-WEEE-richtlijn) om afval te voorkomen en de CO₂-uitstoot en vervuiling te verminderen. Gebruik gecertificeerde recyclingfaciliteiten om duurzaamheid te ondersteunen. Neem contact op met onze ondersteuning voor hulp. Wij zijn niet aansprakelijk voor problemen door onjuiste verwijdering.



Waarschuwing: Niet inslikken! Batterij kan chemische brandwonden veroorzaken.

Verstikkingsgevaar

Dit apparaat kan een knooppellenbatterij bevatten. Houd batterijen uit de buurt van kinderen. Slik geen batterij in; als deze wordt ingeslikt of in het lichaam terechtraakt, zoek dan onmiddellijk medische hulp.

Inslikken kan binnen twee uur ernstige chemische brandwonden veroorzaken en leiden tot ernstig letsel of de dood.

Als het batterijcompartiment niet veilig sluit, stop dan met het gebruik van het apparaat en houd het uit de buurt van kinderen.

Dit apparaat, het batterijvakdeurtje of de batterijbehuizing kan verstikkingsgevaar of ander letsel veroorzaken bij kinderen. Houd deze onderdelen uit de buurt van kinderen.



GPS-tracker

Product manual

Product manual

Verify position and trajectory

1. When this device is left behind and is no longer within range of your Android device, you will receive a pop-up notification on your Android screen.
2. When this device is outside your view but nearby: Open the Find My Device app, find the paired device in the list, and tap Play Sound to make it emit a sound signal. Follow the sound to locate the device and tap Stop Sound once you have found it.
3. Remote localization

Open the Find My Device app, navigate through the list, and select this device by scrolling or tapping. After selecting, the screen will show a map displaying the device's current location (if online) or the last known location (if offline). The map automatically adjusts its scale so you can focus on the area where the device is located and will show a marker.

Location updates are displayed in real time when the device is within range of the Find My Device network (e.g., when other Android devices nearby support location updates). If the location has not been updated, the screen shows: "Last updated X minutes ago."

Tap the Navigation or Directions icon on the map. The app will then open Google™ Maps to give you detailed directions to the location of your property.

Over Google™ Find My Device

This product utilizes the Google™ Find My Device network and the Android ecosystem to locate objects. It uses crowdsourced data from nearby Android devices to display real-time or last known locations. Google™ and Find My Device are registered trademarks of Google™ LLC, protected by intellectual property rights and may not be used without permission. In accordance with Google's privacy guidelines, user location data is encrypted and used solely for locating purposes. This data is not shared with third parties. We strongly caution: this product is intended solely for the lawful tracking of objects; tracking individuals is strictly prohibited and may violate the law. The user is fully responsible for proper use. Regularly check the device's status and settings to maintain privacy. For more information, visit findmydevice.google.com. We are not liable for issues arising from misuse or failure to comply with Google's terms and conditions.

Product manual

Index

1. Before you begin.
2. Getting started.
3. Quick pairing method.
4. Manual pairing.
5. Verify position and trajectory.
6. About Google™ Find My Device.
7. FCC statement.
8. About battery usage and disposal.

Before you begin

This device is a smart tracker that uses Google's Find My Device service, linked to the "Google™ Find My Device" app on your Android device, to quickly and securely locate your personal items through Google™ Maps. All location information remains private, and even Google™ cannot access it.

1. This device only supports the "Google™ Find My Device" app. Make sure to download and install the latest version of the "Find My Device" app from the Google™ Play Store.
 2. This device is only compatible with Android devices running Android 9 or higher.
- Ensure that Bluetooth and location services are enabled on your Android device.

Let's get started

1. **Turning On** Press the power button once to turn on the device.
2. **Turning Off** Press the power button twice quickly and hold it on the third press until you hear the shutdown sound.
3. **Checking the Device Status** Press the power button twice quickly. When you hear a confirmation sound, it means the device has been successfully activated and is in normal operating mode.
4. **Performing a Factory Reset** Press the power button four times quickly and hold it on the fifth press until you hear the reset sound.

Product manual

FCC declaration

1. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.



Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This device generates and can emit radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception—which can be determined by turning the device on and off—the user is encouraged to correct the interference by taking one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the device and the receiver.
- Connect the device to an outlet or a different circuit than the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Product manual

Quick coupling method

1. Press and hold the power button for about 3 seconds to activate the device.
2. Bring the activated device close to your Android device.
3. A pop-up will appear on your screen; tap "Connect."
4. Follow the on-screen instructions and tap "Agree and continue."
5. Then tap "Done" to complete the pairing and connection.
6. Open the "Google™ Find My Device" app and select this device to adjust the name and category.

"Manually connect"

If you missed the quick pairing pop-up, you can set up the device manually.

1. Open the "Settings."
2. Go to "Google™."
3. Tap on "All services."
4. In the menu "Connected devices & sharing," select the "Devices" option.
5. Enable "Nearby device scanning."
6. This device will now appear in the list of available nearby devices.
7. Tap on the device and follow the on-screen instructions to complete the connection.

Other functions settings:

1. Enable Lost Mode

Open the "Google™ Find My Device" app, select this device, and tap on "Mark as lost" to enable lost mode. Then enter your contact details; you will be notified once the device is found via the Google™ Find My Device network.

2. Share location

Open the "Google™ Find My Device" app, select this device, and tap "Share device."

3. Connect this device to other Android devices

To remove this device from the paired Android device, you must first reset it. After completing this process, you can restart the device and pair it with another Android device.

Product manual

About Battery Use and Disposal

Our products contain various types of batteries (e.g., button cells or rechargeable batteries) tailored to design, usage, and needs; consult the specifications beforehand.

Some products contain button batteries – store them safely to prevent children from accessing, removing, or swallowing them; seek immediate medical attention if they are swallowed.

For replaceable batteries: use appropriate tools to carefully remove them, ensure correct polarity, and keep the manual as a reference. We prioritize environmental protection and circular economy principles. Dispose of used batteries and packaging responsibly according to local regulations (e.g., EU WEEE directive) to prevent waste, reduce CO₂ emissions, and limit pollution. Use certified recycling facilities to support sustainability.

Contact our support team for assistance. We are not responsible for issues caused by improper disposal.



Warning: Do not ingest! Battery can cause chemical burns.

Risk of swallowing

This device may contain a button cell battery. Keep batteries out of reach of children. If any battery is swallowed, or if it enters the body in any way, seek immediate medical attention. Ingestion can cause severe chemical burns within two hours and may result in serious injury or death.

If the battery compartment does not close securely, stop using the device and keep it out of reach of children.

This device, the battery cover, or the battery housing may present a choking hazard or cause other injuries to children. Keep these parts out of reach of children.