




## Gebruikershandleiding FOXLY® LED wekker X89

Lees de instructies voor gebruik

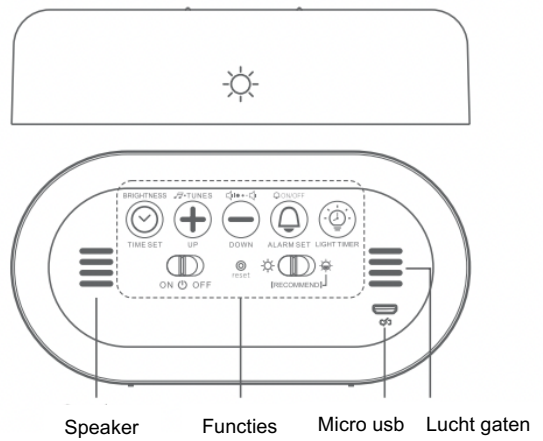

- Eerst volledig opladen voor gebruik. Gebruik alleen een 5V 1A of 5V adapter om de wekker op te laden. Gebruik geen adapter met een hogere voltage.

### 0 Aan-/uitzetten

Klik op de "ON" knop om de wekker aan te zetten.

### ⚙️ Tijd instellingen

Houdt "TIME SET" knop ingedrukt voor 3 seconden, de "12HR/24HR" begint te knipperen. Kies uw voorkeur.

Druk "TIME SET" knop, het "uur" icon knippert, druk "+" of "-" om het uur te wijzigen.

Druk "TIME SET" knop, het "minute" icon knippert, druk "+" of "-" om de minuten te wijzigen.

Druk "TIME SET" knop, het "year" icon knippert, Druk "\*" of "-" om het jaartal te wijzigen.

Druk "TIME SET" knop, het "month" icon knippert, druk "+" of "-" om de maand te wijzigen.

Druk "TIME SET" knop, de "date" icon knippert, druk "+" of "-" om de datum te wijzigen.

Druk "TIME SET" knop nog eens om "tijd instellen" te beëindigen.

- Tip: Let erop dat u kijkt of de AM/PM setting juist staat voordat u de "TIME SET" knop indrukt om het 12/24 uur systeem te wijzigen. AM of PM functioneert anders niet.

### Q 2 Alarm instellingen

Druk "ALARM SET" knop voor 3 seconden in om menu van alarm 1 in te komen.

Het "hour" icon knippert, druk "+" of "-" om uur te wijzigen.

Druk "ALARM SET" knop opnieuw, het "minute" icon knippert

druk "+" of "-" om minuten te wijzigen;

Druk "ALARM SET" knop om dag instellingen menu in te komen.;

Druk "+" of "-" om "alarm" dagen te selecteren.

Druk "ALARM SET" knop opnieuw om alarm 1 geluid te wijzigen,

kies i QFOSS "OF—" "IO SOIOct a FINC|ONC' TOF DUFF0 1.

- Druk "ALARM SET" knop opnieuw om menu van alarm 2 in te komen, het "hour" icon knippert, druk "+" of "-" om het uur te wijzigen.
- Druk "ALARM SET" knop opnieuw, het "minute" icon knippert druk "+" of "-" om minuten te wijzigen;
- Druk "ALARM SET" knop om dag instellingen menu in te komen. ; Druk "+" of "-" om "alarm" dagen te selecteren.
- Druk "ALARM SET" knop opnieuw om alarm 1 geluid te wijzigen, kies i QFOSS "OF—" "IO SOIOct a FINC|ONC' TOF DUFF0 1.

### Alarm dag:

1-7 maandag tot zondag	1-1 1 dag alarm
1-5 maandag tot vrijdag	1-6 maandag tot zaterdag

### Snooze bediening

Wanneer het alarm afgaat, druk op de knop boven op de wekker, de wekker gaat weer af na 5 minuten. Druk op een andere knop om het alarm volledig uit te zetten.

### 12/24 uren mode

Druk de "TIME SET" knop voor 3 seconden, het "2HR/24HR" knippert, druk "+" of "-" om 2/24 uur format te wijzigen.

### Muziek mode

Druk "TUNES" knop om muziek af te spelen en muziek te wijzigen.

### ⚙️ Volume instellingen

Druk " " knop om volume te wijzigen (5 levels volume) en druk op een knop op de achterkant om instelling te beëindigen.

### ⚙️ Helderheid aanpassen

Druk de "TIME SET" knop om helderheid te verhogen (5 levels helderheid)

### ⚙️ Always-on display | Energiezuinige modus

Wijzig naar de "always-on mode", het scherm blijft aan;

Wijzig naar de "energiezuinige modus", hetscherm gaat uit na 8 seconden;

### Nachtlamp

Druk op de bovenste knop [- -] om nachtlamp aan/uit te zetten. Houdt de knop ingedrukt om het licht aan te passen. Elke keer wanneer de lamp opnieuw wordt aangezet gaat deze aan in de laatstgekozen stand.

### 0 Light Timer aan/uit

Het is ook mogelijk de nachtlamp vanzelf uit te laten gaan middels ene timer. Pas eenvoudig de timer tijd van de lamp vanzelf uitgaat na een bepaalde periode

### 0 Reset

Druk op de reset button wanneer de wekker vastloopt of trager is.

### Q Batterij leeg melding/opladen

Wanneer de accu bijna leeg is wordt het batterij icoon weergegeven. Het is dan niet mogelijk om muziek af te spelen. Laad de wekker op met behulp van de USB-kabel. Tijdens het opladen wordt het icoontje getoond, wanneer deze vol is verdwijnt dit icoon.


### ♻️ Milieu protectie

- Waarschuwing: Ga niet zelf sleutelen aan het product. Dit kan schade veroorzaken aan het product en aan personen.
- Wanneer u het product niet meer gebruikt, breng dit dan naar het dichtstbijzijnde inzamelpunt voor elektrische apparaten.



## User manual FOXLY® LED wekker X89

Read before use

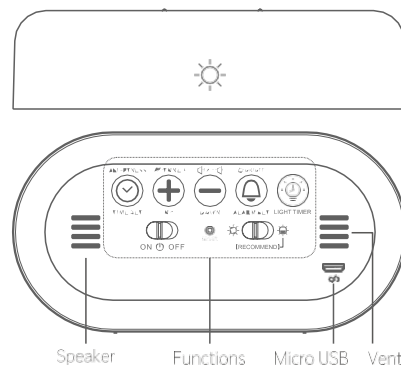

- Simple outlook and high definition LED display
- Low power design without external power supply
- 18 high quality music for appreciation and use by ringtone
- Night light/Alarm clock
- 2 sets individual alarm clock switch
- Volume setting

■ Please fully charge this product before first use. Please only use 5V 1A or 5V to charge this product, and do not use the adapter with a higher power to charge.

- Power on**

Switch on the "ON" button to start the alarm clock.
- Time setting**

Hold "TIME SET" button for 3 seconds, the "12HR/24HR" will flicker, (the 12-hour system is the default format), press "+" or "-" to switch 12/24 hours system mode; (It is recommended to set the time in the 24 hour format);  
 Press "TIME SET" button, the "hour" icon will flicker, press "+" or "-" to adjust the hour;  
 Press "TIME SET" button, the "minute" icon will flicker, press "+" or "-" to adjust the minute;  
 Press "TIME SET" button, the "year" icon will flicker, press "+" or "-" to adjust the year;  
 Press "TIME SET" button, the "month" icon will flicker, press "+" or "-" to adjust the month;  
 Press "TIME SET" button, the "date" icon will flicker, press "+" or "-" to adjust the date;  
 Press "TIME SET" button again to end the time setting.

- Note: Please pay attention to whether the AM/PM setting is correct before setting the time. Press the "TIME SET" button to switch 12/24 hours system mode. In 12 hours mode, "AM" or "PM" will be displayed.

### 2 alarm settings

Press "ALARM SET" button for 3 seconds to enter alarm 1 setting, the "hour" icon will flicker, press "+" or "-" to adjust the hour;  
 Press "ALARM SET" button again, the "minute" icon will flicker; press "+" or "-" to adjust the minute;  
 Press "ALARM SET" button again to enter the alarm days setting; press "+" or "-" to select the alarm days;  
 Press "ALARM SET" button again to enter alarm 1 ringtone select; press "+" or "-" to select a ringtone for alarm 1.

- Note: setting alarm 1 the "🔔" will flicker.

- Press "ALARM SET" button again to enter the alarm 2 setting, the "hour" icon will flicker, press "+" or "-" to adjust the hour;  
 Press "ALARM SET" button again, the "minute" icon will flicker; press "+" or "-" to adjust the minute;  
 Press "ALARM SET" button again to enter the alarm days setting; press "+" or "-" to select the alarm days;  
 Press "ALARM SET" button again to enter alarm 2 ringtone select; press "+" or "-" to select a ringtone for alarm 2;

- Note: setting alarm 2 the "🔔" will flicker. Please pay attention to whether the AM/PM setting is correct.

### Alarm day:

1-7 Monday to Sunday	1-1 1 day alarm
1-5 Monday to Friday	1-6 Monday to Saturday

### Alarm switch

Press "ALARM SET" button can turn on or off 2 alarms. When the alarm is on, the 🔔/🔔 icon will display; the alarm is off, 🔔/🔔 icon will not display. When the alarm is ringing the alarm icon will flicker and the alarm will last for 2 minutes, press any button at the back to turn off the alarm, press the SNOOZE button on the top can enter the snooze.

### Snooze setting

During the alarm is ringing, press the button on the top can enter the snooze and the alarm 🔔/🔔 icon will flicker, the alarm will be ringing after 5 minutes; press any button back of the clock can turn off the alarm.

### 12/24 hours mode

Hold the "TIME SET" button for 3 second, the "12HR/24HR" will flicker, press "+" or "-" to switch 12/24 hour format.

### Music mode

Press "TUNES" button to play and switch music and can be last for 5 minutes.

### Volume setting

Press "🔊" button to adjust the volume (5 levels of volume) and press any button on the back to end the setting.

### Adjust the brightness

Press the "TIME SET" to adjust the brightness (5 levels of brightness).

### Always-on display | energy saving mode

Switch to the "always-on mode [🔔]", the display keeps on;  
 Switch to the "energy saving mode [🔔]", will be off after 8 seconds; After entering the energy saving mode, touch the top button to wake up the display.

Note: It is recommended the energy saving mode while using this product without the plug-in.

### Night light

Press top button [🔆] can turn on or off the night light. Hold the button can change the light, every time the night light is turned on, the system will automatically remember the brightness of the last time the night light was turned off.

### Light Timer ON or OFF

In normal time, press "LIGHT TIMER" button can turn on or off Light Timer, when the "LIGHT TIMER" turn on will display "🕒" icon, the "LIGHT TIMER" off will not display "🕒". Hold "LIGHT TIMER" button, the "🕒" and "5" will flicker (the default for 5 minutes), press "+" or "-" choose the required night light off time, choose the duration 5-120 minutes. After choosing the duration, press "LIGHT TIMER" button again enter the time display. Make sure LIGHT TIMER whether on or not (display the icon "🕒" is on).

- Note: When LIGHT TIMER is on, press the top button or LIGHT TIMER button can off the LIGHT TIMER

### Reset

If the system down, display abnormally, or the button is out of control, please press the reset button to reset the product.

### Low battery warning indicator

If the low power icon is displayed/music cannot play in whole/alarm ringtone is intermittent/display flickers abnormally, please charge the product by the USB cable. During the charging period, the icon will be displayed, after full charging, the icon will be off.

- Note: When the battery voltage is lower than 3.3V, the indicator light will flicker, when it is lower than 3V, the display and all functions are turned off, only the time is reserved.

### Environment protection

The electronic product should be disposed of according to the related laws and regulations, please take the broken product to the nearest collecting point for disposal.

- Warning: Please do not disassembly the product by yourself! Change the wrong battery might cause an explosion hazard!