

EN

Installing the batteries

The console requires a set of 3 AAA alkaline batteries. To insert the batteries, open the "battery door" and install the batteries with the positive (+) and negative (-) ends as shown in the battery compartment. Reinstall the "battery door".

Battery cautions

IMPORTANT: Only adults should (re)place batteries.

- Do not attempt to recharge non-rechargeable batteries.
- Insert batteries as marked and always follow the toy's and battery manufacturer's instructions.
- Use only the same or equivalent type of battery as recommended.
- Do not short-circuit the supply terminals.
- Do not mix old and new batteries.
- Do not mix different types of batteries, such as alkaline, standard (carbon-zinc), rechargeable (nickel-cadmium).
- Always remove exhausted or dead batteries from the toy.

Remove batteries from the product before extended storage.

Trouble Shooting

No picture on the LCD screen

1. Is the Game Console turned on?
2. Are the batteries properly installed?
3. Check if the batteries are flat and need replacing.

No game sound

1. Is the volume control too low, or off?

The picture on the LCD screen is too dark

1. Check if the batteries are flat and need replacing.

Fringes appear on LCD screen during broadcast or the displayed picture is blinking or distorted

1. Check if the batteries are flat and need replacing.
2. Try pushing the reset button.
3. Switch the Game Console off and try again.

NL

De batterijen installeren

Het apparaat vereist 3 Alkaline AAA-batterijen. Om de batterijen te plaatsen, opent u de batterijklep en installeert u de batterijen met de positieve (+) en negatieve (-) uiteinden zoals getoond in het batterijvak. Herplaats de batterijklep.

Waarschuwingen m.b.t. de batterijen

BELANGRIJK: Alleen volwassenen mogen batterijen vervangen.

- Probeer niet-oplaadbare batterijen niet op te laden.
- Plaats de batterijen zoals aangegeven en volg altijd de instructies van het speelgoed en de batterijfabrikant.
- Gebruik alleen hetzelfde of een gelijkwaardig type batterij zoals aanbevolen.
- Vermijd kortsluiting.
- Gebruik geen oude en nieuwe batterijen door elkaar.
- Meng geen verschillende soorten batterijen, zoals alkaline, standaard (koolstof-zink) en oplaadbaar (nikkel-cadmium).

Verwijder lege batterijen altijd uit het speelgoed en verwijder alle batterijen wanneer u het product langdurig opbergt.

Problemen oplossen

Geen beeld op het LCD-scherm

1. Is de gameconsole ingeschakeld?
2. Zijn de batterijen correct geïnstalleerd?
3. Controleer of de batterijen leeg zijn en moeten worden vervangen.

Geen spelgeluid

1. Is de volumeregeling te laag of uitgeschakeld?

Het beeld op het LCD-scherm is te donker

1. Controleer of de batterijen leeg zijn en moeten worden vervangen.

Het beeld op het LCD-scherm knippert of is vervormd

1. Controleer of de batterijen leeg zijn en moeten worden vervangen.
2. Probeer de resetknop in te drukken.
3. Schakel de gameconsole uit en probeer het opnieuw


SILVERGEAR
www.silvergear.eu



Overschiestraat 63
1062 XD Amsterdam
The Netherlands
info@silvergear.eu

MADE IN CHINA

Art. no. 1025 / Batch no: 22309

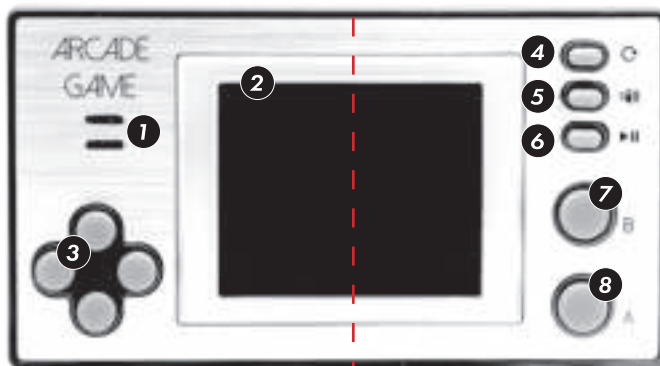

- | | |
|------------------|-------------|
| 1. Speaker | 5. Volume |
| 2. LCDscreen | 6. Start |
| 3. Direction pad | 7. Button B |
| 4. Reset | 8. Button A |

Specifications

Dimension	150 x 80 x 25 mm
Weight	45.5 gr
LDC	High resolution LTPS 1,8"
Power supply	3x AAA (not included)

Specificaties

Afmetingen	150 x 80 x 25 mm
Gewicht	45.5 gr
LDC	Hoge resolutie LTPS 1,8"
Voeding	3x AAA (niet inbegrepen)

SILVERGEAR

ARCADE GAME
PORTABLE CONSOLE



150+
GAMES