

90.00 mm

140.00 mm



### Electric Shaver Instruction Manual (Dutch and English)



#### Gebruiksaanwijzing

1. Beschermhoes
2. Hoofddekse
3. Hoofd cover release knop
4. Schakelaar knop
5. LED-display
6. vast frame
7. Mes net
8. Tempel mes
9. Sideburn drukknop
10. voedingsadapter
11. Reinigingsborstel
12. Instructie voor gebruik




#### Voorzorgsmaatregelen

**Waarschuwing:** Na het scheiden van het Händel-gedeelte van het netsnoer kan het Händel-gedeelte in water worden gereinigd.

**Notitie**

1. Houd de lichtnetadapter droog. Het is verboden om de stekker van de voedingsadapter met natte handen te trekken of aan te sluiten om elektrische schokken te voorkomen.
2. Zorg ervoor dat de spanning die op de voedingsadapter is gemarkeerd, overeenkomt met de lokale voedingspanning.
3. Als het elektrische scheerapparaat beschadigd is, gebruik het dan snel. Behandel de fout op basis van het type fout en overhandig deze aan de onderhoudsafdeling van ons bedrijf voor reparatie desnoods.
4. Mensen (inclusief kinderen) die fysiek onduidelijk zijn en geen relevante ervaring en kennis hebben (inclusief kinderen) moeten het gebruiken onder toezicht en begeleiding van hun voogden.
5. Wanneer u de voedingsadapter gebruikt, moet u de schaal van van de voedingsadapter stevig vastpakken en het is verboden om het netsnoer van de adapter krachtig te trekken.
6. Dit product kan alleen worden opgeladen met de bijpassende voedingsadapter. Gebruik geen accessoires die niet door ons bedrijf bij dit product zijn geleverd.
7. Het netsnoer van de adapter kan niet worden vervangen. Als het snoer beschadigd is, moet de lichtnetadapter worden weggegooid.
8. Controleer voor gebruik of het mesnet beschadigd of vervormd is, om uw huid niet te beschadigen.
9. Was het elektrische scheerapparaat met schoon water, maar laat het niet lang in water weken.
10. Gebruik geen zout water, heet water boven 60 °C, dunner, benzine, alcohol of andere chemicaliën om het elektrische scheerapparaat schoon te maken.
11. Zorg er tijdens het reizen voor dat u de beschermhoes op het elektrische scheerapparaat bedekt om het net van het elektrische scheerapparaat te beschermen.
12. Tijdens het gebruik en opladen zal het elektrische scheerapparaat enigszins opwarmen. Dit is een normaal fenomeen, wees gerust om het te gebruiken.
13. Laad het elektrische scheerapparaat lange tijd niet op.
14. Het wordt aanbevolen om het elektrische scheerapparaat op te laden, te gebruiken en op te slaan bij een temperatuur tussen 5°C en 35°C. Stel het niet bloot aan direct zonlicht of andere warmtebronnen Plaats om elektrische scheerapparaten op te slaan .

#### Aanwijzingen



#### Laden

1. Wanneer de spanningsingang van de lader te hoog is, blijft het uitroepen op het LED-display van het elektrische scheerapparaat knippen om aan te geven dat de ingangsspanning van het scheerapparaat te hoog is en het scheerapparaat niet wordt opgeladen (afbeelding 1)
2. Steek de stekker van de voedingsadapter in het elektrische scheerapparaat en houd deze aangesloten en steek vervolgens de stekker van de voedingsadapter in het stopcontact (afbeelding 2)
3. Wanneer de stroom is ingeschakeld, zal het display oplichten en zal de digitale stream aan en uit staan om aan te geven dat deze wordt opgeladen. Wanneer het overeenkomstige vermogen is bereikt, wordt het overeenkomstige power number staat altijd aan (afbeelding 3)
4. het kan volledig worden opgeladen na 1 uur continu opladen. Wanneer volledig opgeladen, staan de nummers 90 en AI vol altijd aan, wat betekent dat het scheerapparaat is opgeladen (figuur 4).

#### Uithoudingsvermogen

Het LED-display van dit product kan het resterende vermogen weergeven. Een volledig opgeladen elektrisch scheerapparaat kan tot ongeveer 90 minuten scheertijd bieden, maar de scheertijd kan korter zijn dan verwacht vanwege verschillen in scheergewoonten, schoonmaakgewoonten en baardtypen.

**!** Het elektrische scheerapparaat kan alleen worden opgeladen met de bijpassende voedingsadapter; De elektrische scheerkracht kan direct scheren wanneer deze is aangesloten op de stroom adapter voor opladen.

#### Smart display-inhoud

1. Wanneer de belasting van het elektrische mes te groot is, wordt het elektrische scheerapparaat automatisch uitgeschakeld en geeft het LED-display van het elektrische scheerapparaat aan dat het elektrische scheerapparaat is vergrendeld en beschermd (figuur 11)
2. Wanneer het elektrische scheerapparaat moet worden gereinigd, wordt het LED-display weergegeven van het elektrische scheerapparaat vraagt "gelieve schoon te maken" (figuur 12).

#### Waterspoeling schoon

1. Voordat u gaat reinigen, moet u het elektrische scheerapparaat van de voedingsadapter scheiden en de schakelknop in de uitstand drukken (figuur 13).
2. Druk op de ontspanknop van de hoofdklep om de hoofdklep te openen (figuur 14).
3. Het messennet kan direct onder de kraan worden gewassen (figuur 15). Het effect van wassen met warm water is beter. Gebruik geen heet water van meer dan 60C om te wassen.
4. Giet na het spoelen het overtollige water af, dus laat het op natuurlijke wijze drogen.

#### Winkel

Het wordt aanbevolen om het elektrische scheerapparaat eerst te drogen en te bedekken met een beschermhoes om schade aan het bladnet te voorkomen en ophoping van stof erin te voorkomen.

#### Vervang de snijkop


Om het beste scheereffect te verkrijgen, wordt de constructie van het bladnet om de twee jaar vervangen, zorg ervoor dat u het originele Hailang elektrische scheermesnet gebruikt.

#### Reïsslot



1. Druk lang op de aan/uit-knop van het elektrische scheerapparaat gedurende 3 seconden en het LED-display van het elektrische scheerapparaat geeft aan dat het veiligheidslock is vergrendeld (figuur 9).
2. Om te ontgrendelen, moet u de schakelaar 3 seconden ingedrukt houden terwijl het vergrendelingsymbool 3 keer knippert om het scheerapparaat te ontgrendelen en in te schakelen (figuur 10).

#### Verzorging en onderhoud



#### Dieptereiniging

1. Scheid het krachtnet en reinig het mesnet met een reinigingsborstel (Picture 18)
2. Installeer na het reinigen het mesnet en het bevestigingsframe in omgekeerde volgorde in de hoofdklep.

#### Onderhoud

1. Het wordt aanbevolen om het mesnet om de twee maanden schoon te maken. Druppel na het reinigen smerolie in het messennet en de voorrand van de tempel voor smering en onderhoud (figuur 19).
2. Regelmatige reiniging van het elektrische scheerapparaat kan zorgen voor betere scheerresultaten.

**!** Gebruik geen handdoeken of papieren handdoeken om het elektrische scheermesje net af te veegen, omdat dit het bladnet kan beschadigen.

**!** Milieubescherming: De ingebouwde oplaadbare batterij bevat stoffen die het milieu kunnen vervuilen. Voordat u het elektrische scheerapparaat weggooit, moet u de batterij verwijderen of het elektrische scheerapparaat naar een officieel aangewezen recyclingstation sturen om de batterij weg te gooien. U kunt ook gebruikte elektrische scheerapparaten naar het bedrijf sturen. De aangewezen onderhoudsafdeling zal de batterij demonteren en recyclen. De batterij verwijderen: Sluit de stroom af en laat het elektrische scheerapparaat draaien totdat de stroom op is. Schroef alle schroeven op het elektrische scheerapparaat los, gedemonteerd, de batterij wordt losgelaten.

#### User Manual



#### 1. Protective cover

#### 2. Head cover

#### 3. Head cover release button

#### 4. Switch button

#### 5. LED display

#### 6. Fixed frame

#### 7. Knife net

#### 8. Temple knife

#### 9. Sideburn push button

#### 10. Power adapter

#### 11. Cleaning brush

#### 12. Instruction for use




#### Precautions

**Warning:** After separating the Handel part from the power cord, the Handel part can be cleaned in water.

**Note**

1. Keep the power adapter dry. It is forbidden to pull or plug the power adapter plug with wet hands to prevent electric shock.
2. Please make sure that the voltage marked on the power adapter matches the local power voltage.
3. If the electric shaver is damaged, please use it in a hurry. Please deal with the fault according to the type of fault, and hand it over to the maintenance department of our company for repair if necessary.
4. People (including children) who are physically unsound men tall disabled, and lack relevant experience and knowledge (including children) must use it under the supervision and guidance of their guardians.
5. When using the power adapter, please grasp the shell of the power adapter tightly, and it is forbidden to pull the power adapter cord forcefully.
6. This product can only be charged with the matching power adapter. Do not use any accessories not provided by our company with this product.
7. The power adapter cord cannot be replaced. If the cord is damaged, the power adapter should be discarded.
8. Please check whether the knife net is damaged or deformed before use, so as not to damage your skin.
9. Please wash the electric shaver with clean water, but do not soak in water for a long time.
10. Do not use salt water, hot water above 60°C, thinner, gasoline, alcohol or other chemicals to clean the electric shaver.
11. When traveling, make sure to cover the protective cover on the electric shaver to protect the electric shaver blade net.
12. During use and charging, the electric shaver will slightly heat up. This is a normal phenomenon, please rest assured to use it.
13. Please do not charge the electric shaver for a long time.
14. It is recommended to charge, use and store the electric shaver at a temperature between 5°C and 35°C. Do not expose it to direct sunlight or other heat sources Place to store electric shavers.

#### Instructions



#### Recharge


1. When the voltage input of the charger is too high, the exclamation mark on the LED display of the electric shaver will keep flashing to indicate that the input voltage of the shaver is too high and the shaver is not charging (Picture 1)
2. Insert the tail plug of the power adapter into the electric shaver and keep it connected, then insert the plug of the power adapter into the power socket (Picture 2)
3. When the power is turned on, the display will light up, and the digital stream will be on and off to indicate that it is charging. When the corresponding power is reached, the corresponding power number will be always on (image 3)
4. it can be fully charged after 1 hour of Continuous charging. When fully charged, the numbers 90 and Already full are always on, which means that the shaver has been charged (Figure 4).

#### Endurance

The LED display of this product can display the remaining power. A fully charged electric shaver can provide up to about 90 minutes of shaving time, but the shaving time may be shorter than expected due to differences in shaving habits, cleaning habits and beard types.

**!** The electric shaver can only be charged with the matching power adapter; The electric shaving power can directly shave when connected to the power adapter for charging.

#### Shaving




1. Press the switch button to turn on the electric shaver (Picture 5)
2. Let the electric razor blade net move on the skin against the growth direction of the beard and make a straight and round movement (Figure 6).
3. The hair on the neck can also be shaved (Picture 7)
4. Push the push button of the temple knife upwards to make the knife pop out, and can trim corners, moustache or beards (Figure 8).

#### Shave fished

Press the switch button again to turn off the electric shaver, and then close the protective cover to prevent damage to the blade net.

**!** Please don't shave when the knife net is damaged, so as not to damage your skin.


#### Travel lock

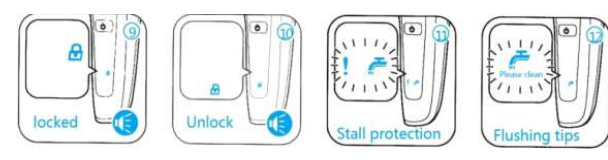

1. Long press the on/off button of the electric shaver for 3 seconds, and the LED display of the electric shaver indicates that the safety lock is locked (Figure 9).
2. To unlock, you need to press and hold the switch for 3 seconds while the lock symbol flashes 3 times to unlock and turn on the shaver (Figure 10).

#### Smart display content

1. When the load of the electric knife is too large, the electric shaver will automatically shut down, and the LED display of the electric shaver prompts that the electric shaver is locked and protected (Figure 11)
2. When the electric shaver needs to be cleaned, the LED display of the electric shaver prompts "please clean" (Figure 12).

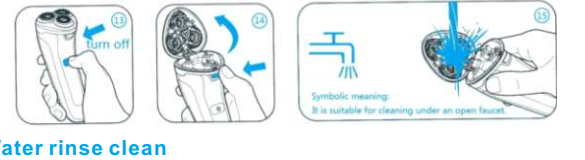

#### Water rinse clean

1. Before cleaning, you must separate the electric shaver from the power adapter and press the switch button to the off state (Figure 13).
2. Press the head cover release button to open the head cover (Figure 14).
3. The knife net can be washed directly under the faucet (Figure 15). The effect of washing with warm water is better. Do not use hot water over 60C for washing.
4. After rinsing, drain the excess water, so let it dry naturally.


#### Store

It is recommended to dry the electric shaver first and cover it with a protective cover to prevent damage to the blade net and avoid accumulation of dust in it.

#### Replace the cutter head

In order to obtain the best shaving effect, the construction of the blade net is replaced every two years, please be sure to use the original Hailang electric shaver blade net.

#### Care and maintenance

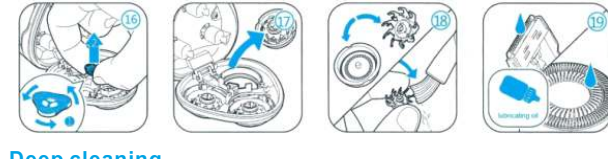

#### Deep cleaning

1. In the open head cover, turn the release button of the fixed frame counterclockwise to take out the fixed frame (Figure 16).
2. Take out the knife net
3. Separate the force net and clean the knife net with a cleaning brush (Picture 18)
4. After cleaning, install the knife net and fixing frame into the head cover in reverse order.

#### Maintenance

1. It is recommended to clean the knife net every two months. After cleaning, drip lubricating oil into the knife net and the front edge of the temple for lubrication and maintenance (Figure 19).
2. Regular cleaning of the electric shaver can ensure better shaving results.

**!** Do not use towels or paper towels to wipe the electric razor blade net, as this may damage the blade net

**!** Environmental protection: The built-in rechargeable battery contains substances that may pollute the environment. Before discarding the electric shaver, be sure to remove the battery or send the electric shaver to an officially designated recycling station to dispose of the battery. you can also send used electric shavers to the company The designated maintenance department will disassemble and recycle the battery. Remove the battery; Cut off the power and let the electric shaver run until the power is exhausted. Unscrew all the screws on the electric shaver. disassembled, the battery is released.

#### Product Specifications

**Product Model:** :160\*60\*60mm  
**Product Size:** :160\*60\*60mm  
**Rated voltage:** :100-240V~  
**Rate Frequency:** :50/60Hz  
**Rate input power:** :8W