

Operating instructions

IMPORTANT SAFEGUARDS
When using an electrical appliance, basic precautions should always be followed, including the points listed below. Read all instructions and safeguards before using the product.
DANGER
To reduce the risk of injury or death by electric shock:
1. Do not reach for an appliance that has fallen into water. Unplug immediately from the outlet.
2. Do not use while bathing in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place it in drop in water or other liquid.
4. Always unplug this appliance from the electrical outlet immediately after using.
5. Always store this appliance before charging.

WARNING
To reduce the risk of burns, fire, electric shock or injury to persons:
• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
Warning: Keep the Product Dry. It is essential to PREVENT electrical equipment from coming into contact with water or other liquids.
• Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
• If the power cord is damaged, it must be replaced by the manufacturer or authorized agent or similarly qualified person in order to avoid accidents.
• Keep the cord away from heated surfaces.
• Do not use outdoors or operate where aerosol (spray) cans are being used or where oxygen is being administered.
• Do not use this appliance with damaged or broken power cords with wires missing from the blades, as injury may occur.

UK appliance - If a 13 amp (BS 1363) plug is used, a 3 amp fuse must be fitted, or if any other type of plug is used, a 5 amp fuse must be fitted either in the plug or adapter at the distribution board. Replacement fuses should be ASTA approved to BS 1362. Fuse cover must be fitted when changing the fuse. If fuse cover is lost, the plug must be replaced until a replacement is obtained. Information for obtaining the correct fuse carrier is marked on the carrier itself and in the bottom of the fuse cavity on the plug. These are obtained from Wahl UK. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

SAVE THESE INSTRUCTIONS

This clipper has been designed for household use.
A- Bottom blade D- Switch
B- Blade slide (on Multi-cut (MC) clipper only) E- Top blade
C- Taper lever (on Multi-cut (MC) clipper only) F- Power screw

CLIPPER MAINTENANCE
Your Wahl clipper blades are oiled and aligned before leaving our factory; however, it is possible for blades to get bumped out of alignment. Blades must be realigned if they have been removed for cleaning or replacement. To determine if realignment is necessary, compare your clipper blades with diagram G.

- 1 If your clipper has a taper lever, position the taper lever in the close cut position. (H)
- 2 End of top blade teeth should be approximately 1/32" (41 mm) back from bottom blade. This is important so that the clipper does not cut too close or allow the moving cutter to touch the skin.
- 3 Extreme left-hand tooth of top blade must be covering or to the left of the first small tooth of bottom blade.
- 4 Extreme right-hand tooth of top blade must be touching the big tooth on the bottom blade.

If blade alignment is incorrect, add a few drops of Wahl Clipper Oil to the blades, turn clipper "On" for a few moments, turn "Off" and unplug. Loosen screws slightly and adjust (steps 2-4 listed above). Tighten screws after blades are aligned. Other than Wahl blades this clipper has no user serviceable parts. (diagram I)

OL (L)
The blades of your new clipper should be oiled every few haircuts. Simply place a few drops of Wahl Clipper Oil on the teeth of the blades. Use only the Wahl Clipper Oil included in the pack. Due to the high speed of your Wahl clipper, the correct type of oil must be used. Do not use hair oil, grease or any oil mixed with kerosene or any solvent, as they will evaporate and leave a thick oil, slowing down the blades. Wahl Clipper Oil is a very thin, natural oil which will not evaporate and will not slow down the blades.

POWER SCREW (Not found on all models of Wahl Clippers)
If your clipper has a power screw, it has been adjusted for peak efficiency before leaving the factory. However, if voltage in your home is low, you may need to readjust it.
To adjust power, use the plastic brush, a screwdriver or a thin coin to turn power screw in a clockwise direction until the motor is running smoothly. When done, turn slowly, turn power screw out (counterclockwise), just until you stop. This is the maximum power setting. (K)

CORD
The cord should not be used to pull the clipper. Since freedom of movement needs to be maintained, care should be used to keep the cord unobstructed and unobstructed. When stored, the cord should be coiled and the unit placed in a protective carrying case.
If your clipper has a polarized plug: To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug fits in a polarized outlet only one way. In the event the plug does not fit in the outlet, reverse the plug. In the event it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug (if provided).

TAPER LEVER (Not found on all models of Wahl Clippers)
If your clipper has an adjustable taper lever, it is conveniently located near your thumb (if you're right-handed), so it can easily be adjusted while the clipper is in your hand.
The taper lever allows versatility to your clipper by allowing you to gradually change the closeness of your cut without a guide comb. When the taper lever is in the uppermost position, the blades will give you the closest cut and leave the hair very short. (diagram H) Pushing the lever downward gradually increases the cutting length. In its lowest position, the taper lever will leave the hair approximately the same length as the 1/8" cutting guide. (diagram H)
The taper lever will also extend the use of your blades since a different cutting edge is used in each setting. In addition, it will allow heavy cutting on the blades, which will help you remove hair that has become wedged between the blades without removing the blades. While the clipper is running, rapidly move the lever from "close cut" to "longer cut" a couple of times. Doing this each time you've finished using your clipper will help keep the blades clear of cut hair. If your clipper is not cutting and this does not help, your cutting blades may be dull. Either replace them or return them to Wahl for sharpening.

WAHL'S GUIDE TO FOOLPROOF HOME HAIRCUTTING Before you cut your hair
1 Your clipper should be clean, oiled and in perfect working condition.
2 If your kit includes a plastic cape, place it around the neck, tying the straps and overlapping the cape portion to prevent hair from falling down into the collar. If no cape is provided, a towel will do nicely.
3 Position the hair to be cut in a stool or chair so that the top of the head is about even with your eyes.
4 After combing the hair to remove all tangles, hold the clipper in a relaxed, comfortable grip, with the nameplate under the palm near your index finger. This grip will help you maintain control, accurate cutting length.
NOTE: To attach guide combs, hold comb with the teeth up. Snap guide comb attachment firmly to the bottom of the clipper blade. (L)

Dependent on the kit you purchased your kit may include all of the following:
Adjustable Guide Combs - allowing multiple cutting lengths in the convenience of a single comb.
Individual Black Guide Combs - providing predetermined lengths indicated on each guide comb.
Individual Color Guide Combs - providing predetermined lengths indicated on each guide comb. Combs are also color coded for quick cutting length reference.

Using adjustable guide comb has five settings from 1/8" to 5/8" (3mm to 16mm) in 1/8" (3mm) increments. (M)
Large adjustable guide comb has five settings from 3/4" to 1-1/4" (19mm to 31mm) in 1/8" (3mm) increments. (N)

Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have the same markings and indicators that show position number and cutting length in millimeters for quick and easy setting identification.
The large adjustable guide comb can be used from the ear to the crown of the head. (O)
The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Individual (black or colored) guide combs:
To use individual guide combs, hold the comb with the teeth up. When doing so, slowly move the clipper over the head and sides may be all that is needed to bring back that well-groomed look. Additional accessories not listed here may be available from your dealer or can be ordered directly from Wahl.
INDIVIDUAL GUIDE COMB LISTING:


• 3mm - Black/Dark Blue	• 6mm - Black/Purple
• 10mm - Black/Orange	• 13mm - Black/Orange/Pink
• 15mm - Black/Light Blue	• 22mm - Black/Green
• 25mm - Black/Light Blue	• 31mm - Black/White
• 35mm - Black/White	• Left Ear Taper - Black only

CUTTING FOR MEDIUM TO LONG CUTS: (P)
The first time you cut the hair, cut only a small amount until you become accustomed to how long each guide comb leaves the hair. Always start by placing the largest guide comb on the clipper, then use shorter combs (or settings - if using adjustable guide combs) if a shorter length is desired.
Remember, between professional haircuts, the hair grows evenly all over the head and a light trimming at the lower neck and sides may be all that is needed to bring back that well-groomed look.
To start cutting, unfold the clipper to cut its way through the hair. Do not force it through at a faster rate.
1 Begin by combing the hair so it falls into its natural direction.
2 Place the largest guide comb on the clipper and start by trimming the sides from the bottom upwards. Hold the clipper lightly against the hair, with the teeth of the guide comb pointing up but flat against the head. Slowly lift the clipper up and outward through the hair, cutting only a small amount at a time.
Repeat around sides and back of head.
If you desire shorter hair, either change to a shorter guide comb (or setting - if using adjustable guide combs) or apply more pressure and, less lift away from the head with the present attachment.
This entire procedure repeats practice, and it is always better to leave too much hair than the first few haircuts.
For the top of the head, you may use a fairly short cut if you use the 1" guide comb (if your kit includes the 1-1/4" or 1-1/2" guide combs, you may use this for a slightly longer cut). With the teeth flat against the head, slowly start trimming from the front to the back and then to leave the hair longer the first few haircuts.

FOR LONGER HAIR ON TOP:
By not using a guide comb, a longer cut can be achieved. Use either a barber comb or a regular comb and lift the hair on top of the head, cutting over the comb, or grasp the hair between the fingers and cut to desired length. Continue this procedure from the front to the back of the head, gradually cutting the hair shorter by reducing the space between the comb and the hair. Comb frequently to remove trimmed hair and check for uneven strands.
TAPERING AROUND EARS:
USING LEFT AND RIGHT EAR GUIDE COMBS
The Left and Right Ear Guide Combs have a built in taper ranging from 1/8" to 1/2". By following the outline of the ear with the appropriate comb you achieve a gradual taper and blending without having to use multiple combs.
TO TAPER THE AREA BORDERING THE LEAF EAR:
Attach the Left Ear Taper comb to your clipper and stand facing the left ear. While holding the clipper at a slight angle against the head, position the guide comb just back of the left ear at the hairline. Then move the clipper in a small circle pattern around the left ear toward the front of the head. Depending on the length of hair you are working with you may need to take several small strokes as you proceed around the ear. When doing so, slowly move the clipper upward and outward being mindful of the ear. This will allow you to guide hair into the comb towards the clipper blades.
NOTE: You may also achieve a tapering of sideburns by including the sideburn area as you begin to move the clipper around the ear.
TO TAPER THE AREA BORDERING THE RIGHT EAR:
Attach the Right Ear Guide Comb to your clipper. Stand facing the right ear and repeat the process described above for the left ear.
Finish by outlining the area around the ear as described in the following section.

OUTLINING: (Q)
No attachments are needed. (On a multi-cut clipper, push the taper lever up to the "close-cut" position.) Comb hair into desired style. Stand behind the ear and the sideburn as shown at left. Hold clipper with corner edge of blade against the hairline. Slowly follow the desired outline of the hair over, around and behind the ears. For defining sideburns and the back of the neck, hold the clipper upside down, against the skin at the desired length and move down. Comb hair and check that sides are even. Check for uneven spots throughout the haircut.
CREW CUTS AND SHORT CUTS: (R)
Starting with the longest guide comb, cut from the back of the neck to the crown. Hold the guide comb flat against the head and slowly move the clipper through the hair, as shown.
Use the same procedure from the lower side to the upper side of the head, as shown. Then cut the hair against the direction in which it grows. From the front to the crown, and even on the cut with guide combs.
To give a "flat-top" look, the hair on top of the head must be cut over the top of the guide comb, rather than using the guide comb.
Use closer-cutting guide combs to "taper" the hair down to the neckline, as desired. Comb hair and check for uneven spots. Outline sideburns and neckline as previously described.
If a short tapered cut on the sides and back is desired, follow diagram S.
The five basic areas illustrated on the Wahl haircutting guide are your "road map" to easy, do-it-yourself haircutting. For tips on the latest trends and fashions in haircutting, visit us at www.wahl.com.

If you reside within the EU and your unit is marked with the following symbol, do not discard in trash. This product is to be returned to the appropriate municipal waste collection facility for recycling and recovery.

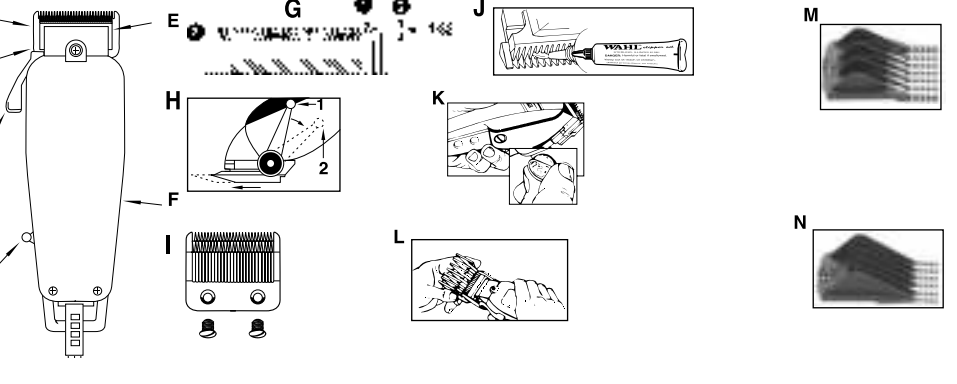

WICHTIGE SICHERHEITSHINWEISE
Beim Gebrauch eines Elektrogerätes sollten immer grundlegende Vorsichtsmaßnahmen beachtet werden, insbesondere die im Folgenden aufgeführten. Lesen Sie die Anweisungen und Sicherheitsbeisehe sorgfältig durch.
GEFÄHR
Vermeiden Sie das Risiko einer Verletzung oder des Todes durch einen elektrischen Schlag.
1. Greifen Sie nicht nach innen ins Wasser getauchte Geräte. Ziehen Sie sofort den Stecker aus der Steckdose.
2. Verwenden Sie das Gerät nicht in der Badewanne oder unter der Dusche.
3. Platzieren Sie das Gerät niemals in einer Wanne oder unter der Dusche, wenn es eine Wanne füllt oder gezeugen werden könnte. Tauchen Sie das Gerät nicht in Wasser oder andere Flüssigkeiten und lassen Sie es nicht dort hängen fallen.
4. Ziehen Sie, außer wenn Sie das Gerät aufladen, nach jedem Gebrauch den Stecker des Gerätes aus der Steckdose.
5. Ziehen Sie vor dem Reinigen des Gerätes immer den Stecker aus der Steckdose.

WARNING
To Reduce the Risk of Personal Injury, Death, Strangulation and Intoxication:
• Dieses Gerät kann von Jugendlichen ab 8 Jahren und Personen mit eingeschränkter physischer, sensorischer oder geistiger Fähigkeiten oder Personen mit mangelnder Erfahrung und Wissen verwendet werden, solange dies unter Beaufsichtigung erfolgt oder sie die notwendige Anleitung zum sicheren Umgang mit diesem Gerät erhalten haben und über die damit verbundenen Gefahren aufgeklärt werden. Das Gerät darf von Kindern nicht als Spielzeug verwendet werden. Reinigung und Wartung dürfen von Kindern nur unter angemessener Aufsicht durchgeführt werden.
• Warnung: Halten Sie das Gerät trocken. Es ist äußerst wichtig zu VERHINDERN, dass Elektrogeräte in Kontakt mit Wasser oder anderen Flüssigkeiten kommen.
• Verwenden Sie dieses Gerät ausschließlich zum vorgesehenen und in dieser Gebrauchsanweisung beschriebenen Zweck. Verwenden Sie ausschließlich vom Hersteller empfohlene Zubehör.
• Schneiden Sie ausschließlich das Kabel des Ladegerätes in die entsprechende Buchse des Gerätes an.
• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Sauerstoff verwendet werden.
• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an. Um das Gerät vom Stromnetz zu trennen, schalten Sie sie zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

HEBEN SIE DIESE ANLEITUNG SORGFÄLTIG AUF
Diese Haarschneidemaschine ist für den privaten Gebrauch bestimmt.
A- Untere Klinge D- Schalter
B- Klingeneinrichtung (nur bei Multi-Cut-Haarschneidemaschinen (MC)) E- Obere Klinge
C- Schnittlänge regler (nur bei Multi-Cut-Haarschneidemaschinen (MC)) F- Schraube für Leistungswahl

WARTUNG DER HAARSCHNEIDEMASCHINE
Die Klippen der Haarschneidemaschine von Wahl sind wasserkalig geölt und ausgerichtet worden. Dennoch kann es vorkommen, dass die Ausrichtung der Klippen nicht mehr stimmt und eine Neuausrichtung erforderlich wird. Klippen müssen neu ausgerichtet werden, wenn sie für Reinigungs- oder Austausch Zwecke entnommen worden sind. Um festzustellen, ob eine Neuausrichtung erforderlich ist, vergleichen Sie die Klippen Ihrer Haarschneidemaschine mit dieser Zeichnung (G).

- 1 Wenn die Haarschneidemaschine mit einem Schnittlänge regler ausgerüstet ist, stellen Sie diesen in der Schließposition ein.
- 2 Das Ende der oberen Klinge sollte etwa 0,64 mm (1/32") hinter der unteren Klinge zurückstecken. (Dies ist wichtig, damit die Haarschneidemaschine nicht zu kurz schneidet und damit der Schneidesitz bei der Bewegung nicht überlastet wird.)
- 3 Der äußerste linke Zahn der oberen Klinge muss den ersten kleinen Zahn der unteren Klinge abdecken oder übersteigen.
- 4 Der äußerste rechte Zahn der oberen Klinge muss den ersten großen Zahn der unteren Klinge berühren. Wenn die Klippen falsch ausgerichtet sind, geben Sie einige Tropfen Wahl Clipper Öl auf die Klippen, stellen Sie die Haarschneidemaschine wieder ein und schneiden Sie ein wenig Haar. Wiederholen Sie die Klippenausrichtung des Geräts aus der Steckdose. Lösen Sie die Schrauben leicht, und nehmen Sie die Einstellungen (anhand der oberen Klinge) vor. Wiederholen Sie diese Schritte so lange, bis die Klippen ausgerichtet haben. Mit Ausnahme der Klippen verfügt diese Haarschneidemaschine über keine vom Benutzer zu wartenden Teile. (I)

OL (L)
Die blades of your new Haarschneidemaschine sollten jeweils nach einem Haarschnitt geölt werden. Geben Sie einfach einige Tropfen Wahl Clipper Öl auf die Zähne der Klippen. Verwenden Sie nur das in der Verpackung enthaltene Wahl Clipper Öl. Wegen der hohen Geschwindigkeit, mit der die Wahl-Haarschneidemaschine arbeitet, müssen Sie den richtigen Öltyp verwenden. Verwenden Sie kein normales Öl, sondern ein Öl, das mit Wasser verdünnt werden kann. Geben Sie das Öl vorsichtig verflüchtigt und zähflüssig ÖL zurück, was zur Folge hat, dass die Bewegung der Klippen verlangsamt wird. Wahl Clipper Öl ist ein sehr dünnflüssiges, nichtentzündliches Öl, das sich nicht verflüchtigt und das die Geschwindigkeit der Klippen nicht verlangsamt.

SCHRAUBE FÜR LEISTUNGSWAHL (nicht bei allen Modellen der Haarschneidemaschine von Wahl)
Wenn die Haarschneidemaschine über eine Schraube für die Leistungswahl verfügt, ist diese verriegelt auf höchste Leistungsleistung eingestellt. Wenn Sie die Leistung des Motors zu senken möchten, müssen Sie möglicherweise eine Anpassung vornehmen.
Um die Leistung auszuwählen, benutzen Sie die Bürste aus Kunststoff, einen Schraubendreher oder eine dünne Nadel, um die Schraube für die Leistungswahl zu drehen. Sie ist an der Korkmatte in der Nähe des Motors und ein Geräusch ertönt. Drehen Sie anschließend die Schraube für die Leistungswahl langsam (im entgegengesetzten Uhrzeigersinn) heraus, bis das Geräusch verstummt. Sie haben nun die maximale Leistung eingestellt. (K)

KABEL
Benutzen Sie das Kabel nicht, um an der Haarschneidemaschine zu ziehen. Da die Bewegungsröhre gewöhnlicher sind, muss, achten Sie darauf, dass das Kabel nicht verdrort oder blockiert wird. Wickeln Sie das Kabel vor dem Lagern auf und heben Sie das Gerät in seiner Originalverpackung oder (falls vorhanden) in dem Behälter für die Lagerung auf.

Wenn die Haarschneidemaschine mit einem gepolten Stecker ausgerüstet ist: Um das Stromschütz des Geräts zu überprüfen, ziehen Sie den Stecker aus der Steckdose und stecken Sie ihn in eine gepolte Steckdose. Wenn der Stecker nicht in die Steckdose passt, drehen Sie ihn um. Wenn der Stecker immer noch nicht passt, lassen Sie ihn von einem qualifizierten Fachmann reparieren. (Nicht für alle Modelle der Haarschneidemaschine von Wahl)

SCHNITT-LÄNGENREGLER (nicht bei allen Modellen der Haarschneidemaschine von Wahl)
Wenn die Haarschneidemaschine mit einem verstellbaren Schnittlänge regler ausgerüstet ist, der ganz praktisch neben Ihrem rechten Daumen angeordnet ist (sollern Sie Rechtshänder sein), können Sie die gewünschte Schnittlänge ganz einfach einstellen, während Sie die Haarschneidemaschine in der Hand halten. (H)
Dieser Schnittlänge regler verleiht der Haarschneidemaschine zusätzliche Flexibilität, da er das Einstellen der Schnittlänge ohne einen Führungskamm ermöglicht. Wenn sich der Regler in der obersten Position befindet, wird die maximale Schnittlänge erzielt. Wenn sich der Regler in der untersten Position befindet, beträgt die Haarlänge etwa 3 mm (1/8") und entspricht damit ungefähr der Länge des Führungskamms.
Der Schnittlänge regler ist einstellbar und kann in jeder Einigung eine andere Schnittlänge benutzt wird. Außerdem ist der Schnittlänge regler zusätzlich, wenn die Klippen in Folge einer Beanspruchung verkleinert sind und Haare entfernt werden können, die sich zwischen den beiden Klippen verfangen haben, oder dass die Klippen dazu ausgebalanciert werden müssen, um eine schiefe Haare in den Krugen fallen können. Wenn kein Umgang vorhanden ist, erfüllt ein Handtuch diesen Zweck.
3 Lassen Sie die Person, die frisieren werden soll, auf einem Stuhl Platz nehmen, dass sich die Kopfoberseite der Person etwa in Höhe der Augenlinie befindet, und benutzen Sie danach kurze Kämmen oder Entschäumer nach von der Stellung für „Kurzen Schnitt“ in die Stellung für „Längeren Schnitt“. Wenn Sie diesen Vorgang nach dem Gebrauch der Haarschneidemaschine wiederholen, trägt dies dazu bei, dass sich keine Haareste zu bilden und die Haare nicht zu lang werden. Wenn Sie die Haare schneiden, achten Sie auf die richtige Einstellung und auf eine saubere Arbeit.
4 Nach dem Ausbürsten der Haare und dem Lösen aller Knoten halten Sie die Haarschneidemaschine entspannt und bequem in der Hand, wobei sich das Typenschild unter der Handfläche in der Nähe Ihres Zeigefingers befindet. Halten Sie die Haarschneidemaschine so, wie Sie in der Abbildung dargestellt ist, und schneiden Sie präzise kontrollieren.

HIWETUS: Zum Aufstecken von Führungskämmen halten Sie den Kamm mit der Zahnrseite nach oben. Schieben Sie den Kamm über die Haare und drücken Sie die Klippen gegen den Kamm bis er ansetzt. (H)
Der Haarschneide-Set kann in nach Modell die folgenden Kämmen enthalten:
Verstellbare Führungskämme - ermöglichen verschiedene Schnittlängen mit einem einzigen Kamm.
Individual (black or colored) guide combs - ermöglichen verschiedene Schnittlängen mit einem einzigen Kamm.
Individual farbige Führungskämme - mit vorgegebenen Längen, die auf jedem Führungskamm angegeben sind Kämmе sind auch farbcodiert, sodass eine rasche Identifizierung Ihrer Schnittlänge möglich ist.
VERWENDBARE VERSTELLBARE FÜHRUNGSKÄMME:
Der kleinste verstellbare Führungskamm hat einen Bereich von 3 mm bis 16 mm (1/8" bis 5/8") in Stufen von jeweils 3 mm eingestellt werden. (M)
Der große verstellbare Führungskamm hat einen Bereich von 19 mm bis 32 mm (3/4" bis 1-1/4") in Stufen von jeweils 3 mm eingestellt werden. (N)
Mit Hilfe Ihres Daumens können Sie die Schnittlänge verändern, indem Sie einfach den verstellbaren Regler in die nächste Stellung schieben. Beide verstellbare Führungskämme sind mit Klickstopps und Stufenanzeige sowie einer Anzeige der Schnittlänge in Millimetern ausgestattet, sodass sich die jeweilige Einstellung rasch und einfach ablesen lässt.
Der große verstellbare Führungskamm hat den Bereich vom Ohr bis zur Kopfoberseite verwendet werden. (O)
Der kleine verstellbare Führungskamm hat den Bereich vom Nacken bis zu den Ohren verwendet werden. (O2)

VERWENDEND INDIVIDUELLE FÜHRUNGSKÄMME ODER FARBIGE FÜHRUNGSKÄMME:
Einige Sets enthalten nicht sämtliche Wahl-Führungskämme. Alle Kämmе (oder weiteren Zubehör, das hier nicht aufgelistet ist) können über den Händler bezogen oder direkt bei Wahl bestellt werden.
LISTE DER INDIVIDUELLEN FÜHRUNGSKÄMME:

- | | |
|------------------------------|-------------------------------|
| • 3 mm - schwarz/weiß | • 6 mm - schwarz/weiß |
| • 10 mm - schwarz/dunkelblau | • 13 mm - schwarz/orange/rosa |
| • 16 mm - schwarz/lila | • 19 mm - schwarz/orangeroten |
| • 22 mm - schwarz/lila | • 25 mm - schwarz/weiß |
| • 31 mm - schwarz/weiß | • 38 mm - nur schwarz |
- Haarschnitt im Bereich des rechten Ohrs - nur schwarz • Haarschnitt im Bereich des linken Ohrs - nur schwarz
• 1/8" - nur schwarz
• 1/2" - nur schwarz
• 1" - nur schwarz
• 1-1/4" - nur schwarz
• 1-1/2" - nur schwarz
• 1-3/4" - nur schwarz
• 2" - nur schwarz
• 2-1/2" - nur schwarz
• 3" - nur schwarz
• 3-1/2" - nur schwarz
• 4" - nur schwarz
• 4-1/2" - nur schwarz
• 5" - nur schwarz
• 5-1/2" - nur schwarz
• 6" - nur schwarz
• 6-1/2" - nur schwarz
• 7" - nur schwarz
• 7-1/2" - nur schwarz
• 8" - nur schwarz
• 8-1/2" - nur schwarz
• 9" - nur schwarz
• 9-1/2" - nur schwarz
• 10" - nur schwarz
• 10-1/2" - nur schwarz
• 11" - nur schwarz
• 11-1/2" - nur schwarz
• 12" - nur schwarz
• 12-1/2" - nur schwarz
• 13" - nur schwarz
• 13-1/2" - nur schwarz
• 14" - nur schwarz
• 14-1/2" - nur schwarz
• 15" - nur schwarz
• 15-1/2" - nur schwarz
• 16" - nur schwarz
• 16-1/2" - nur schwarz
• 17" - nur schwarz
• 17-1/2" - nur schwarz
• 18" - nur schwarz
• 18-1/2" - nur schwarz
• 19" - nur schwarz
• 19-1/2" - nur schwarz
• 20" - nur schwarz
• 20-1/2" - nur schwarz
• 21" - nur schwarz
• 21-1/2" - nur schwarz
• 22" - nur schwarz
• 22-1/2" - nur schwarz
• 23" - nur schwarz
• 23-1/2" - nur schwarz
• 24" - nur schwarz
• 24-1/2" - nur schwarz
• 25" - nur schwarz
• 25-1/2" - nur schwarz
• 26" - nur schwarz
• 26-1/2" - nur schwarz
• 27" - nur schwarz
• 27-1/2" - nur schwarz
• 28" - nur schwarz
• 28-1/2" - nur schwarz
• 29" - nur schwarz
• 29-1/2" - nur schwarz
• 30" - nur schwarz
• 30-1/2" - nur schwarz
• 31" - nur schwarz
• 31-1/2" - nur schwarz
• 32" - nur schwarz
• 32-1/2" - nur schwarz
• 33" - nur schwarz
• 33-1/2" - nur schwarz
• 34" - nur schwarz
• 34-1/2" - nur schwarz
• 35" - nur schwarz
• 35-1/2" - nur schwarz
• 36" - nur schwarz
• 36-1/2" - nur schwarz
• 37" - nur schwarz
• 37-1/2" - nur schwarz
• 38" - nur schwarz
• 38-1/2" - nur schwarz
• 39" - nur schwarz
• 39-1/2" - nur schwarz
• 40" - nur schwarz
• 40-1/2" - nur schwarz
• 41" - nur schwarz
• 41-1/2" - nur schwarz
• 42" - nur schwarz
• 42-1/2" - nur schwarz
• 43" - nur schwarz
• 43-1/2" - nur schwarz
• 44" - nur schwarz
• 44-1/2" - nur schwarz
• 45" - nur schwarz
• 45-1/2" - nur schwarz
• 46" - nur schwarz
• 46-1/2" - nur schwarz
• 47" - nur schwarz
• 47-1/2" - nur schwarz
• 48" - nur schwarz
• 48-1/2" - nur schwarz
• 49" - nur schwarz
• 49-1/2" - nur schwarz
• 50" - nur schwarz
• 50-1/2" - nur schwarz
• 51" - nur schwarz
• 51-1/2" - nur schwarz
• 52" - nur schwarz
• 52-1/2" - nur schwarz
• 53" - nur schwarz
• 53-1/2" - nur schwarz
• 54" - nur schwarz
• 54-1/2" - nur schwarz
• 55" - nur schwarz
• 55-1/2" - nur schwarz
• 56" - nur schwarz
• 56-1/2" - nur schwarz
• 57" - nur schwarz
• 57-1/2" - nur schwarz
• 58" - nur schwarz
• 58-1/2" - nur schwarz
• 59" - nur schwarz
• 59-1/2" - nur schwarz
• 60" - nur schwarz
• 60-1/2" - nur schwarz
• 61" - nur schwarz
• 61-1/2" - nur schwarz
• 62" - nur schwarz
• 62-1/2" - nur schwarz
• 63" - nur schwarz
• 63-1/2" - nur schwarz
• 64" - nur schwarz
• 64-1/2" - nur schwarz
• 65" - nur schwarz
• 65-1/2" - nur schwarz
• 66" - nur schwarz
• 66-1/2" - nur schwarz
• 67" - nur schwarz
• 67-1/2" - nur schwarz
• 68" - nur schwarz
• 68-1/2" - nur schwarz
• 69" - nur schwarz
• 69-1/2" - nur schwarz
• 70" - nur schwarz
• 70-1/2" - nur schwarz
• 71" - nur schwarz
• 71-1/2" - nur schwarz
• 72" - nur schwarz
• 72-1/2" - nur schwarz
• 73" - nur schwarz
• 73-1/2" - nur schwarz
• 74" - nur schwarz
• 74-1/2" - nur schwarz
• 75" - nur schwarz
• 75-1/2" - nur schwarz
• 76" - nur schwarz
• 76-1/2" - nur schwarz
• 77" - nur schwarz
• 77-1/2" - nur schwarz
• 78" - nur schwarz
• 78-1/2" - nur schwarz
• 79" - nur schwarz
• 79-1/2" - nur schwarz
• 80" - nur schwarz
• 80-1/2" - nur schwarz
• 81" - nur schwarz
• 81-1/2" - nur schwarz
• 82" - nur schwarz
• 82-1/2" - nur schwarz
• 83" - nur schwarz
• 83-1/2" - nur schwarz
• 84" - nur schwarz
• 84-1/2" - nur schwarz
• 85" - nur schwarz
• 85-1/2" - nur schwarz
• 86" - nur schwarz
• 86-1/2" - nur schwarz
• 87" - nur schwarz
• 87-1/2" - nur schwarz
• 88" - nur schwarz
• 88-1/2" - nur schwarz
• 89" - nur schwarz
• 89-1/2" - nur schwarz
• 90" - nur schwarz
• 90-1/2" - nur schwarz
• 91" - nur schwarz
• 91-1/2" - nur schwarz
• 92" - nur schwarz
• 92-1/2" - nur schwarz
• 93" - nur schwarz
• 93-1/2" - nur schwarz
• 94" - nur schwarz
• 94-1/2" - nur schwarz
• 95" - nur schwarz
• 95-1/2" - nur schwarz
• 96" - nur schwarz
• 96-1/2" - nur schwarz
• 97" - nur schwarz
• 97-1/2" - nur schwarz
• 98" - nur schwarz
• 98-1/2" - nur schwarz
• 99" - nur schwarz
• 99-1/2" - nur schwarz
• 100" - nur schwarz
• 100-1/2" - nur schwarz
• 101" - nur schwarz
• 101-1/2" - nur schwarz
• 102" - nur schwarz
• 102-1/2" - nur schwarz
• 103" - nur schwarz
• 103-1/2" - nur schwarz
• 104" - nur schwarz
• 104-1/2" - nur schwarz
• 105" - nur schwarz
• 105-1/2" - nur schwarz
• 106" - nur schwarz
• 106-1/2" - nur schwarz
• 107" - nur schwarz
• 107-1/2" - nur schwarz
• 108" - nur schwarz
• 108-1/2" - nur schwarz
• 109" - nur schwarz
• 109-1/2" - nur schwarz
• 110" - nur schwarz
• 110-1/2" - nur schwarz
• 111" - nur schwarz
• 111-1/2" - nur schwarz
• 112" - nur schwarz
• 112-1/2" - nur schwarz
• 113" - nur schwarz
• 113-1/2" - nur schwarz
• 114" - nur schwarz
• 114-1/2" - nur schwarz
• 115" - nur schwarz
• 115-1/2" - nur schwarz
• 116" - nur schwarz
• 116-1/2" - nur schwarz
• 117" - nur schwarz
• 117-1/2" - nur schwarz
• 118" - nur schwarz
• 118-1/2" - nur schwarz
• 119" - nur schwarz
• 119-1/2" - nur schwarz
• 120" - nur schwarz
• 120-1/2" - nur schwarz
• 121" - nur schwarz
• 121-1/2" - nur schwarz
• 122" - nur schwarz
• 122-1/2" - nur schwarz
• 123" - nur schwarz
• 123-1/2" - nur schwarz
• 124" - nur schwarz
• 124-1/2" - nur schwarz
• 125" - nur schwarz
• 125-1/2" - nur schwarz
• 126" - nur schwarz
• 126-1/2" - nur schwarz
• 127" - nur schwarz
• 127-1/2" - nur schwarz
• 128" - nur schwarz
• 128-1/2" - nur schwarz
• 129" - nur schwarz
• 129-1/2" - nur schwarz
• 130" - nur schwarz
• 130-1/2" - nur schwarz
• 131" - nur schwarz
• 131-1/2" - nur schwarz
• 132" - nur schwarz
• 132-1/2" - nur schwarz
• 133" - nur schwarz
• 133-1/2" - nur schwarz
• 134" - nur schwarz
• 134-1/2" - nur schwarz
• 135" - nur schwarz
• 135-1/2" - nur schwarz
• 136" - nur schwarz
• 136-1/2" - nur schwarz
• 137" - nur schwarz
• 137-1/2" - nur schwarz
• 138" - nur schwarz
• 138-1/2" - nur schwarz
• 139" - nur schwarz
• 139-1/2" - nur schwarz
• 140" - nur schwarz
• 140-1/2" - nur schwarz
• 141" - nur schwarz
• 141-1/2" - nur schwarz
• 142" - nur schwarz
• 142-1/2" - nur schwarz
• 143" - nur schwarz
• 143-1/2" - nur schwarz
• 144" - nur schwarz
• 144-1/2" - nur schwarz
• 145" - nur schwarz
• 145-1/2" - nur schwarz
• 146" - nur schwarz
• 146-1/2" - nur schwarz
• 147" - nur schwarz
• 147-1/2" - nur schwarz
• 148" - nur schwarz
• 148-1/2" - nur schwarz
• 149" - nur schwarz
• 149-1/2" - nur schwarz
• 150" - nur schwarz
• 150-1/2" - nur schwarz
• 151" - nur schwarz
• 151-1/2" - nur schwarz
• 152" - nur schwarz
• 152-1/2" - nur schwarz
• 153" - nur schwarz
• 153-1/2" - nur schwarz
• 154" - nur schwarz
• 154-1/2" - nur schwarz
• 155" - nur schwarz
• 155-1/2" - nur schwarz
• 156" - nur schwarz
• 156-1/2" - nur schwarz
• 157" - nur schwarz
• 157-1/2" - nur schwarz
• 158" - nur schwarz
• 158-1/2" - nur schwarz
• 159" - nur schwarz
• 159-1/2" - nur schwarz
• 160" - nur schwarz
• 160-1/2" - nur schwarz
• 161" - nur schwarz
• 161-1/2" - nur schwarz
• 162" - nur schwarz
• 162-1/2" - nur schwarz
• 163" - nur schwarz
• 163-1/2" - nur schwarz
• 164" - nur schwarz
• 164-1/2" - nur schwarz
• 165" - nur schwarz
• 165-1/2" - nur schwarz
• 166" - nur schwarz
• 166-1/2" - nur schwarz
• 167" - nur schwarz
• 167-1/2" - nur schwarz
• 168" - nur schwarz
• 168-1/2" - nur schwarz
• 169" - nur schwarz
• 169-1/2" - nur schwarz
• 170" - nur schwarz
• 170-1/2" - nur schwarz
• 171" - nur schwarz
• 171-1/2" - nur schwarz
•

