

OneMelon[®] *Waterfall*

Manual



THERE IS ONLY ONEMELON[®]



GEFELICITEERD

Je bent eigenaar van kwaliteit en duurzaamheid. Een langdurige vriendschap die je meeneemt naar mooie momenten. De toekomst klinkt je als muziek in de oren. Producties klinken zoals ze bedoeld zijn. Diep en gebalanceerd. Voor de pro's en voor de liefhebbers. Nooit vertraging. Fantastische metalen bouw die bij normaal gebruik eindeloos meegaat. Je bent de trotse eigenaar van de **OneMelon Waterfall**.



OneMelon.com



OneMelon

Wist je dat elk product van OneMelon is vernoemd naar een natuurverschijnsel?

1

In de verpakking

Oordop rechts



Oordop links



Handleiding



Audiokabel



Ear tips (S, M, L)



Bediening



 Opnemen  Ophangen

Druk 1 keer om op te nemen. En druk nogmaals om je oproep te beëindigen.

Hou ingedrukt om een oproep te weigeren.

 Vorige  Volgende

Druk snel 2 keer op de knop om naar je volgende liedje of video te gaan.

Druk snel 3 keer op de knop om naar je volgende liedje te gaan.

 Voice control  Play/Pauze

Hou de knop ingedrukt voor voice command.

Druk 1 keer voor pauze. Druk weer 1 keer voor play.

3

Of de bediening functioneert, hangt af van de beschikbaarheid van functies op het device.

Veilig gebruik

- Open de oordoppen niet en wijzig niets aan de behuizing of de inhoud van het product.
- Hou het volume laag genoeg zodat het je gehoor niet beschadigt.
- Gebruik oordopjes niet in situaties waar het horen van omgevingsgeluid bijdraagt aan je veiligheid.
- Gebruik je de oordopjes niet voor een lange tijd? Ontkoppel ze dan van je device.
- Plaats de oordopjes niet in een vochtige en magnetische ruimte gedurende langere tijd.

Let op!

Op één oordopje staat een '**L**' (links) en op de ander staat een '**R**' (rechts). Er is maar één correcte manier om de kabels met de oordopjes te verbinden. Het rechter oordopje verbind je met de draad waar een kleine '**R**' op staat. En het linker oordopje verbind je met de kabel waar een '**L**' op staat.

Probleem & oplossing



Eén oordop geeft lager volume

De oorzaak is vrijwel nooit mechanisch. Het geluid vindt geen doorgang naar buiten. Het komt meestal doordat het gaasje vuil is. Zorg daarom dat je het gaasje goed schoon houdt. Zorg bij het schoonmaken van het gaasje, dat je het vuil niet in de oordop drukt, maar (met bijvoorbeeld een pincet) het vuil uit het gaasje trekt.



Een suis of storinggeluid

De OneMelon Waterfall oordopjes spelen exact het geluid af dat via de kabel wordt verzonden. Een suis kan komen door vuil in de audioingang van het device. Maak de opening goed schoon. Ook kan het voorkomen dat de oordop een ruis geeft als het device is volgeladen en je deze blijft opladen tijdens gebruik.

Wist je dat

De **OneMelon Waterfall** in totaal 4 drivers en armatures heeft en dat die samenstelling zorgt voor het mooie volle en gebalanceerde geluid?

High-end oordopjes zoals de OneMelon Waterfall een **inspeeltijd** hebben van ongeveer 40 uur? Dat betekent dat ze nog beter gaan klinken na ongeveer 40 uur afspeeltijd.

OneMelon een Nederlands merk is?

Het **logo** staat voor één (de streep in het midden) en de oranje cirkel staat voor een meloen?





7

ONEMELON IS ALL IT TAKES

THERE IS ONLY ONEMELON[®]



CONGRATULATIONS

You own quality and durability. A long lasting friendship that will join you at beautiful moments. The future sounds like music to your ears. Productions sound as intended: deep and balanced. For the pros and for the enthusiasts. No delay. Fantastic metal construction that will last for years with normal use. You are the proud owner of the **OneMelon Waterfall**.



OneMelon.com



OneMelon

Did you know that every OneMelon product is named after a natural phenomenon?



8

In this package

Earbud right



Earbud left




Manual



Audio cable



Ear tips (S, M, L)

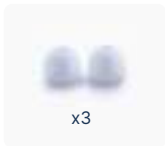

Controls



Answer



Hang up

Press once to pick up a call. And press again to end your call.

Press and hold to reject a call or a meeting invitation.



Back



Forward

Quickly press the button twice to go to your next song or video.

Quickly press the button 3 times to go to your next song.



Voice control



Play/Pause

Press and hold the button for voice control.

Press the button for pause. Press again for play.



Some functions will only work if the device supports the function. Example: voice assist.

Safety

- Don't disassemble the earphones and don't change the inside or outside of the earbuds.
- Keep the volume low enough so it will not damage your hearing.
- Don't use earphones in situations where hearing ambient sound is needed for your safety.
- Will you not use the earphones for a longer time? Please unplug them from your device.
- Don't place the headset in a humid or strong magnetic place for a long time.

Caution!

On one earbud there is written an 'L' (left) and on the other there it shows an 'R' (right). Please make sure that you connect the wire with the '**R**' with the earbud that says '**R**'. There is only one way to connect correctly. The same goes for the left side. If not connected correctly, ergonomically the earbuds are not as convenient as they should.

FAQ's



One earbud has lower volume

The cause is almost never mechanical. The reason of lower volume is that the sound can not escape anymore because of dirt in the opening or gauze. So make sure you keep the gauze clean. When cleaning, make sure that you do not actually press the dirt into the earbud, but (using tweezers, for example) pull the dirt out of the gauze.



Distortion in the sound

The OneMelon Waterfall earbuds play exactly the sound that is sent from the device. A hiss can be caused by dirt in the audio input of the device. Clean the opening well. It is also possible that the earbud produces a noise when the device is fully charged and you continue to charge it during use.

Did you know that

The **OneMelon Waterfall** has a total of 4 drivers and armatures? That's why the earbuds produce such a beautiful and balanced sound.

High-end earbuds like the OneMelon Waterfall have a **burn in time** of 40 hours? That means that the sound will even be better after 40 hours of usage.

OneMelon is a European brand from Holland?

The **logo** stands for 'one' (the stripe in the middle) and the orange circle stands for a melon?



THERE IS ONLY ONEMELON®



14

ONEMELON IS ALL IT TAKES



CE RoHS

THERE IS ONLY ONEMELON[®]