

CERAMIC FAN HEATER OPERATING INSTRUCTIONS



MODEL NO: EC-1207 - EC-1208 - EC-1209 - EC-1210

INDOOR HOUSEHOLD USE ONLY

Please read this guidance carefully before using this heater and keep well this guidance.

CAUTION FOR OPERATION:


1. Check if the voltage is complaint with the label on the product.
2. Do not touch hot surfaces while working – Use handles or knobs
3. Keep the product a way from water or any other liquid.
4. Do not leave this product unattended while it is operation.
5. Unplug the product before cleaning or maintenance.
6. Do not operate the appliance when the power cord or plug is damaged. it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
7. If the product needs repair, please ask for special person or our company authorized maintenance department.
8. Keep this product away at least 1m from inflammable objects, such as paper, cloth or curtains.
9. Do not pull the plug out by the cord, or it may damage the plug.
- 10.No liability will be accepted for any damage caused by operations incompliant with these instructions or any other improper use or mishandling.
- 11.Do not use this heater in the bathroom or near a swimming pool.
- 12.Do not cover the heater.
- 13.Keep a 50cm safe distance from the top and sides and 120cm in front.
- 14.Using a heater in a room with explosive gas such as petrol. or other kinds of flammable glues. sprays or solvents is strictly forbidden.
- 15.Children playing around this product is strictly forbidden.
- 16.Do not let children to operate this product.
- 17.Do not use this product outdoor.
- 18.Do not disassemble this product personally.
- 19.Wait until the product cool down to perform further operations.
- 20.Do not discard the original packing box which could be used to store the product.
- 21.The disposal of the packing material should be done in the appropriate way.
- 22.The heater must not be located immediately below a socket-outlet. The electrical-outlet must be equipped with installment of earth whose capacity should be 220-240V, 50-60Hz.Make sure the socket and plug contact well.
- 23.If nobody is in or you are repairing the heater, please put off the plug-in.
- 24.This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 25.Children of less than 3 years should be kept away unless continuously supervised.
- 26.Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION —Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

WARNING: Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

● **Technology parameter**

Model: EC-1207/8/9/10	Rated Voltage: 220-240V
Rated Frequency: 50-60Hz	Power: 1500W

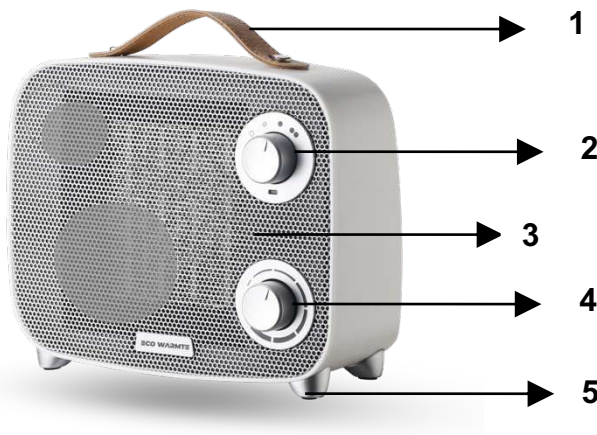

- 1. Leather handle
- 2. Switch knob
- 3. Air outlet grill
- 4. Adjustable thermostat knob
- 5. feet

● **Operation of the heater**

1. plug in the unit.
2. Turn the thermostat knob fully in a clockwise direction to the maximum setting.
3. Turn the switch to the position "❁", it will blow cool air
4. Turn the switch to the position "●", the heater will works at the low heat situation.
5. Then turn the switch to the position "●●", the heater works at the high heat situation.

● **Cleaning the heater**

Always un-plug the heater from the wall socket and allow it to cool down before cleaning.

Clean the outside of the heater by wiping with a damp cloth and buff with a dry cloth.

Do not use any detergents or abrasives and do not allow any water to enter the heater.

● **Storing the heater**

When the heater is not used for long periods of time it should be protected from dust and stored in a clean dry place.

KERAMISCHE VENTILATORKACHEL

GEBRUIKSAANWIJZING



MODEL NR: EC-1207 - EC-1208 - EC-1209 - EC-1210

ALLEEN VOOR HUISHOUELIJK GEBRUIK BINNENSHUIS

Lees deze handleiding zorgvuldig door vóór gebruik van deze kachel en bewaar deze goed.

VOORZORGSMAATREGELEN VOOR GEBRUIK:

- 1-Controleer of de netspanning overeenkomt met het label op het product.
- 2- Raak tijdens gebruik geen hete oppervlakken aan – gebruik handgrepen of knoppen.
- 3- Houd het product uit de buurt van water of andere vloeistoffen.
- 4- Laat het apparaat niet zonder toezicht aan staan tijdens gebruik.
- 5- Trek de stekker uit het stopcontact vóór het schoonmaken of onderhoud.
- 6- Gebruik het apparaat niet als het snoer of de stekker beschadigd is. Deze moet worden vervangen door de fabrikant, zijn servicedienst of een vergelijkbaar gekwalificeerde persoon om gevaar te voorkomen.
- 7- Als het product gerepareerd moet worden, neem dan contact op met een speciaal aangewezen persoon of onze erkende onderhoudsdienst.
- 8- Houd dit product op minstens 1 meter afstand van brandbare materialen zoals papier, doek of gordijnen.
- 9- Trek de stekker niet uit het stopcontact aan het snoer – dit kan schade veroorzaken.
- 10- De fabrikant is niet aansprakelijk voor schade veroorzaakt door oneigenlijk gebruik of gebruik in strijd met deze instructies.
- 11- Gebruik deze kachel niet in de badkamer of bij een zwembad.
- 12- Bedek de kachel niet.
- 13- Houd 50 cm vrije ruimte aan de boven- en zijkanten en 120 cm aan de voorkant.
- 14- Gebruik van de kachel in een ruimte met explosieve gassen zoals benzine, of andere brandbare lijmen, sprays of oplosmiddelen is ten strengste verboden.
- 15- Kinderen mogen niet in de buurt van dit apparaat spelen.
- 16- Laat kinderen dit apparaat niet bedienen.
- 17- Niet voor gebruik buitenshuis.
- 18- Demonteer het apparaat niet zelf.
- 19- Wacht tot het apparaat is afgekoeld voordat u verdere handelingen uitvoert.
- 20- Gooi de originele verpakking niet weg; deze kan worden gebruikt voor opslag.
- 21- Verwijder verpakkingsmateriaal op een correcte manier.
- 22- Plaats de kachel niet direct onder een wandcontactdoos. Het stopcontact moet geaard zijn en een spanning hebben van 220–240V, 50–60Hz. Zorg ervoor dat stekker en stopcontact goed contact maken.
- 23 Haal de stekker uit het stopcontact als niemand thuis is of bij reparaties.

VEILIGHEID MET BETREKKING TOT KINDEREN:


- 24- Dit apparaat mag worden gebruikt door kinderen vanaf 8 jaar en ouder, en door personen met verminderde fysieke, sensorische of mentale capaciteiten, of gebrek aan ervaring en kennis, mits zij onder toezicht staan of instructies hebben ontvangen over veilig gebruik en de gevaren begrijpen.
- 25- Kinderen mogen niet met het apparaat spelen.
- 26- Reiniging en onderhoud mogen niet door kinderen zonder toezicht worden uitgevoerd.
- 27- Kinderen jonger dan 3 jaar moeten uit de buurt blijven, tenzij zij voortdurend worden bewaakt.
- 28- Kinderen van 3 tot 8 jaar mogen het apparaat alleen aan- en uitzetten als het apparaat correct is geplaatst en zij onder toezicht staan of instructie hebben ontvangen en de gevaren begrijpen. Zij mogen de stekker niet insteken, instellingen veranderen, schoonmaken of onderhoud uitvoeren.

LET OP — Sommige delen van dit apparaat kunnen erg heet worden en brandwonden veroorzaken. Extra aandacht is nodig wanneer kinderen of kwetsbare personen aanwezig zijn.

WAARSCHUWING: Gebruik deze kachel niet in kleine ruimtes waar mensen verblijven die niet zelfstandig kunnen vluchten, tenzij constante supervisie aanwezig is.

● TECHNISCHE GEGEVENS:

Model: EC-1207/8/9/10	Nominale spanning: 220-240V
Frequentie: 50-60Hz	Vermogen: 1500W

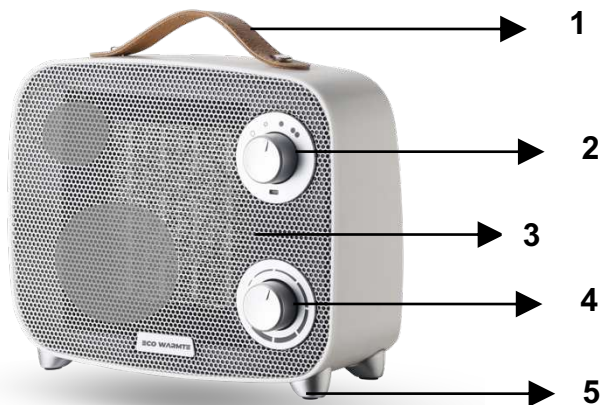

1. Leren handvat
2. Schakelknop
3. Lucht uitlaatrooster
4. Instelbare thermostaatknop
5. Voetjes

● BEDIENING VAN DE KACHEL

1. Steek de stekker in het stopcontact.
2. Draai de thermostaatknop volledig met de klok mee naar de maximale stand.
3. Zet de schakelaar op de positie "❁", de ventilator blaast koele lucht.
4. Zet de schakelaar op de positie "●", de kachel werkt op lage warmte.
5. Zet de schakelaar op de positie "●", de kachel werkt op hoge warmte.

● **REINIGEN VAN DE KACHEL**

- Trek altijd de stekker uit het stopcontact en laat de kachel afkoelen vóór het schoonmaken.
- Reinig de buitenkant met een vochtige doek en droog na met een droge doek.
- Gebruik geen reinigingsmiddelen of schuurmiddelen en laat geen water in de kachel komen.

● **OPSLAG VAN DE KACHEL**

Wanneer het apparaat langere tijd niet wordt gebruikt, bescherm het dan tegen stof en bewaar het op een schone, droge plek.