



GEBRUIKSAANWIJZING



Bij Ozocozy streven we naar maximale klanttevredenheid. Als u vragen heeft of als ontbrekende of beschadigde onderdelen aantreft, aarzel dan niet om contact met ons op te nemen. We staan klaar om ervoor te zorgen dat u volledig tevreden bent.

LEES EN VOLG ALLE VEILIGHEIDSINSTRUCTIES

1. Gebruik geen seizoensgebonden producten buiten, tenzij ze geschikt zijn voor gebruik binnens- en buitenshuis.
2. Dit seizoensgebonden product is niet bedoeld voor permanente installatie of gebruik.
3. Monteer of plaats niet in de buurt van gas- of elektrische verwarmers, open haarden, kaarsen of vergelijkbare warmtebronnen.
4. Als u andere verlichtingsproducten gebruikt om de kerstboom te versieren, gebruik deze dan veilig.
5. Gebruik dit product niet voor andere doeleinden dan waarvoor het bedoeld is.

OPSLAG

Verwijder alle kerstdecoraties. Druk voorzichtig de uiteinden van de takken terug naar het midden van de tak. Breng alle takken terug naar hun oorspronkelijke rechte stand en let erop dat er geen onnodige druk wordt uitgeoefend op de bevestigde uiteinden van de takken. Bij het uit elkaar halen van de boom zal een draaibeweging helpen om de delen van elkaar te scheiden. Alle onderdelen van de boom kunnen worden vervangen in de doos (of een speciale kerstboom opbergtas) manuaen moeten worden opgeslagen op een koele, droge plaats.

ONDERDELENLIJST

Bedankt voor het kopen van onze producten. Controleer de verpakking om te zien of alle onderdelen compleet zijn. A, B, C vertegenwoordigen alleen de algemene onderdelen, niet alle producten.



A



B



C



Standaard + Bouten

Standaard en bouten zitten bij elkaar in de plastic zak



Adapter

MONTAGE-INSTRUCTIE



Hoe de takken te vormen

Het vormen van de boomtakken is de laatste stap van de montage. De zorg en aandacht die aan dit laatste proces wordt besteed, resulteert in een mooi en aantrekkelijk kerstmiddelpunt.


AANDACHTSPUNTEN



Elke boom wordt vanuit de fabriek verzonden met de uiteinden van elke tak samengeperst tot het midden (fig. 1)




Elke takpunt moet in de juiste positie worden gevormd om de boom een natuurlijke uitstraling te geven. Verspreid de punten voorzichtig van de tak af (Fig. 2)

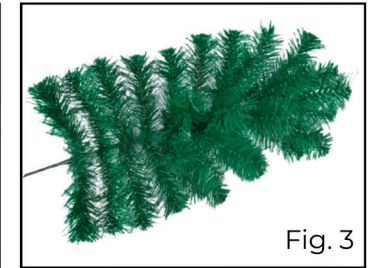


Elke individuele punt moet vervolgens afzonderlijk worden gespreid. De punten moeten vervolgens lichtjes omhoog worden gebogen om een meer natuurlijke uitstraling te geven (Fig. 3)


Fig. 3 toont een typische boomtak na het vormen. Takpunten moeten terug naar het midden worden gedrukt wanneer de boom voor opslag in de originele doos wordt gedemonteerd

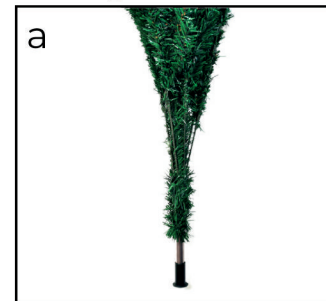

Open de verpakking, er zit een beschermkap op de ijzeren pijp.

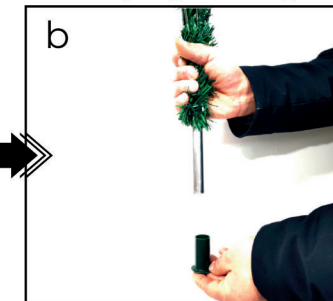


Verwijder de dop naar beneden. Als het moeilijk te verwijderen is, kunt u een hete föhn gebruiken voor een tijdje.

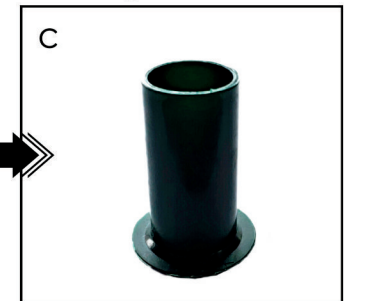

Het doel van de beschermkap is om te voorkomen dat de ijzeren pijp tijdens het transport door de doos prikt. Maak u geen zorgen als de dop breekt wanneer u hem ontvangt, want hij is nutteloos.

LED-VERLICHTING

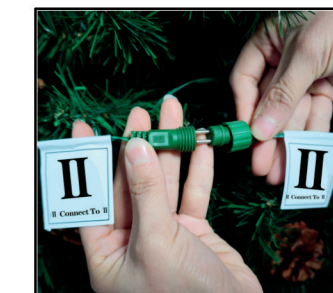

De lampen moeten ook correct worden aangesloten wanneer de kerstboom wordt gemonteerd. Sluit alstublieft I op I aan, II op II volgens de stickers die aan de stekker zijn bevestigd. De stekker moet volledig worden ingevoegd en vastgedraaid bij het aansluiten.



ASSEMBLY INSTRUCTIONS



As Ozocozy, we are committed to providing you with complete customer satisfaction. If you have any questions or if you find any missing or damaged parts, please contact us for your full satisfaction.

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Do not use seasonal products outdoors unless they are suitable for indoor and outdoor use.
2. This seasonal product is not intended for permanent installation or use.
3. Do not mount or place near gas or electric heaters, fireplaces, candles or similar heat sources.
4. If you use other lighting products to decorate the Christmas tree, please use them safely.
5. Do not use this product for purposes other than those for which it is intended

STORAGE

Remove all Christmas decorations. Gently press the ends of the branches back towards the center of the branch. Return all branches to their original straight position, taking care not to place undue pressure on the attached ends of the branches. When taking the tree apart, a twisting motion will help separate the parts. All parts of the tree can be replaced in the box (or a special Christmas tree storage bag) manually and should be stored in a cool, dry place.

PACKING LIST

Thank you for purchasing our products. Check the packaging to see if all parts are complete. A, B, C only represent the general parts, not all products.



A



B



C



Stand +
Bolts

Stand and bolts
are together in
the plastic bag



Adapter

ASSEMBLY INSTRUCTION

1

Place the stand in the shape of an "X"

2

Remove the plastic protective cap

3

Insert section C into the stand

4

Tighten the bolts on the stand

5

Bend all branches down $80^{\circ} \sim 90^{\circ}$

6

Spread out all the branches, make it look full

7

Add the following sections

8

Bend the branches, unfold the leaves

9

Connect the power supply

How to shape the branches

Forming the tree branches is the final step of assembly. The care and attention given to this final process results in a beautiful and attractive Christmas centerpiece.

POINTS OF ATTENTION




Each tree is shipped from the factory with the ends of each branch compressed to the center (fig. 1)

Each branch tip must be shaped into the correct position to give the tree a natural look. Carefully spread the tips away from the branch (Fig. 2)

Each individual point must then be spread separately. The tips should then be slightly bent upwards to give a more natural look (Fig. 3)

Fig. 3 shows a typical tree branch after shaping. Branch tips should be pushed back to center when the tree is disassembled for storage in the original box

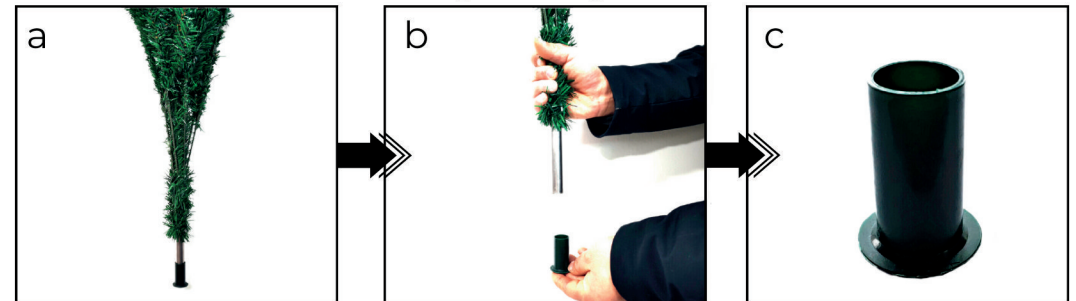


Open the package, there is a protective cap on the iron pipe.

Remove the cap downwards. If it is difficult to remove, you can use a hot hair dryer for a while.

The purpose of the protective cover is to prevent the iron pipe from piercing the box during transportation. Don't worry if the cap breaks when you receive it because it is useless.

LED-LIGHTING

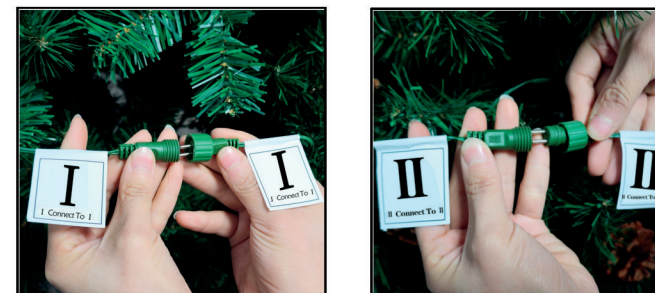

The lights must also be connected correctly when the Christmas tree is assembled. Please connect I to I, II to II according to the stickers attached to the plug. The plug must be fully inserted and tightened when connecting.