

ROCHESTER JUICER



INSTRUCTION MANUAL

To fully benefit from the item we offer, please read this manual carefully before using and keep for future reference.

Important Tips

This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Check the sieve for damage every time you use the appliance. Do not use the appliance if the rotating sieve is damaged.


Always disconnect appliance from the mains supply socket if it is left unattended and before assembling, disassembling or cleaning.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- Never use the appliance for anything other than its intended use. This appliance is for Household use only. Do not use this appliance outdoors.
- Always ensure that hands are dry before handling the plug or switching on the appliance.
- Always use the appliance on a stable, secure, dry and level surface.
- This appliance must not be placed on or near any potentially hot surfaces (such as a gas or electric hob).
- Never immerse any part of the appliance or power cord and plug in water or any other liquid.
- Never let the power cord hang over the edge of a work top, touch hot surfaces or become knotted, trapped or pinched.
- Do use the appliance if it has been dropped, if there are any visible signs of damage or if it is leaking.
- Never use any accessory or attachment not recommended by the manufacturer.
- Switch off the appliance before changing accessories or approaching parts which move during use.
- Allow moving parts to come to a stop before opening or cleaning.
- Never insert your fingers, utensils or any other object into feeding tube. Always use the food pusher.
- Never attempt to remove or replace any part of the appliance whilst it is in operation.
- **Ensure that the appliance is switched off and unplugged from the supply socket if it is left unattended and before assembling, disassembling or cleaning.**
- **Never immerse any part of the appliance or power cord and plug in water or any other liquid.**
- **Never use harsh, abrasive or caustic clean this appliance.**

1

Product Features

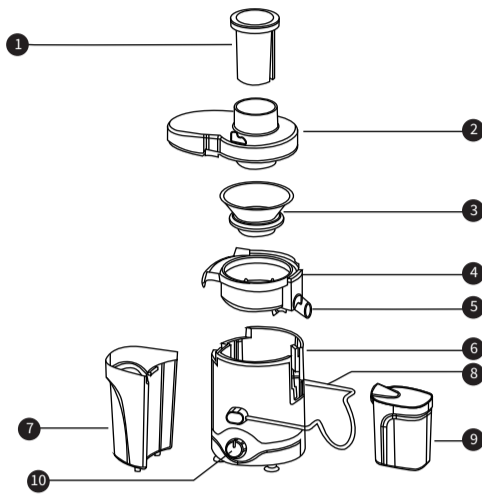

- Food pusher**
For safely pushing whole fruit and vegetables into the professional juicer's feed chute. Dishwasher safe.
- Juicer cover**
Dishwasher safe, duration, clear cover.
- Stainless, micro mesh sieve**
Dishwasher safe.
- Bowl**
Up and down adjustable.
- Juice outlet**
Up and down adjustable.
- Motor base**
High performance, 400W copper motor.
- Pulp container**
- Safety arm**
- Collection container**
- Power button**





2

How to use



Be careful when handling the stainless-steel sieve. Do not touch the small sharp blades inside the sieve.

Place the motor base on a flat, dry surface such as your kitchen worktop. Ensure that the 3-position switch is in the off (O) position then switch the appliance off at the power outlet and unplug the cord.

1. Fit the bowl onto the motor base. The spout on the filter bowl should be on the same side of the motor base as the safety locking arm.
2. Gently push the sieve down onto the motor base drive coupling until it clicks into place. Make sure that the sieve is fitted securely inside the bowl and onto the drive coupling.
3. Place the juicer cover over a bowl. The feed chute should be positioned over the stainless-steel sieve.
4. Pivot the safety locking arm upwards until it engages with two grooves in the juicer cover. The safety locking arm should now be vertical and locked into place on the top of your juicer. If the arm doesn't fit into place easily, don't force it. Check that you have fitted the juicer cover correctly.
5. Tilt the large pulp container slightly and place it underneath the pulp outlet side of the juicer cover.
6. Fit the lid onto the juice Jug. Position the juicer outlet spout on the right-hand side if your Juicer.
7. Slide the food pusher into the feed chute. The food pusher has a groove in it which must be lined up with the protrusion inside the feed tube.

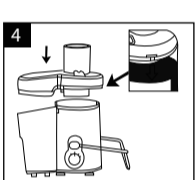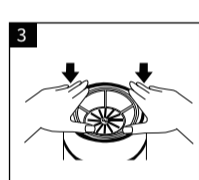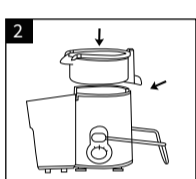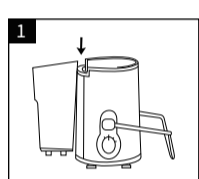

3

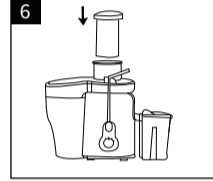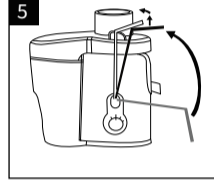

Problem and Solution

Problem	Solution
The appliance does not work.	The appliance is equipped with a safety system. If the parts have not been assembled properly, the appliance does not work. Switch off the appliance and check if the parts have been assembled in the right way.
The appliance slows down during use.	The integrated pulp container has reached its maximum capacity. Switch off the appliance and remove the pulp from the integrated pulp container.
The appliance makes a lot of noise, gives off an unpleasant smell, is too hot to touch, gives off smoke etc.	It is very common for a new appliance to give off an unpleasant smell or emit smoke the first few times you use it. This will stop after you have used the appliance a number of times. The appliance may also give off an unpleasant smell or emit some smoke if you process too many ingredients, if you process very hard ingredients (e.g., leeks) or if you let the appliance operate too long. In these cases, switch off the appliance and let it cool down for 60 minutes.
The filter touches the feeding tube or vibrates strongly during processing.	Switch off the appliance and unplug it. Check if the filter is placed properly in the juice collector. The ribs in the bottom of filter have to fit properly onto the driving shaft. Check if the filter is damaged. Cracks, crazes, a loose grating disc or any other irregularity may cause malfunction.
The filter is blocked	Switch off the appliance, clean the feeding tube and the filter and process a smaller quantity.

4

Cleaning

Do not immerse the motor base, cord or mains plug in water or any liquid. The stainless-steel sieve and feed chute contain sharp parts. Do not touch these parts when handling or cleaning.

- For easy cleaning – immediately after each use rinse removable parts under running water (to remove wet pulp). Allow parts to air dry.
- After disassembling the unit all removable parts may be washed in hot soapy water.
- The juicer cover, bowl, large pulp container, stainless steel sieve and juice jug are dishwasher safe. Only use the top shelf of your dishwasher.
- Wipe the motor base with a damp cloth. Do not immerse the motor base in any liquid.
- Before washing the juicer jug, remove the froth separator by lifting it up and out of the jug. Rinse the jug and separator under running water.
- Discoloration of the plastic may occur with strongly colored fruit and vegetables. To help prevent this, wash parts immediately after use.
- If discoloration does occur, the plastic parts can be soaked in 10% lemon juice and water or they can be cleaned with a non-abrasive cleaner.

5


Handige tips

Dit apparaat kan worden gebruikt door personen vanaf 8 jaar. Personen zonder ervaring of jonger dan 8 jaar dienen het apparaat te gebruiken onder begeleiding, zodat ze de gevaren begrijpen. Het apparaat is niet bedoeld als speelgoed. Check de zeef altijd vóór gebruik op beschadigingen en gebruik het apparaat niet zodra er sprake is van beschadiging. Haal de stekker altijd uit het stopcontact zodra het niet wordt gebruikt, voor het wordt schoongemaakt, of voor er onderdelen worden ge(de)monteerd. Als de stroomkabel is beschadigd, dien je het apparaat niet meer te gebruiken. Dit kan namelijk erg gevaarlijk zijn.

- Gebruik het apparaat niet voor iets anders dan waarvoor het bedoeld is. Het is slechts bedoeld voor huishoudelijk gebruik. Gebruik het apparaat niet buiten huis.
- Zorg dat je handen droog zijn bij het aanzetten van het apparaat en het aansluiten van de stroomkabel.
- Zorg voor een stabiele, veilige en droge ondergrond bij het gebruik van het apparaat.
- Houd het apparaat weg bij (mogelijke) hete oppervlaktes zoals bijvoorbeeld een kookplaat.
- Dompel het apparaat niet onder in water en houd de kabel weg bij water.
- Laat de kabel niet hangen over de rand van een oppervlakte en houd het weg bij hitte. Voorkom knopen of knelling in de kabel.
- Gebruik het apparaat niet meer zodra het is gevallen, het lekt of als er zichtbare schade aanwezig is.
- Gebruik geen onderdelen van andere apparaten. Dit kan schade aan het apparaat toebrengen.
- Zet het apparaat uit voordat onderdelen worden verwisseld of voordat draaiende onderdelen worden aangeraakt.
- Wacht tot de bewegende onderdelen stilstaan voordat het apparaat wordt geopend of schoongemaakt.
- Stop nooit vingers (of andere lichaamsdelen) of andere objecten in het persvat. Gebruik altijd de stamper.
- Gebruik geen sterke, schurende of bijtende schoonmaakmiddelen om het apparaat schoon te maken.

6

Onderdelen

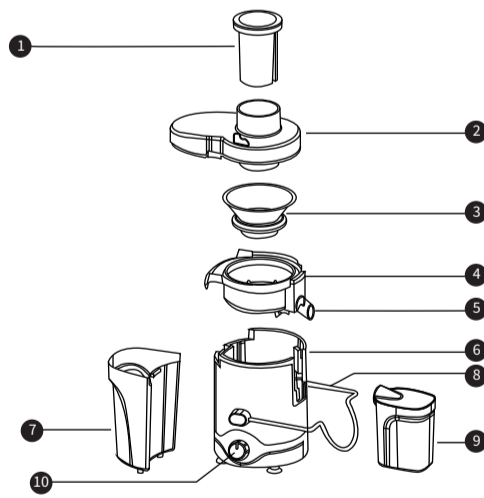

- Voedselbuis**
Voor het veilig aanduwen van fruit en groentes in de juicer. Vaatwasser bestendig.
- Juicer deksel**
Vaatwasser bestendig, duurzaam en doorzichtig.
- RVS zeef met micro mazen**
Vaatwasser bestendig.
- Kom**
Vaatwasser bestendig.
- Schenktuit**
Naar boven en beneden af te stellen.
- Motorbasis**
400W koperen motor / 120V-60Hz
- Pulpcontainer**
- Veiligheidsarm**
- Opvangbak**
- Aan/uitknop**





7

Hoe te gebruiken



Wees voorzichtig met het gebruik van de RVS zeef. Raak de scherpe bladen in de zeef niet aan.

Plaats het apparaat op een platte en droge ondergrond. Zorg dat het apparaat uit staat voordat het apparaat in elkaar wordt gezet.

1. Plaats de kom op de motorbasis. Het tuitje moet zitten aan de kant van de veiligheidsarm.
2. Druk de zeef zachtjes op de motorbasis totdat je een klik hoort. Verzeker dat de zeef stevig is geïnstalleerd.
3. Plaats de juicer deksel op de kom.
4. Draai de veiligheidsarm naar boven totdat het met de groeven opgelijnd is. De arm zal nu verticaal moeten staan en vastgezet zijn. Als de veiligheidsarm niet past, gebruik geen extra kracht. Check dan of andere onderdelen juist zijn geïnstalleerd.
5. Kantel de pulpcontainer en plaats het onder het pulptuitje.
6. Plaats de voedselbuis op het apparaat en plaats de sap opvangbak onder de schenkuit.
7. Schuif de stamper in de voedselbuis. De stamper heeft groeven, welke opgelijnd moeten zijn met die in de voedselbuis.

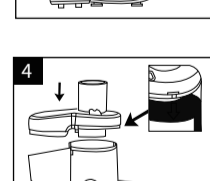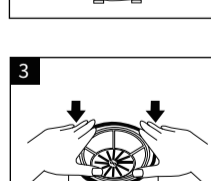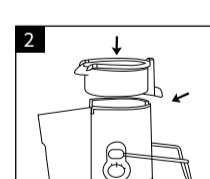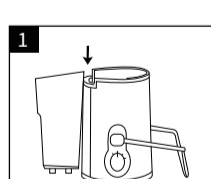

8

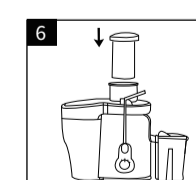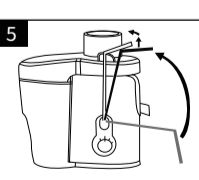

Problemen en oplossingen

Probleem	Oplossing
Het apparaat werkt niet.	Het apparaat heeft een veiligheidssysteem. Als de onderdelen niet goed zijn geïnstalleerd, zal het apparaat niet werken. Doe het apparaat uit en kijk of de onderdelen op de juiste manier zijn geïnstalleerd.
Het apparaat gaat trager werken tijdens gebruik.	De pulpcontainer heeft de maximale capaciteit bereikt en zit vol. Doe het apparaat uit en haal de pulp uit de container.
Het apparaat maakt erg veel lawaai, geeft een nare geur, is te heet of geeft rook af.	Het is normaal voor een apparaat om in het begin een bijzondere geur of een beetje rook af te geven. Dit zal stoppen na vaker gebruik. Bij (te lang) gebruik van te veel of te harde ingrediënten kan dit ook het geval zijn. In dit geval zet je het apparaat uit en laat je het 60 seconden afkoelen.
Het filter raakt de voedselbuis of vibreert tijdens het gebruik.	Doe het apparaat uit en haal de stekker uit het stopcontact. Check of de voedselbuis is geplaatst. Check ook of het filter is beschadigd. Scheuren of een losse rasp schijf kunnen de oorzaak zijn.
Het filter wordt geblokkeerd.	Doe het apparaat uit en haal de stekker uit het stopcontact. Maak de voedselbuis en het filter schoon en probeer een kleinere hoeveelheid ingrediënten te gebruiken.

9

Schoonmaken

Dompel het apparaat niet onder in water of andere vloeistoffen. De RVS zeef en de voedselbuis hebben scherpe onderdelen. Raak deze niet aan bij gebruik.

- Spoel de verwijderbare onderdelen af onder de kraan om het makkelijker schoon te maken. Laat de onderdelen daarna wel goed drogen.
- Nadat het apparaat uit elkaar is gehaald, kun je het wassen met water en zeep.
- De deksel, de kom, de pulpcontainer, de zeef en de opvangbak zijn vaatwasser bestendig. Leg deze boven in de vaatwasser.
- Maak de motorbasis schoon met een vochtige doek, maar dompel het niet onder in water.
- Voordat je de sap opvangbak schoonmaakt, verwijder je de schuifscherm door het op te tillen en eruit te halen.
- Was de onderdelen direct na gebruik om kleurverandering van het plastic te voorkomen. Het plastic kan verkleuren door het gebruik van ingrediënten met een sterke kleur.
- Als er toch kleurverandering optreedt, kun je een mix van water en 10% citroensap gebruiken. Gebruik geen bijtend schoonmaakmiddel.

10