


1. Dutch version

LARGOLASH MULTI STYLER

Gebruiksaanwijzingen

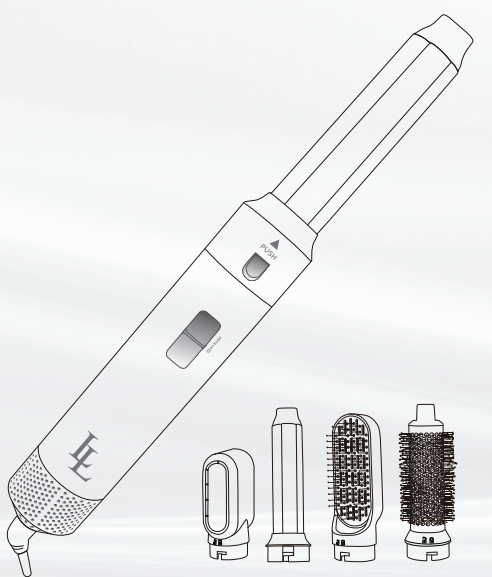


Lees de volgende instructies zorgvuldig door, zodat u kunt genieten van uw Largolash Airwrap.

VEILIGHEIDSMATREGELEN

- Voordat u de stekker van het apparaat in het stopcontact steekt, dient u te controleren of de op de aangegeven spanning overeenkomt met de spanning bij u thuis.
- Als het netsnoer beschadigd is, moet het worden vervangen door de fabrikant om gevaar te voorkomen.
- Wanneer de haardroger in een badkamer wordt gebruikt, moet de stekker uit het stopcontact worden gehaald, aangezien de nabijheid van water gevaar oplevert, zelfs wanneer de haardroger is uitgeschakeld.
- Voor extra bescherming moet een aardlekschakelaar (RCD) worden geïnstalleerd met een reststroom van maximaal 30mA aan te bevelen in het elektrische circuit dat de badkamer van stroom voorziet. Vraag uw installateur om advies.
- WAARSCHUWING** - Gebruik dit apparaat niet in de buurt van badkuipen, douches, wastafels of andere vaten die water bevatten.
- Gebruik de haardroger niet voor andere doeleinden dan beschreven in deze handleiding.
- Dit apparaat kan worden gebruikt door kinderen vanaf 8 jaar en personen met verminderde fysieke, zintuiglijke of mentale capaciteiten of gebrek aan ervaring en kennis indien zij onder toezicht staan of instructie hebben gekregen over het gebruik van het op een verantwoorde manier en de gevaren ervan begrijpen. Kinderen mogen niet spelen met het apparaat. Reiniging en gebruikersonderhoud mogen niet door kinderen worden uitgevoerd zonder toezicht.
- Niet buitenshuis gebruiken.
- Haal altijd de stekker van de haardroger uit het stopcontact wanneer deze niet in gebruik is en voor het schoonmaken.
- Dompel het apparaat niet onder in water of andere vloeistoffen om het risico van elektrische schokken te voorkomen.
- Spuut geen aerosol producten in de haardroger.
- Laat de Largolash Airwrap niet aan wanneer deze niet in gebruik is.
- Gebruik geen andere accessoires dan degene die zijn meegeleverd.
- Houd uw haar uit de buurt van de inlaatopening om te voorkomen dat wordt aangetrokken.
- Bewaar de Largolash Airwrap in een donkere en koele ruimte. Gebruik het apparaat niet wanneer u water in uw handen heeft.
- De luchtinlaat- en luchtuitlaatopeningen mogen nooit worden geblokkeerd om te voorkomen dat de luchtstroom wordt belemmerd.
- Let op: Als de luchtstroom tijdens het gebruik echter per ongeluk wordt geblokkeerd, zal de ingebouwde ingebouwde thermische beveiliging het apparaat automatisch uitschakelen. De haardroger zal na enkele minuten afkoelen automatisch weer inschakelen.

PRODUCT OMSCHRIJVING

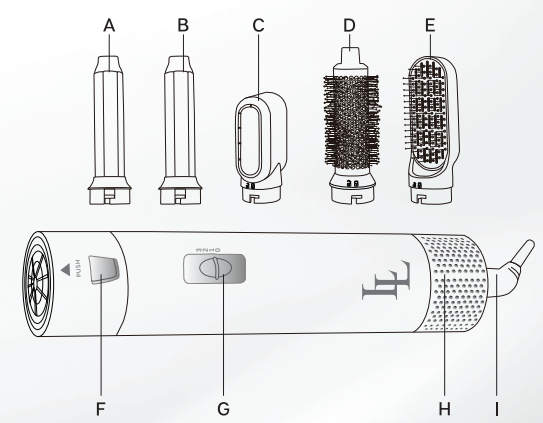

A: Hitte Bescherming
B: Hete lucht krultang (30mm)
C: Pre-styler
D: Krulborstel
E: Stijlborstel
F: Ontgrendelingsknop
G: Aan-uit knop / Temperatuurregeling (55 °C -80 °C -105 °C)
H: Luchttoevoer / Luchtfilter
I: Ophang lus

HOE DE OPZETSTUKKEN TE GEBRUIKEN

A. Zorg ervoor dat het teken "●" van het hulpstuk en het teken "▲" van het apparaat op één lijn liggen. Draai het hulpstuk met de klok mee tot u een "klik" geluid hoort.

B. Om te verwijderen drukt u op het teken " PUSH ▲ " van het apparaat en draait u het hulpstuk tegen de klok in en trekt u het voorzichtig eruit.

- De opzetstukken 1 & 2 zijn voor het creëren van een strakke krul door middel van hete lucht. De ene krult links om, de ander krult rechts om.
- Opzetstuk 3 is voor het drogen van uw haar. Wanneer uw haar nog compleet nat is, kunt u deze ideaal drogen met dit opzetstuk. Elk haar reageert anders op het krullen met hete lucht.
- Opzetstuk 4 is voor het creëren van een grote, losse krul en voor extra volume.
- Opzetstuk 5 is voor het stijlen van je haar.

Tip: gebruik de Largolash Airwrap op handdoek droog haar. Dit zal voor de beste resultaten zorgen. Resultaten kunnen verschillen per haartype, dus experimenteer zelf wat het beste werkt voor jou.

PRODUCT SCHOONMAKEN

- Het apparaat kan met een droge doek worden schoongemaakt.
- De opzetstukken kunnen worden schoongemaakt met een vochtige doek of door onder de kraan te houden. Let wel op dat u de opzetstukken goed laat drogen voor u deze weer terug plaatst op het artikel.
- Maak het artikel zelf in geen enkel geval schoon door middel van water.

OPSLAG VEILIGHEID


Wanneer het artikel niet wordt gebruikt haal dan de stekker uit het stopcontact.

Wikkel het snoer nooit strak om het artikel wanneer u deze opbergt. Dit kan resulteren in een breuk in de kabel waardoor het artikel niet meer bruikbaar is.

1. English version

LARGOLASH MULTI STYLER

User Manual

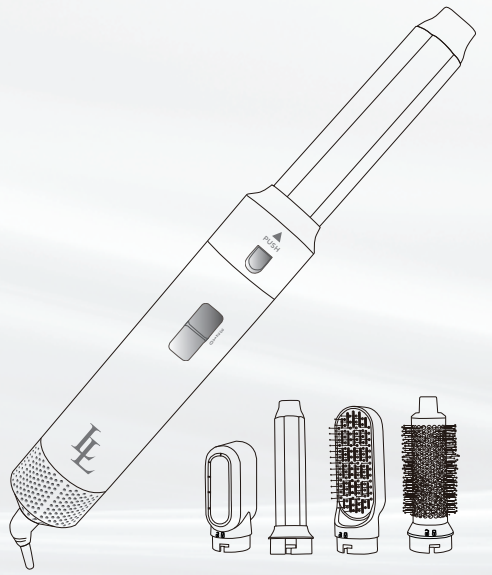


Please read the following instructions carefully so that you can enjoy your Largolash Airwrap

SAFETY MEASURES

- Before plugging in the unit, check that the voltage indicated on the unit matches the voltage at your home.
- If the power cord is damaged, it must be replaced by the manufacturer to avoid danger.
- When the hairdryer is used in a bathroom, the power cord must be unplugged, as the proximity of water poses a hazard even when the Largolash multi styler is turned off.
- For additional protection, a residual current device (RCD) should be installed with a residual current of no more than 30 mA recommended in the electrical circuit supplying the bathroom. Ask your installer for advice.
- WARNING** - Do not use this appliance near bathtubs, showers, sinks or other vessels containing water.
- Do not use the hair dryer for purposes other than those described in this manual.
- This appliance may be used by children 8 years of age and older and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are supervised or have received instruction on how to use it wisely and understand the hazards involved. Children must not play with the device. Cleaning and user maintenance should not be performed by children without supervision.
- Do not use outdoors.
- Always unplug the hair dryer when not in use and before cleaning.
- Do not immerse the appliance in water or other liquids to avoid the risk of electric shock.
- Do not spray aerosol products into the hair dryer.
- Do not leave the Largolash Airwrap on when not in use.
- Do not use accessories other than those provided.
- Keep your hair away from the inlet opening to prevent attraction.
- Store the Largolash Airwrap in a dark and cool place. Do not use the device when you have water in your hands.
- The air inlet and air outlet openings should never be blocked to prevent airflow from being obstructed.

Note:
However, if the airflow is accidentally blocked during use, the built-in thermal safety device will automatically turn off the device. The hair dryer will automatically turn back on after a few minutes of cooling.

PRODUCT DESCRIPTION

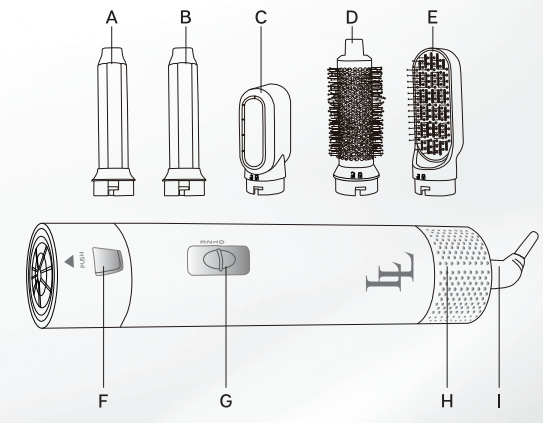

A: Heat protection tip
B: Hot-air curling iron (30mm)
C: Pre-styler
D: Curling brush
E: Styling brush
F: Release button
G: On-off button / Temperature control (55 °C -80 °C -105 °C)
H: Air supply / Air filter
I: Hanging loop

HOW TO USE THE ATTACHMENTS

A. Make sure the "●" sign of the attachment and the "▲" sign of the device are aligned. Turn the attachment clockwise until you hear a "click" sound.

B. To remove, press the " PUSH ▲ " sign of the device and rotate the attachment counterclockwise and gently pull it out.

- The attachments 1 & 2 are for creating a tight curl using hot air. One curls to the left, the other curls to the right.
- Attachment 3 is for drying your hair. When your hair is still completely wet, you can dry it ideally with this attachment. Every hair reacts differently to hot air curling.
- Attachment 4 is for creating a large, loose curl and for extra volume.
- Attachment 5 is for styling your hair.

Tip: Use the Largolash Airwrap on towel dry hair. This will provide the best results. Results may vary by hair type, so experiment for yourself what works best for you.

PRODUCT CLEANING

- The device can be cleaned with a dry cloth.
- The attachments can be cleaned with a damp cloth or by holding under the faucet. Be sure to let the attachments dry thoroughly before placing them back on the item.
- Under no circumstances clean the article itself by using water.

STORAGE SAFETY

When the item is not in use, unplug it.

Never wrap the cord tightly around the item when storing it. This may result in a break in the cord rendering the item unusable.

ITEMPERATURE LEVEL SETTINGS

0: Off
1: Moderate temperature for gentle drying and styling
2: High temperature for medium drying and styling
3: Highest temperature for fast drying and styling

WARRANTY INFORMATION

The manufacturer provides warranty in accordance with the laws of the country of residence of the customer, with a minimum of 1 year, from the date the appliance was sold to the end user.

The warranty covers only material and manufacturing defects. Warranty repairs should only be performed by an authorised service centre. When making a warranty claim, the original purchase receipt (with purchase date) must be shown.

The warranty does not apply in cases of:

- Normal wear and tear.
- Incorrect use, e.g. overloading the unit, use of non-approved accessories or water damage.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the operating instructions, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions.
- Partially or completely disassembled device.

TECHNICAL DATA

Power supply: AC220-240V-50/60HZ
Power: 1000W