

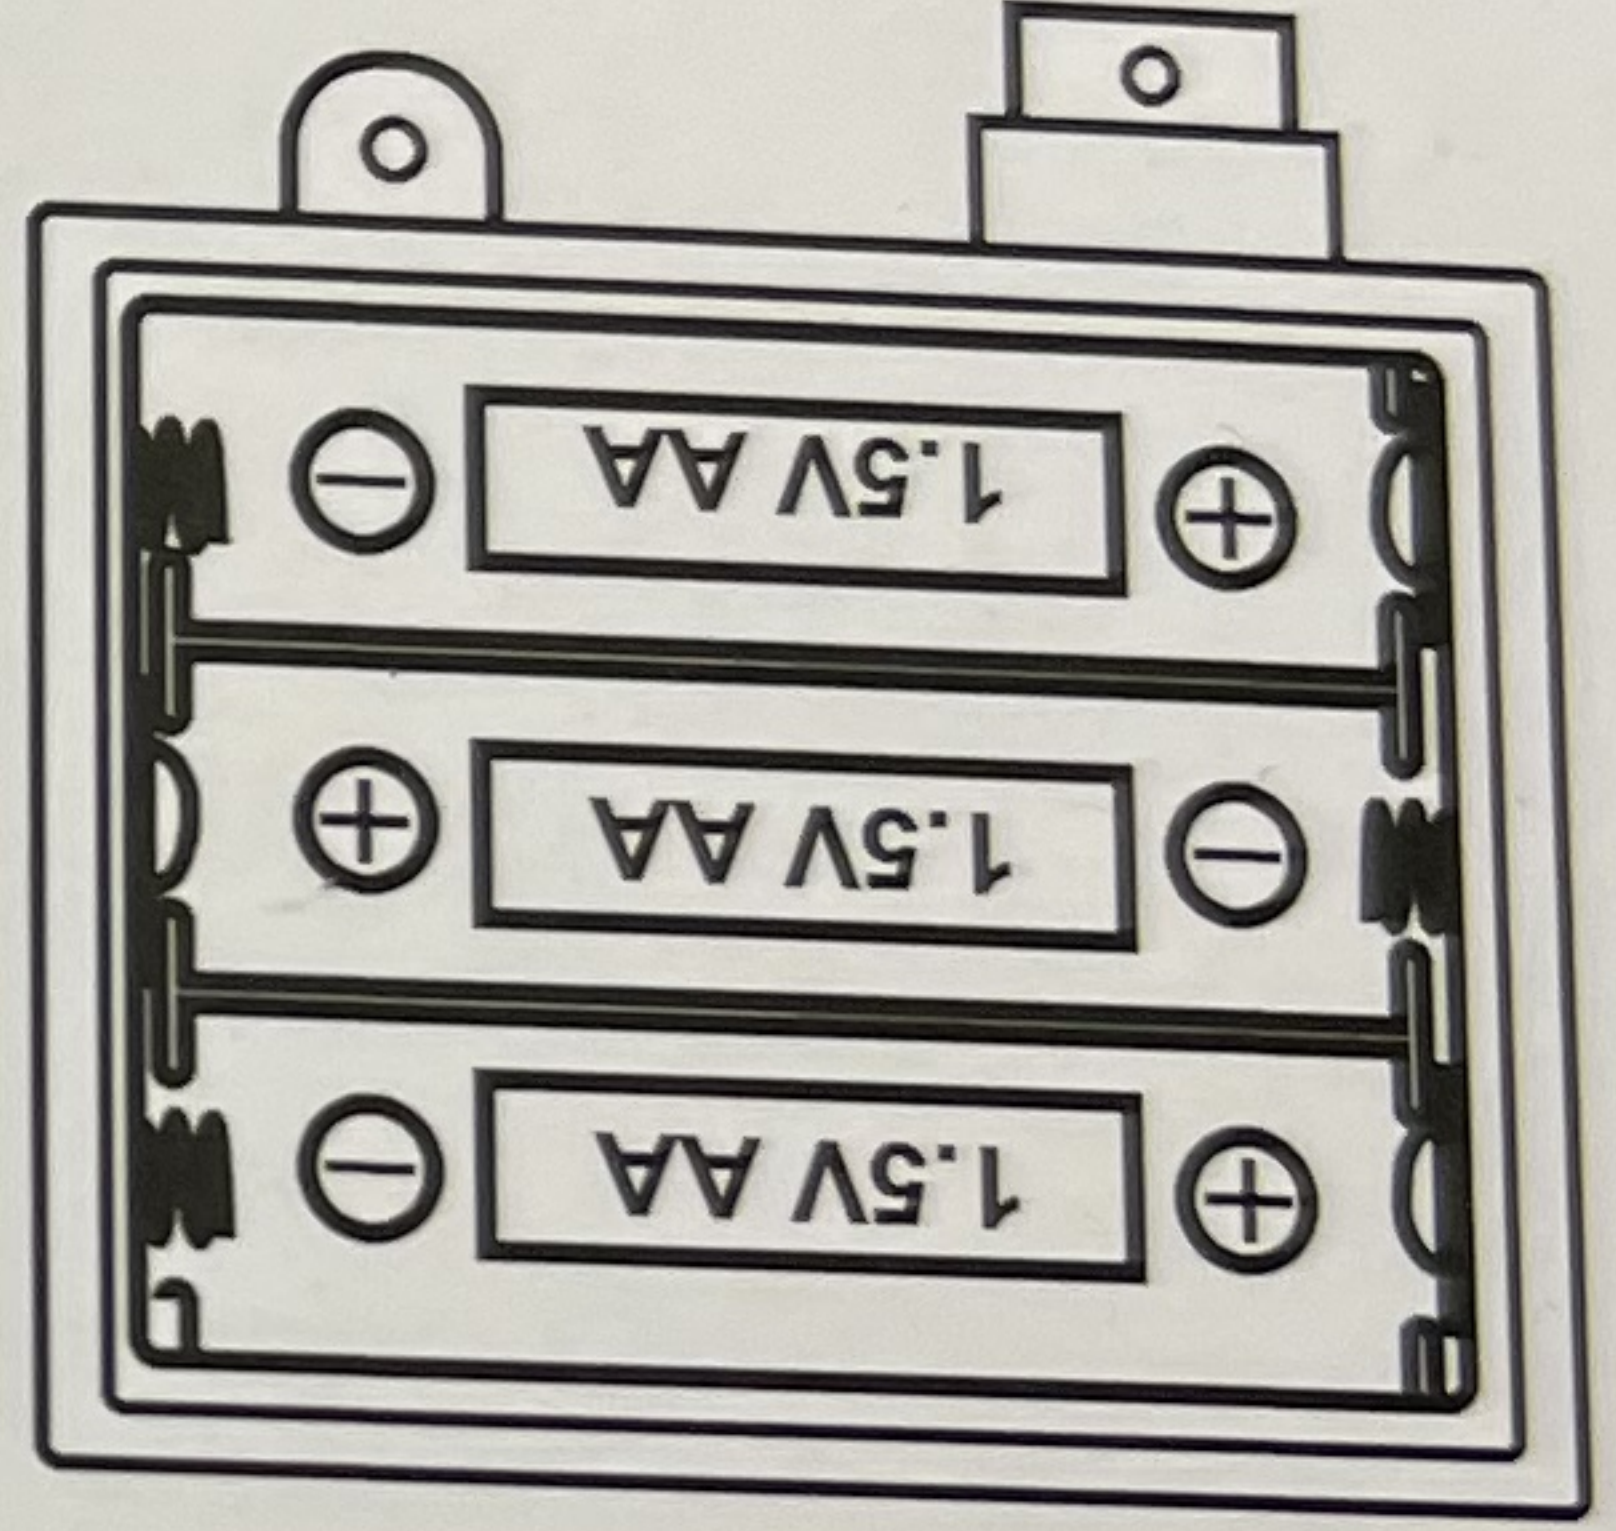


BATTERY INSTRUCTIONS:

only adults should replace batteries
locate the switch on the bottom of toys and
make sure it is off
remove all used batteries from inside the
compartment dispose of used batteries properly
not the polarity(+/-)of the new battery and place
properly inside the compartment

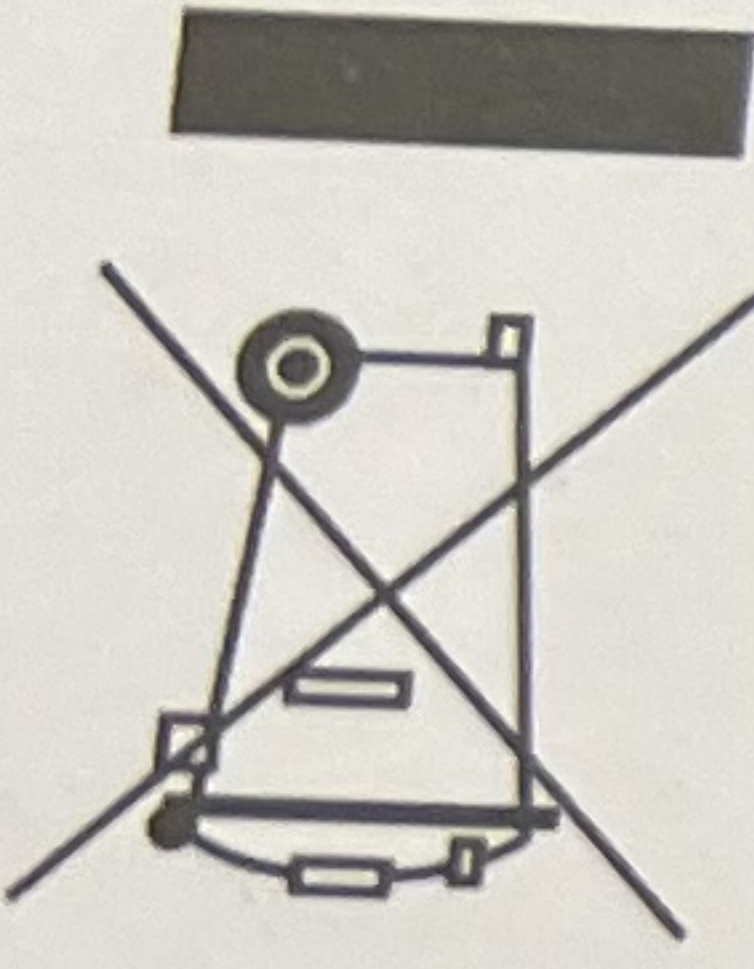

USE 3X1.5V
"AA"
BATTERY

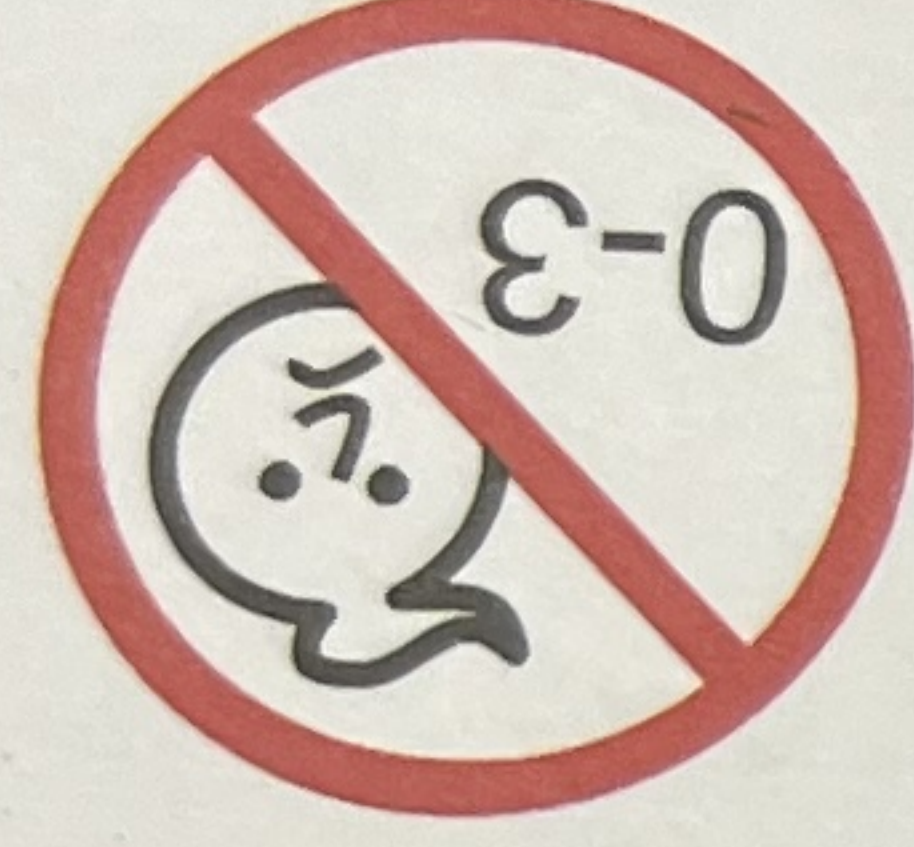

WARNING:

CHOKING HAZARD - Small parts.
Not for children under 3 years.

NOT SUITABLE FOR
CHILDREN UNDER 3 YEARS
DUE TO SMALL PARTS

ممنوع للأطفال تحت سن 3 سنوات
ممنوع للأطفال تحت سن 3 سنوات
ممنوع للأطفال تحت سن 3 سنوات
ممنوع للأطفال تحت سن 3 سنوات
ممنوع للأطفال تحت سن 3 سنوات
ممنوع للأطفال تحت سن 3 سنوات
ممنوع للأطفال تحت سن 3 سنوات
ممنوع للأطفال تحت سن 3 سنوات
ممنوع للأطفال تحت سن 3 سنوات
ممنوع للأطفال تحت سن 3 سنوات

COUNTRY OF ORIGIN: CHINA
بلد المنشأ: الصين