120x130mm

CE 25 2531 UK CA 25 8504

Domestic flueless space heater				
Model				
Gas type	Butane (G30), Propane (G31) or their mixtures			
Category (cat.)	I3B/P(30)	I3+(28-30/37)	I3B/P(50)	I3B/P(37)
Pressure	30mbar	28-30/37mbar	50mbar	37mbar
Countries of destination	LU,NL,DK,FI,SE,CY,CZ,EE,LT,LV,MT,SK,SI,BG,IS,NO,TR,HR,RO,IT,HU	BE,FR,IT,LU,LV,IE,GB,GR,PT,ES,CY,CZ,LT,SK,CH,SI	AT,DE,CH,SK	PL
Heating range	3 Levels (4200W/ 2750W/ 1500W)			
Total heat input	4.2kW (306g/h)			

Manufactured for Fontron Ltd,
1 Ravnogor str, 1756 Sofia, Bulgaria
www.fontron.com;e-mail: fontron@abv.bg

Distributor: NJ Commerce Ltd,
Unit C2 Old Church Road, CV6 7NB Coventry, UK
www.nj-commerce.com

Warning: Read the instructions before using this appliance!
This appliance requires a flexible rubber hose and regulator to be fully operational, please check with your gas supplier.
Use the gas heater in a well ventilated area.
Do not use in leisure vehicles such as caravans or campervans.
Do not position the appliance close to walls, furniture, hangings, net curtains, bed linen and other flammable materials as it may be hazardous to your health.
If gas leakage is detected, turn off the gas supply at the gas cylinder, remove the rubber hose from the appliance and immediately reach out to our After-Sales Service.
After usage, close the gas valve at the gas cylinder the to stop the flow of gas to the appliance.
Please check regularly if you have enough gas in your cylider in order to oprerate with the appliance properly.
WARNING: The gas cylinder should be changed in accordance with instructions provided.

Operation Instructions (for gas heating)

The heater can be regulated to three different heat input stages: 1 (LOW), 2 (MEDIUM) and 3 (HIGH).
The ignition is initiated by piezoelectric push button.

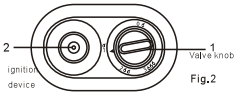


Fig.2

- Open the valve on the gas cylinder 1 ½ turns.
- Press down and turn the control knob to LOW position and hold for at least 10 seconds.
- While still pressing down the control knob, press the ignition button until the pilot flame is ignited and the middle burner is lit. Continue to hold the control knob down for another 10-15 seconds more, if the pilot flame goes out when the control know is released, please repeat the operation.
- After the middle burner has been ignited, rotate the control knob to" 2 " for MEDIUM rate or " 3 " for HIGH rate as you wish.