


SANGEAN




PR-D4

FM / MW PLL Synthesized Receiver

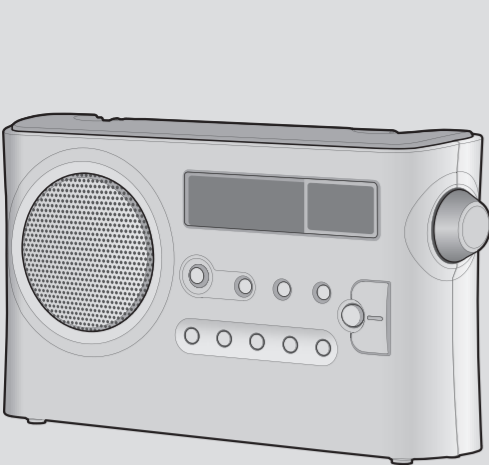

3AB1WG10001A

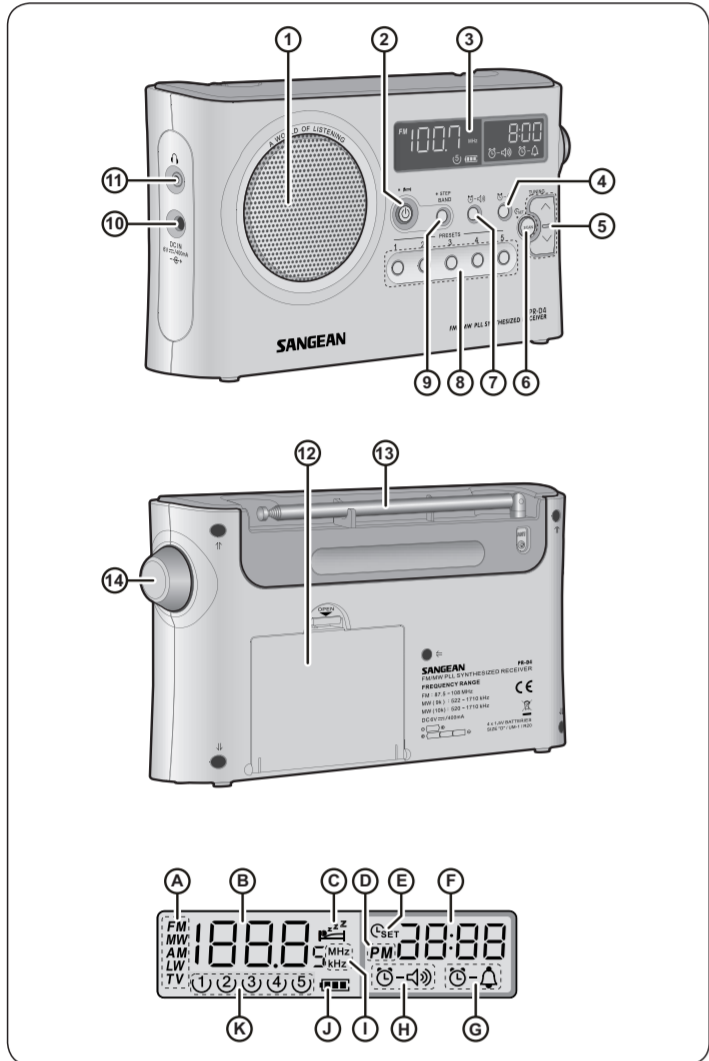

GB Operating instruction

Important safety instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments / accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- To Reduce the Risk of Fire or Electric Shock, Do not Expose This Appliance To Rain or Moisture.
- The Shock Hazard Marking and Associated Graphical Symbol is provided on the bottom panel of unit.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, shall not be placed on the apparatus.

Controls	
① Speaker	⑩ Preset buttons
② Power button	⑪ Band and Tuning step selection
③ LCD display	⑫ DC input socket
④ Buzzer alarm set	⑬ Headphone socket
⑤ Tuning Up / Down	⑭ Battery compartment
⑥ Scan tuning and Time setting	⑮ Telescopic aerial
⑦ Radio alarm set	⑯ Volume Control
LCD display	
Ⓐ Band indicator	Ⓜ Buzzer alarm
Ⓑ Frequency	Ⓨ Radio alarm
Ⓒ Sleep and snooze status	Ⓩ Frequency unit
Ⓓ PM for clock	ⓐ Battery power
Ⓔ Time set	ⓑ Preset stations
ⓓ Clock	

Battery operation

- Remove the battery cover on the rear of the unit by pressing the catch.
- Insert four UM-1 (D size) batteries into the spaces in the compartment.
- Take care to ensure all batteries are inserted with correct polarity as shown on the rear cabinet. Replace the battery cover.
- Reduced power, distortion and a "stuttering sound" or low battery sign is flashing with an "E" shown on the display are all signs that the batteries need replacing.
- If the radio is not to be used for any extended period of time, it is recommended that the batteries are removed from the radio.

Using AC power adaptor (not supplied in some markets)

The AC power adaptor required for this unit should be 6 volts DC at 400mA center pin positive.

Insert the adaptor plug into the DC socket on the left side of the radio. Plug the adaptor into a standard mains socket outlet. Whenever the adaptor is used, the batteries are automatically disconnected. The AC adaptor should be disconnected from the main supply when not in use.

Setting the clock

- Clock can be set either the radio is power on or off.
- Display will show " " when the batteries are installed or when the radio is connected to the mains supply.

- Press the ⏪ button for more than 2 seconds, display will flash time set symbol ⏰ and also the hour digits, followed by a beep.

- Press Tuning Up / Down buttons to set the required hours.
- Press ⏪ button, the minute digits will flash.
- Press Tuning Up / Down buttons to set required minute.
- Press the ⏪ button to complete time setting.

Operating the radio

This radio is equipped with three tuning methods - Scan tuning, Manual tuning and Memory presets recal.

Scan tuning

- Press the Power button to turn on the radio.
- Select the required waveband by pressing the Band button. For FM band fully extend and rotate telescopic aerial to get best reception. For MW (AM) band, rotate the radio to get best signal.
- Press and release Scan button (long press Scan button more than 2 seconds will activate time setting), the radio will up search and stop automatically when it finds a radio station. Press the Scan button again to pick up the found station.
 - ⚠ **NOTE** The radio will continue to search next available stations if you do not press Scan again when it finds a radio station.
- Rotate the Volume control to get required sound level.
- To turn off the radio, press the Power button. Display will show OFF.

Manual tuning / station searching

- Press the Power button to turn on the radio.
- Select the required waveband by pressing the Band button. Adjust the antenna as described above.
- A single press on either the Tuning up or down button will change the frequency in the following increments: FM: 50 or 100 kHz MW: 9 or 10 kHz
- Press and hold either Tuning Up or Down button until the frequency in the display begins to change rapidly. Release the button. Your radio will search the selected waveband and stop automatically when it finds a station of sufficient strength.
- Rotate the Volume control to get required sound level.
- To turn off the radio, press the Power button. Display will show OFF.

Storing stations in preset memories

There are 5 memory presets for each waveband.

- Press the Power button to turn on the radio.
- Tune to required station using one of the methods previously described.
- Press and hold down the required preset until the radio beeps. The preset number will appear in the display and the station will be stored under chosen preset button.
- Repeat this procedure for the remaining presets.
- Stations stored in preset memories can be overwritten by following above procedures.

Recalling stations from preset memories

- Press the Power button to turn on the radio.
- Select the required waveband.
- Momentarily press the required Preset button, the preset number and station frequency will appear in the display.

Setting the radio alarm

When the radio alarm is selected, the radio will turn on and play the chosen radio station at the chosen alarm time. The radio alarm will continue for one hour unless turned off by pressing the Power button. Press the Power button whilst the alarm is activated will cancel the alarm for 24 hours.

⚠ **NOTE** Radio alarm can be activated only until both radio alarm time and radio alarmed station are set. Radio alarm will be automatically switched buzzer alarm when the radio is in low battery status or the selected radio alarm station signal is too weak.

- Setting the radio alarm**
 - The radio alarm can be set when radio is on or off.
 - Press and hold the radio alarm button until the radio alarm symbol flashes on the display followed by a beep.
 - Press the Tuning up / down button to select the desired hour and press the Time setting button to confirm hour setting.
 - Press the Tuning up / down button to select the desired minute and press the Time setting button to confirm minute setting.
 - While radio alarm symbol is flashing, press the Tuning up / down to select desired wake-up band and station, then press the Time setting button to confirm the selection. Radio alarm setting is now completed.
- When the alarm sounds**
 - To cancel a sounding alarm, press the Standby button to cancel a sounding alarm.
- Disabling / cancelling alarm setting**
 - To cancel the radio alarm setting, press and hold the radio alarm button for 2 seconds (followed by a beep) before the alarm sounds off.

- ⚠ **NOTE** If new radio alarm station is not selected, it will select the last alarm station.
- Setting the HWS (Humane Wake System) buzzer alarm**

A beep tone will activate when selecting the HWS alarm. The alarm beep will increase in volume every 15 seconds for one minute followed by one minute silence before repeating the cycle. The HWS alarm will sound for one hour until turning off by pressing the Power button. Press the Power button whilst the alarm is activated will cancel the alarm for 24 hours.

 - Setting the buzzer alarm**
 - The buzzer alarm can be set when radio is on or off.
 - Press and hold the buzzer alarm button until the buzzer alarm symbol flashes on the display followed by a beep.
 - Press the Tuning up / down button to select the desired hour and press the Time setting button to confirm hour setting.
 - Press the Tuning up / down button to select the desired minute and press the Time setting button to confirm minute setting. Buzzer alarm setting is now completed.
 - When the alarm sounds**
 - To cancel a sounding alarm, press the Standby button to cancel a sounding alarm.
 - Disabling / cancelling alarm setting**
 - To cancel the buzzer alarm setting, press and hold the buzzer alarm button for 2 seconds (followed by a beep) before the alarm sounds off.

Snooze function

1. Whilst the alarm is activated, press any buttons except the Power button will active the snooze function. The radio or HWS buzzer alarm will be silenced with interval of 5 minutes.

- The display will flash both the snooze symbol **zz** and the alarm symbol. The snooze function can be repeatedly during the 1 hour hat the alarms are active.
- Sleep function**

The sleep timer will automatically switch off the radio after a preset time has elapsed.

 - Press and continue to hold down the Power button for more than 2 seconds, followed by beep tone, the display will cycle through the available sleep times in the order 60-45-30-15-120-90-60. Release the Power button when the required sleep time appears in the display. The **M**=1 symbol will appear in the display and the radio will play the last station selected.
 - To cancel the sleep function, press the Power button, the **M**=1 symbol will disappear and radio is off.

- Whilst the alarm is activated, press any buttons except the Power button will active the snooze function. The radio or HWS buzzer alarm will be silenced with interval of 5 minutes.
- The display will flash both the snooze symbol **zz** and the alarm symbol. The snooze function can be repeatedly during the 1 hour hat the alarms are active.

- Whilst the alarm is activated, press any buttons except the Power button will active the snooze function. The radio or HWS buzzer alarm will be silenced with interval of 5 minutes.
- The display will flash both the snooze symbol **zz** and the alarm symbol. The snooze function can be repeatedly during the 1 hour hat the alarms are active.

Display backlight

Press any buttons will illuminate the LCD display for approx. 10 seconds. During scanning stations and alarm activated, will also automatically illuminate the display.

Software version

The software display cannot be altered and is just for your reference.

- Turn off the radio.
- Press the Band / step button for 2 seconds until the software version number (e.g. P01) shown on the display.

Time format

- Continue pressing the Band / step button until "24H" or "12H" shown on the display followed by a beep.
- Press the Tuning up / down button to choose the desired selection and press the Band / step button to confirm the setting.

FM range setting

After the time format is completed, the display will automatically change to FM range setting. Press the Tuning up / down button to choose the desired selection and press the Band / step button to confirm the setting. Options for FM range are as following:

F00: 87.5-108 MHz
F01: 76-90 MHz
F02: 76-108 MHz

Setting Tuning step

- After the FM range setting is completed, the display will switch to tuning step setting. Press the Tuning up / down button to choose the desired FM tuning step (50kHz or 100 kHz) and press the Band / step button to confirm the setting.
- After the confirmation of FM tuning step, press the Tuning up / down button to choose the desired AM tuning step (9kHz or 10 kHz) and press the Band / step button to confirm the setting.

Factory reset


If you wish to completely reset your radio to its initial state this may be performed by following this procedure. By performing a factory reset, all user entered settings will be erased.

Press and hold Preset 5 button and the Power button together until 'dEF' shown on the display followed by an beep. Now the factory reset is completed.

Headphone socket

A 3.5mm headphone socket located on the left-hand of your radio is provided for use with either headphones or an earpiece. Inserting a plug automatically mutes the internal speaker.

⚠ **WARNING** Excessive sound pressure from earphones and headphones can cause hearing loss.

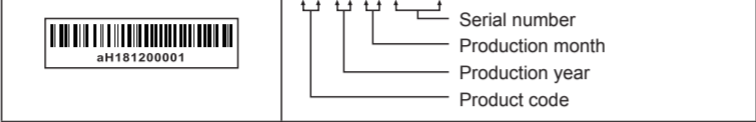Specifications	
Power Requirements	
AC Power adaptor	DC 6V 400mA center pin positive
Batteries	4 x UM-1 (D size)
Battery Life	Approx. 170 hours of listening for 4 hours a day at normal volume using alkaline cells
Frequency Coverage	
FM	87.50-108 MHz
MW	522-1710 kHz (9kHz / step) or 520-1710 kHz (10kHz / step)
Circuit Feature	
Loudspeaker	3 inches 4ohm
Output Power	800mW
Headphone socket	3.5mm dia.
Aerial System	Telescopic aerial
Operating temperature range	0°C to +35°C
※ The barcode label on the product is defined as below:	
	

The company reserves the right to amend the specifications without notice.

⚠ If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive).

F Mode d'emploi

Consignes de sécurité importantes

- Lisez attentivement ces instructions.
- Conservez ces instructions à portée de main.
- Prêtez attention à tous les avertissements.
- Suivez toutes les instructions.
- N'utilisez pas cet appareil à proximité d'eau ou dans un environnement humide.
- Utilisez un chiffon ou un tissu propre et sec pour nettoyer l'appareil.
- Ne bloquez pas les orifices d'aération. Installez l'appareil conformément aux instructions du fabricant.
- N'installez pas l'appareil à proximité de sources de chaleur (radiateurs, registres de chaleur, poêles et autres appareils, y compris les amplificateurs, qui produisent de la chaleur).
- Ne désactivez pas les dispositifs de sécurité de la fiche polarisée ou avec tige de terre. La fiche polarisée présente deux broches, dont une est plus large que l'autre. La fiche à tige de terre présente deux broches ainsi qu'une tige de mise à la terre. La broche large ou la tige de terre contribuent à votre sécurité. Si la fiche fournie ne convient pas à la prise de courant, adressez-vous à un électricien pour remplacer la prise de courant obsolète.
- Veillez à ce que le cordon d'alimentation ne puisse être écrasé ou coincé, en particulier au niveau des prises, des objets courbés et à son point de raccordement à l'appareil.
- Utilisez uniquement les cordons et accessoires recommandés par le fabricant.
- Utilisez cet appareil uniquement avec le chariot, le support, le trépied, la console ou la table recommandé par le fabricant ou fourni avec l'appareil. Si vous utilisez un chariot, veillez à ne pas faire basculer l'appareil lors d'un déplacement du chariot.
- Débranchez l'appareil en cas d'orage ou s'il ne doit pas être utilisé pendant une période prolongée.
- Pour toute réparation, adressez-vous à un technicien qualifié. Une révision s'impose lorsque l'appareil a été endommagé d'une quelconque manière, par exemple si le cordon d'alimentation ou la fiche est détérioré, si du liquide s'est répandu ou si des objets ont été introduits dans l'appareil, si l'appareil a été exposé à la pluie ou à l'humidité, s'il ne fonctionne pas normalement ou s'il a subi une chute.
- En raison des risques d'incendie ou de choc électrique, n'exposez jamais cet appareil à la pluie ou à l'humidité.
- La marque de risque de choc électrique et le symbole graphique correspondant sont apposés sur la plaque de fond de l'appareil.
- Protégez cet appareil contre toutes gouttes, tout ruissellement et toute éclaboussure. Aucun objet contenant du liquide ne doit y être déposé.

Commandes	
① Haut-parleur	⑩ Boutons des présélections
② Marche / Arrêt	⑪ Bande de fréquences et Echelle de syntonisation
③ Écran à cristaux liquides	⑫ Prise d'alimentation CC
④ Réglage de l'alarme par sonnerie	⑬ Prise casque
⑤ Syntonisation Haut / Bas	⑭ Compartiment à piles
⑥ Balayage et Réglage de l'horloge	⑮ Antenne télescopique
⑦ Réglage de l'alarme radio	⑯ Contrôle du Volume
Écran LCD	
Ⓐ Indicateur de Bande	ⓕ Horloge
Ⓑ Fréquence	Ⓢ Alarme sonnerie
Ⓒ Indicateur d'Arrêt programmé et de Rappel de l'alarme	Ⓣ Alarme radio
Ⓓ Indication d'horloge PM (après-midi)	Ⓤ Unité des fréquences
Ⓔ Réglage de l'horloge	ⓖ Niveau de charge des piles
	ⓗ Présélections de stations

Fonctionnement sur piles

- Retirez le couvercle du compartiment à piles à l'arrière de l'appareil, en appuyant sur le crochet.
- Insérez quatre piles D (UM-1) dans les emplacements prévus dans le compartiment. Replacez le couvercle du compartiment à piles.
- Les pertes de puissance, les distorsions, un «son saccadé» et le voyant de piles faibles (un «E» clignotant sur l'afficheur) indiquent que les piles doivent être remplacées.
- Si vous ne comptez pas utiliser la radio pendant une longue période, il est conseillé de retirer les piles de l'appareil.

Utilisation de l'adaptateur secteur (non fourni dans certains pays)

L'adaptateur secteur utilisé avec cet appareil doit fonctionner sur 6 volts CC à 400mA à broche centrale positif.

Insérez la fiche de l'adaptateur dans la prise CC sur le côté gauche de la radio. Branchez l'adaptateur sur une prise secteur standard. Lorsque l'adaptateur est utilisé, les piles sont automatiquement déconnectées. L'adaptateur secteur doit être débranché de l'alimentation secteur lorsqu'il n'est pas utilisé.

Réglage de l'horloge

- L'horloge peut être réglée que la radio soit allumée ou éteinte.
- Une fois les piles installées dans l'appareil ou lorsque la radio est branchée à l'alimentation secteur, l'afficheur indique " "
- Appuyez pendant plus de 2 secondes sur le bouton ⏪. Le symbole de réglage de l'horloge ⏰ et les chiffres des heures clignotent à l'écran et l'appareil émet un bip.
- Utilisez les boutons Tuning Haut / Bas pour régler les heures.
- Appuyez sur le bouton ⏪. Les chiffres des minutes clignotent.
- Utilisez les boutons Tuning Haut / Bas pour régler les minutes.
- Appuyez sur le bouton ⏪ pour terminer le réglage de l'horloge.

Utilisation de la radio

Cette radio propose trois méthodes de réglage des stations - Balayage des fréquences, Réglage manuel et Rappel des stations mémorisées.

Balayage des fréquences

- Appuyez sur le bouton Power (marche / arrêt) pour allumer la radio.
- Choisissez une bande de fréquences à l'aide du bouton Band. Pour la réception de stations FM, étirez complètement l'antenne télescopique et orientez-la de sorte à obtenir une réception optimale. Pour la réception des stations de la bande MW (AM), tournez l'appareil jusqu'à obtenir un signal de qualité.
- Appuyez brièvement sur le bouton Scan (la fonction de réglage de l'horloge s'active lorsque le bouton Scan est enfoncé pendant plus de 2 secondes). L'appareil lance la recherche en montant dans les fréquences et s'arrête automatiquement lorsqu'il trouve une station. Appuyez une nouvelle fois sur le bouton Scan pour rester sur la station trouvée.

- ⚠ **REMARQUE** Si vous n'appuyez pas à nouveau sur le bouton Scan lorsque la radio trouve une station, la recherche continuera jusqu'à la prochaine station disponible.
- Tournez le bouton de réglage du Volume sonore au niveau souhaité.
- Pour éteindre la radio, appuyez sur le bouton Power (marche / arrêt). L'indication OFF apparaît à l'écran.

Réglage manuel des stations

- Appuyez sur le bouton Power (marche / arrêt) pour allumer la radio.
- Choisissez une bande de fréquences à l'aide du bouton Band. Réglez l'antenne comme décrit plus haut.
- Une simple pression sur les boutons Tuning Haut / Bas change les fréquences selon les incréments suivants: FM: 50 ou 100 kHz MW (AM): 9 ou 10 kHz
- Maintenez appuyé le bouton Tuning Haut / Bas jusqu'à ce que la fréquence affichée à l'écran commence à changer rapidement. Relâchez le bouton. La radio cherche sur la bande de fréquences choisie et s'arrête automatiquement lorsqu'elle trouve une station avec un signal suffisamment fort.

- Tournez le bouton de réglage du Volume sonore au niveau souhaité.

- Pour éteindre la radio, appuyez sur le bouton Power (marche / arrêt). L'indication OFF apparaît à l'écran.

Mémoriser des stations dans les présélections

5 présélections peuvent être mémorisées pour chaque bande de fréquences.

- Appuyez sur le bouton Power (marche / arrêt) pour allumer la radio.
- Réglez la radio sur la station souhaitée en utilisant l'une des méthodes décrites plus haut.
- Maintenez appuyé le bouton de présélection désiré jusqu'à entendre un bip. Le numéro de présélection s'affiche à l'écran et la station en cours est mémorisée sous le bouton de présélection choisi.
- Recommencez pour les autres présélections.
- Vous pouvez remplacer les stations déjà mémorisées en répétant la procédure ci-dessus.

Régler la radio sur une station mémorisée

- Appuyez sur le bouton Power (marche / arrêt) pour allumer la radio.
- Choisissez une bande de fréquences.
- Appuyez brièvement sur le bouton de Présélection désiré. Le numéro de la présélection et la fréquence de la station s'affichent à l'écran.

Réglage de l'alarme radio

Lorsque l'alarme radio est activée, la radio s'allume à l'heure réglée sur la station de radio sélectionnée. Lorsque l'alarme radio se déclenche, l'appareil reste allumé pendant une heure sauf si le bouton Power est utilisé. Après l'activation de l'alarme, appuyez sur le bouton Power pour la désactiver pendant 24 heures.

⚠ **REMARQUE** Avant de pouvoir activer l'alarme radio, il est nécessaire de régler l'heure et la station de l'alarme radio. Si les piles de l'appareil sont en charge faible ou si le signal de la station de l'alarme n'est pas assez puissant, l'appareil remplacera l'alarme radio par l'alarme sonnerie.

- Régler l'alarme radio**
 - L'alarme radio peut être réglée lorsque la radio est allumée ou éteinte.
 - Maintenez la touche d'alarme radio jusqu'à ce que le symbole d'alarme radio clignote sur l'écran suivi d'un bip. Puis, appuyez sur Réglage +/- pour sélectionner la date de votre choix et appuyez sur la touche Réglage de l'heure pour confirmer le paramètre.
 - Puis, appuyez sur Réglage +/- pour sélectionner la date de votre choix et appuyez sur la touche Réglage de l'heure pour confirmer le réglage des minutes.
 - Lorsque le symbole d'alarme radio clignote, appuyez sur la touche Réglage +/- pour sélectionner la bande et la station sur laquelle vous souhaitez vous réveiller, puis appuyez sur la touche de Réglage de l'heure pour confirmer la sélection. Le réglage de l'alarme radio est terminé.
- Lorsque l'alarme sonne**
 - Pour annuler une alarme en train de sonner, appuyez simplement sur la touche Veille pour annuler l'alarme qui sonne.
- Désactiver / annuler la configuration des alarmes**
 - Pour annuler le paramètre d'alarme radio, maintenez la touche alarme appuyée pendant 2 secondes (suivie d'un bip) avant que l'alarme ne sonne.

⚠ **REMARQUE** Si une nouvelle station d'alarme radio n'est pas sélectionnée, la dernière station sera sélectionnée.

Réglage de l'alarme par sonnerie progressive HWS

L'activation de l'alarme par sonnerie progressive (Humane Wake System) émet une sonnerie. Le volume de la sonnerie augmente toutes les 15 secondes pendant une minute. Puis, l'appareil reste silencieux pendant une minute avant de répéter le cycle.

L'alarme par sonnerie progressive continue de se déclencher pendant une heure sauf si le bouton Power est utilisé. Après l'activation de l'alarme, appuyez sur le bouton Power pour la désactiver pendant 24 heures.

Régler l'alarme sonnerie

- L'alarme radio peut être réglée lorsque la radio est allumée ou éteinte.
- Maintenez la touche d'alarme sonnerie jusqu'à ce que le symbole d'alarme sonnerie clignote sur l'écran suivi d'un bip. Puis, appuyez sur Réglage +/- pour sélectionner la date de votre choix et appuyez sur la touche réglage de l'heure pour confirmer le paramètre.
- Puis, appuyez sur Réglage +/- pour sélectionner la date de votre choix et appuyez sur la touche Réglage de l'heure pour confirmer le réglage des minutes. Le réglage de l'alarme sonnerie est terminé.

- Lorsque l'alarme sonne**
 - Pour annuler une alarme en train de sonner, appuyez simplement sur la touche Veille pour annuler l'alarme qui sonne.

- Désactiver / annuler la configuration des alarmes**
 - Pour annuler le paramètre d'alarme sonnerie, maintenez la touche alarme appuyée pendant 2 secondes (suivie d'un bip) avant que l'alarme ne sonne.

Fonction de rappel de l'alarme

- Pendant l'activation de l'alarme, vous pouvez appuyer sur n'importe quel bouton hormis le bouton Power pour activer la fonction de rappel de l'alarme. L'alarme radio et la sonnerie progressive est désactivée pendant 5 minutes.
- Le symbole de rappel de l'alarme **zz** et le symbole de l'alarme clignotent sur l'afficheur. La fonction de rappel de l'alarme peut être utilisée plusieurs fois pendant 1 heure, jusqu'à ce que l'alarme se désactive.

Fonction d'arrêt programmé

L'arrêt programmé permet d'éteindre automatiquement la radio après une durée prédéfinie.

- Maintenez le bouton Power appuyé pendant plus de 2 secondes, jusqu'à entendre un bip. Les durées disponibles pour l'arrêt programmé se succèdent sur l'afficheur dans l'ordre suivant: 60-45-30-15-120-90-60. Relâchez le bouton Power lorsque l'écran affiche la durée désirée pour l'arrêt programmé. Le symbole **M**=1 s'allume et la radio poursuit la diffusion de la dernière station écoutée.
- Appuyez sur le bouton Power pour annuler la fonction d'arrêt programmé. Le symbole **M**=1 disparaît et la radio s'éteint.

Rétro-éclairage de l'afficheur

Appuyez sur n'importe quel bouton pour que l'écran s'allume pendant environ 10 secondes. L'afficheur s'allume également pendant le balayage des stations et le déclenchement de l'alarme.

</

