ZF-1886

English

Product introduction

产品介绍

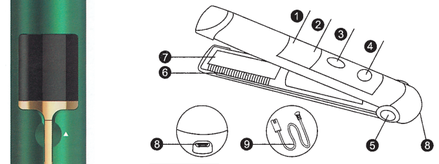

Attentions

1.When charging, plug the USB charging cable into the power plug and then charge the power or the interface.
2.Check the condition of the mains cord regularly .Do not use the appliance if the cord or the appliance itself is damaged.
3.Use the original Fritech USB charging cord. 4.Keep this appliance away from water ,Do not use this product near or over water contained in baths ,washbasins ,sinks etc.
5.For additional protection ,we advise you to install a residual current device (RCD)with a rated residual operation current not exceeding 30mA in the electrical circuit supplying the bathroom.Ask your installer for advice .
6.Keep the appliance out of the reach of children.
7.The plastic parts near the plates reach of children.
8.Dry hair use.
9.Do not leave the plates in your hair for more than a few seconds at a time as this may cause damage to your hair .
10.Keep the appliance away from non-heat-resistant surfaces and never cover the appliance with anything (e.g.towel or clothing) when it is hot.
11. Cordless for use
12.Keep the appliance clean and free of dust ,dirt,styling spray and gel .Never use the appliance in combination with styling mouse ,styling spray ,gel etc.
13.Do not wind the mains cord round the appliance.
14.Keep the heating plates clean and free of dust, dirt, styling spray and gel .Never use the appliance in combination with styling mousse, styling spray, gel etc.
15.Keep the appliance clean and free of dust, dirt, styling spray and gel .Never use the appliance in combination with styling mousse, styling spray, gel etc.
16.Do not leave the unit unattended when it is plugged in or switched on

Warning

警告

不要在盛水的浴缸、淋浴缸、洗脸盆或其他器皿附近使用本器具

The warranty and service

保修与服务

故障排除

Troubleshooting

如果产品出现问题，并且利用以下信息无法解决，请联系本国/本地离您最近的客户服务中心。

产品完全无法工作

The product completely unable to work

1.可能出现电源故障或插座没电。请检查家中的其它电源是否工作。如果工作，请通过插拔其它产品检查插座是否有电。

2.检查产品的电源线是否损坏。

售后服务卡

保修细则：

产品1年质保！(质保1年时间从快递签收日起算)
质保期间，出现非人为损坏的质量问题，我公司承诺免费保修。
1.收到您的产品后，技术组做进一步的质量认定。
2.认定结果出来后，如非人为损坏，是产品本身质量问题，我公司会即使予以维修，若无法维修，我们将为您更换同款产品，如果同款产品已经不再销售，更换产品的市场价格不低于以前产品的市场价格。

如以下情况，不属于质保范围：
1.产品错误使用，或自行拆装修理和造成损坏；
2.人为致产品损坏；
3.因不可抗力造成损坏。

售后服务回执单

购买ID号：_____ 客户姓名：_____
联系方式：_____
购买日期：_____ 购买产品：_____
购买订单编号：_____
您的处理意见：换货□ 退货□
退换货原因：_____
其他建议或意见：_____

邮寄产品请采用快递方式，我们不接受一切邮局包裹、顺丰或到付款的邮寄方式，敬请见谅！

General descriptions

1.温度指示灯
2.电量指示灯
3.温控调节键
4.电源开关
5.锁扣
6.梳齿
7.浮动加热板
8.USB充电口
9.USB充电线

General descriptions

1.Temperature indicator light
2.Charging status display
3.Temperature control button
4.ON/OFF button
5.Lock button
6.Comb
7.Plate
8.USB connection
9.USB cable

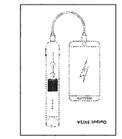

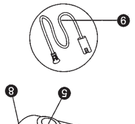

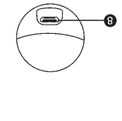

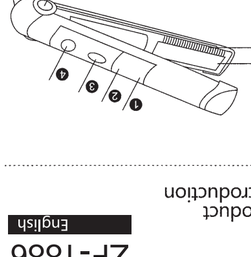

- This product does not support side charge edge use!
- This product can be used as a charge for the bandwhether and other mobile equipment emergency charging!

Reduce static electricity and loose hair

减少静电和乱发

浮动发热板，减少对秀发的摩擦，可随不同力度和方向上下浮动，使头发在夹板之间无缝结合，让每一根发丝都受热均匀。
两边的梳齿能够更加轻易的夹住头发，有效方式卡发扯发断发现象，极大的增强了直发效果。

Cleaning and storage

清洁与存放

始终保持产品关闭和电源断开，请将它放在一个安全的地方并将其冷却。切勿用水冲洗产品。切勿将电源线缠绕在产品上。将本品存放在安全干燥的地方。

Environmental protection

环 保

弃置产品时，诺不要将其与一般生活垃圾堆放在一起；应将其交给官方指定的回收中心，这样有利于环保。

本产品内部配置一个锂电池，为了更好的保护锂电池，延长使用寿命，请在电量低的时候及时充电再使用。
应尽量避免长时间连续充电（<24小时）否则可能缩短电池使用寿命。充满电后可持续放电40分钟（25℃）。

Washing

1.When washing your hair ,wet your hair thoroughly for 30-60 seconds .
2.Pour some shampoo into the palm of your hand.Spread it between your hands and distribut it evenly through the hair .
3.Gently massage your hair and scalp .Do not rough up the hair or pull long hair up oto the scalp .as this may cause tangles .
4.Massage you scalp with your fingertips.This stimulates blood circulation and is gentler to the hair cuticles .
5.Rinse your hair thoroughly ,as poor rinsing can result in dull hair ,Finish with a cold rinse for extra shine.

The flat iron gives the best results on well-washed hair .We advise you to follow the washing tips below:

Drying

1.After washing ,squeeze excess water out of the hair with your hands and then towel-dry the hair .Use a comb to disentangle hair gently from the roots to the tips.
2.Divide the hair into sections by means of clips ,starting at the back.
3.Dry each section by pulling a straightening brush down the hair length while following the brush with the hairdryer ,with its nozzle pointing towards the hair .
4.When your have finished drying each section ,set the hair dryer to the cold setting for a final cold shot ,This closes the cuticles and leavel your hair glossier.
B.Tip :Fritech Salon Pro hair dryers were a lower drying temperature and a stronger airflow than regular dryers .Thanks ato this combination ,Then dry just as quickly as regular hair dryers but in a gentler way.

To get super-smooth results ,it is essentialto prepare your hair for straightening .
Dry you hair properly with a hairdryer to ensure a professional ,smooth finish.

Heating up:

Before plug in the plug,please make sure the voltage is accordance with the voltage rating .Do not plug in the plug,long press the button,the product will begin to work .Upon first use ,the straightener will automatically heat up to 190℃,indicated by 4 solid lights.150℃→170℃→190℃→210℃→230℃.

Press the start/stop button to adjust the temperature to your desired temperature.When the light reach the data of your desired temperature,then you can begin to use the product.

Charging Instructions

充电方法

将电源线插入卷发棒手柄底部
将USB插入电源插头再接电源或电脑USB接口充电。

锂电池容量：2600mAh
充电时间：4小时

Using this product

使用本产品

TA-1809 USB充电美发器
是高功率的造型工具,应小心使用.

此款美发器最高温度可达到205℃，为了防止您的发质受损，请选择与您发质较为适宜的温度，产品使用过后可选择适宜护发产品对头发进行护理。

1.长按电源开关2秒，开机时装置不发热，电单指示灯亮。按下温度调节键选择温度，温度指示灯亮起并闪烁，夹板开始加热。温度达到当前显示数值，闪烁停止。
2.开机后5钮按温度调节键选择温度，默认温度165℃。
共165℃、185℃、205℃三档温度可选。
3.电量指示：满电时，装置电量指示灯区域三格全亮，当仅亮一格指示灯时请及时充电。电量耗尽时，三格指示灯同时闪烁三次后，装置自动关机。
4.USB充电接口采用Micro-USB，兼容市场普通手机充电器、车载充电器、充电宝，充满电时间大约4小时。
5.在直发器闭合的状态下，将锁扣 向内推，直发器处于闭合锁定状态；将锁扣 向内推，直发器张开，即解除锁定状态。
6.给手机等其他移动设备充电时，使用USB充电线，一端插在USB输出接口上，另一端连接待充电的设备商，无需其他操作，即可给外部设备充电。

Preparation for Using

使用准备

想要获得专业的美发效果,必须做好造型前的准备.
请先使用吹风机吹干头发,并使用发梳将头发梳至顺滑不打结.

Operation Guidelines

产品使用说明

1.梳理头发使其顺滑无缠绕。
2.用发梳将头发分为数层，用发夹夹起，并将最下一层头发分为鼓绕。
3.长按电源开关开机。
4.选择适应温度，将直发器放于干燥、平坦的桌面，等待预热至所需温度。
5.从后脑勺开始，选择最下层的一缕头发，发量不宜过厚，将其放在直发加热板之间，握紧夹板，从发根滑至发梢，中间不要停顿，防止部分过热，最下层头发造型完毕之后，再取上一层头发继续造型。
6.如有需要可以重复操作至理想程度。
7.使用完毕后，长按开关键2秒即可关机，等待产品冷却之后再储存。

适宜温度与头发类型

165℃适宜偏软发质
185℃适宜普通发质
205℃适宜偏硬发质

Operation Guidelines

- Separate a bunch of hair and comb them neatly. Place the hair section in the middle of the working face. Folds straight hair device until fluctuation working face can contact each hair.
- Clip the hair and stretch slowly.
- According to the different length and hair quality, the time of stretch a bunch of hair is about 3 to 6 seconds.
- Repeat as necessary to get the ideal effect.
- After use, switch off the appliance. storing away after the straightener cools

Charging instructions

Insert the power cord into the power socket .
Insert the USB charging cord into the power plug and then connect with the power supply or computer .USB interface to charge.

For your reference

Temphair Type

185℃-230℃ Thick, difficult to straighten hair

165℃-170℃ Very fine, fragile, damaged hair

185℃ Normal, easy to straighten hair

Storage

1.Make sure the appliance is switched off and unplugged.
2.Let the appliance cool down on a heat-resistant surface before storing it .
3.Use the closing lock to lock the straightening plates together before storing the appliance .
4.Place the flat iron in the heat-resistant pouch for easy storage and portability.

Never wind the mains cord round the appliance .

Problem

The appliance does not work at all .

1.Perhaps there is a power failure or the socket is not live.Check if the power supply is working .If it is ,check whether the socket is live by plugging in another appliance .
2.Check if the mains cord of the appliance is damaged .If the mains cord is damaged ,it must be replaced by Fritech ,a service centre authorised by Fritech or similarly qualified persons in order to avoid a hazard.

Troubleshooting

If problems should arise with your flat iron and you unable to solve them by means of the troubleshooting guide below ,please contact the nearest Fritech service centre or the Fritech Customer Care Centre in your country.

1.Make sure the appliance is switched off and unplugged.
2.Let the appliance cool down .completely on a heat-resistant surface.Never wind the mains cord round the appliance .
3.Clean the appliance with a damp cloth.

Cleaning

Guarantee&service

If you need information or if you have a problem,please visit the Fritech website at http://www.fritech.cn or contact the Fritech Customer Care Centre in your country .If there is no Customer Care Centre in your country ,turn to your local Fritech dealer or contact the Service Department of Fritech Domestic Appliances and Personal Care BV.

extend the service life, please charge in time to use the remaining 20%.Should try to avoid long time continuous charging (<24 hours) otherwise it may shorten the battery life .Full power can be used continuously for 40 minutes.

Automatic safety shutoff
After approximately one hourthe unit will automatically shut itself ,to reactive the unit ,press the ON/OFF switch.

Environment

Do not throw the appliance away with the normal house hold waste at the end of it's life ,but hand it in at an official collection point for recycling .By doing this you will help to preserve the environment.

Lithium battery:2600mAh
Charge time:4H
This product is equipped with a lithium battery, in order to better protect the lithium battery,

合格证 CERTIFICATE

出厂日期：2020年8月
检 验 员：
执行标准：GB 4706.1-2005
GB 4706.15-2008
GB 4343.1-2018
GB 17625.1-2012

Rechargeable Hair Curler

ZF-1886
USB充电美发器

USB cordless Hair Straightener

ZF-1886
简体中文

一般说明

*本产品不支持边充边用！
*本产品可当做充电宝为手机等移动设备应急充电！

青色(C) 洋红(M) 黄色(Y) 黑色(K)