SPECIFICATIONS, CONNECTIONS AND BUTTONS

Clock

Power input:	DC 5.0V ⎓, 1.0A (5.0W)
Backup battery (for clock memory):	3x 1.5V AAA/LR03
Display:	4 Digit LED Display Time, Date, Alarm, Temperature (Temp.range -10ºC~50ºC / 14ºF~122ºF) 3 Brightness display (Day & Night) Sleep display mode Display Auto Off mode
Dimensions:	165(W) x 29(D) x 80(H) mm
Weight:	112gr (Excl Adapter))

Adapter

Model:	USBAD04-B01
Input:	AC 100-240V~, 50/60Hz
Output:	DC 5.0V ⎓, 1.0A (5.0W)
Average active efficiency:	≥ 73.7%
No-load power consumption:	≤ 0.09W
Dimensions:	38.3(W) x 19.3(D) x 67.2(H) mm

!Please Use provided adapter only!

We are continuously improving/updating our products and product information. It's therefore possible that there is a slight difference between the description in this manual to the operation of the product. If something is different or not clear; always check our website for the most current version.

CALIBER

HCG 006

Manual

NL · FR · DE · GB

CALIBER

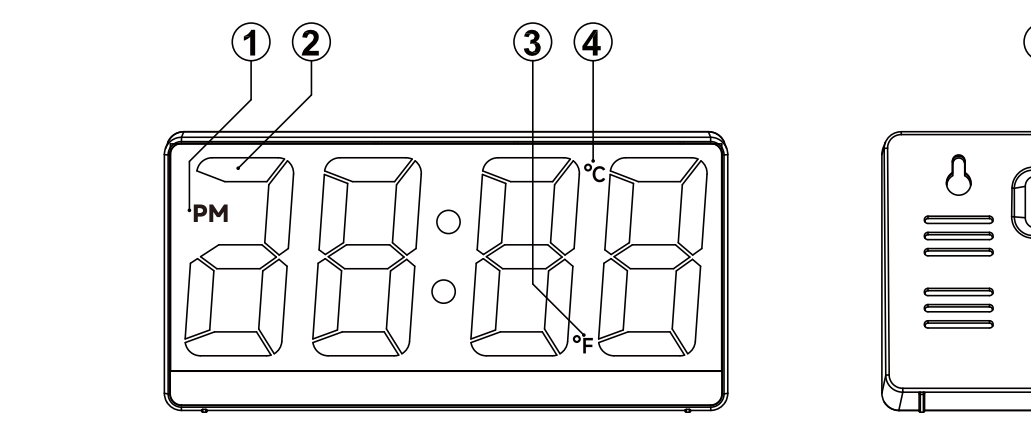

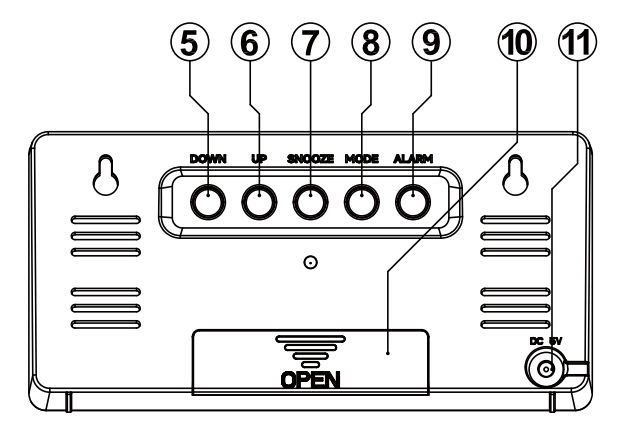

1. **AM/PM**
   - Only showed when time format is 12h
2. **LED Display**
3. **Indicator temperature in ºF**
4. **Indicator Temperature in ºC**
5. **DOWN**
   - Switch between ºC/ºF in Temperature mode
   - Adjust value in settings mode
6. **UP**
   - Manual display brightness adjustment
   - Adjust value in settings mode
7. **SNOOZE**
8. **MODE**
   - Short press: Change display mode
   - Long press: Settings
9. **ALARM**
10. **Backup Battery compartment**
11. **DC 5V power input**

NEDERLANDS

HANDLEIDING

Voorzorgsmaatregelen

Punten om in acht te nemen voor veilig gebruik
Lees deze handleiding zorgvuldig door voordat u dit artikel en de onderdelen ervan gebruikt. Ze bevatten instructies over hoe dit product op een veilige en effectieve manier te gebruiken. Caliber Europe BV kan niet verantwoordelijk worden gesteld voor problemen die het gevolg zijn van het niet naleven van de instructies in deze handleiding.

Schakel het apparaat onmiddellijk uit in geval van een probleem.
Doet u dit niet, dan kan dit leiden tot persoonlijk letsel of schade aan het product. Stuur het apparaat terug naar uw erkende Caliber Europe BV dealer voor reparatie.

Reiniging van het product.
Gebruik een zachte droge doek voor de periodieke reiniging van het product. Voor hardnekkige vlekken kunt u de doek alleen met water bevochtigen. Alles heeft de kans om de verf op te lossen of het plastic te beschadigen.

Temperatuur.
Zorg ervoor dat de omgevingstemperatuur [illegible] voordat u het apparaat aanzet.

⚠ **Onderhoud.**
Als u problemen heeft, probeer het [illegible] repareren. Stuur het terug naar uw [illegible] onderhoud.

⚠ **Plaatsing.**
Plaats het product op een vlakke [illegible] voldoende ruimte rondom het product [illegible]

⚠ **Warmte.**
Plaats het apparaat niet in de buurt [illegible] direct zonlicht.

⚠ **Stroomvoorziening**
Gebruik alleen de meegeleverde [illegible]

Beginnen met het gebruik van de wekker
- Steek de adapter in een 100-240V AC-stopcontact. Gebruik de meegeleverde voedingskabel; steek de USB-kant in de [illegible] de DC-ingang van het apparaat.
- Het display gaat aan en de klok toont "0:00" op het display, met een piep om aan te geven dat de klok nog niet correct [illegible] In de normale klokmodus drukt u op de Mode-toets om naar de volgende functie te gaan, in de volgende volgorde: [illegible] Temperatuurmodus → Nachtweergave Aan/Uit.

Tijdinstellingen
- In de tijdmodus, houd de Mode-toets lang ingedrukt (ongeveer 2 seconden); het display begint te knipperen om aan te geven [illegible]

[illegible]

MANUEL

CALIBER

FRANÇAIS

Précautions

[illegible]

DEUTSCH

HANDBUCH

Vorsichtsmaßnahmen

[illegible]

MANUAL

CALIBER

ENGLISH

Precautions

Points to observe for safe usage
Read this manual carefully before using this item and its components. They contain instructions on how to use this product in a safe and effective manner. Caliber Europe BV cannot be responsible for problems resulting from failure to observe the instructions in this manual.

Turn off the device immediately in case of a problem.
Failure to do so may cause personal injury or damage to the product. Return it to your authorized Caliber Europe BV dealer for repairing.

Product cleaning.
Use a soft dry cloth for periodic cleaning of the product. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

Temperature.
Ensure that the ambient temperature is between 0°C and +45° C before turning on the device

⚠ **Maintenance.**
If you have problems, do not attempt to repair the unit yourself. Return it to your Caliber Europe BV dealer for servicing.

⚠ **Placement.**
Place the product on a flat surface. Provide enough space around the product for sufficient ventilation.

⚠ **Heat.**
Do not locate the appliance in the vicinity of a heat surface or in direct sunlight.

⚠ **Power supply**
!Please Use provided adapter only!

Start using the clock
- Plug the adapter into a 100-240V AC outlet. Use the provided power cable; plug the USB side into the adapter and the other side into the DC-input of the device.
- The display will turn on and the clock shows "0:00" on the display and a beep will be heard to indicate that it's not set correctly yet.
- In normal clock Mode, press the Mode key to switch to next function, in following order: Clock Mode → Date Mode → Temperature Mode → Night Display On/Off

Time Settings
In Time Mode, long press the Mode key (about 2 seconds), the display will blink to indicate it is in settings mode.
Change settings by pressing the UP or DOWN key. (Press and hold will result in fast increment/decrement).
Short press the Mode key will switch to next time setting in following order: 12/24 h → Hour → Minute → Exit.
In setup state, not pressing any key for 10 seconds will exit the setup state. Note: AM/PM only will show in 12h Setting.

Date Settings
In Time Mode, press the Mode key to enter Date Mode. (Default is January 1, 2018)
Long press the Mode key (about 2 seconds), the display will blink to indicate it is in settings mode.
Change settings by pressing the UP or DOWN key. (Press and hold will result in fast increment/decrement).
Short press the Mode key will switch to next date setting in following order: Year → Month → Day → Exit.
In setup state, not pressing any key for 10 seconds will exit the setup state.

Alarm Settings
In any Mode, press the Alarm key to display the Alarm mode. Short press switch between On/Off. 'AL' is showed when Alarm is On.
Long press the Alarm key (about 2 seconds), the display will blink to indicate it is in settings mode.
Change settings by pressing the UP or DOWN key. (Press and hold will result in fast increment/decrement).
Short press the Alarm key will switch to next Alarm setting in following order: Hour → Minute → Snooze interval (minutes) → Choose the working days → Exit. Working days: 1-5 = Monday to Friday; 1-6 = Monday to Saturday; 1-7 = All days.
In setup state, not pressing any key for 10 seconds will exit the setup state.
When the Alarm goes off, it will switch to Alarm mode and emits 'BiBi' sound. At the same time the Alarm 'AL' indicator is flashing. Pressing the SNOOZE key will activate the snooze function. The alarm will stop and after the set snooze interval sound again.

The Alarm can be stopped by pressing any other key or by operating the alarm without pressing a button for 1 minute. During this time, the Alarm sound will gradually increase in speed.

Temperature Settings
In Temperature Mode, press the DOWN key to switch between Celsius and Fahrenheit.
Temperature might be affected by heat sources, such as a lamp. This may affect the displayed temperature.

Display Settings
In Temperature Mode, press the Mode Key long until there is a 'Bi' sound. This will activate the display to show time, date and temperature in turn. Time will show for 10 seconds, date and temperature will show 3 seconds each. Press the Mode Key long again until a 'Bi' sound is heard to deactivate this function and show time again.

Display Settings
In any Mode press the UP key to adjust the brightness of the display (3 grades)
In Time Mode, press the Mode Key three times to enter the Night Setting Mode. Press UP or DOWN to switch night mode On/Off. When the night mode is On, the display will automatically reduce brightness by 50% between the set times. Default time is from 18:00 to 06:00 hour.
When the night mode is On long press the Mode Key for about 2 seconds to enter the night mode time settings.
Change settings by pressing the UP or DOWN key. (Press and hold will result in fast increment/decrement).
Short press the Mode key will switch to next time setting in following order: Hour start → Minute start → Hour stop → Minute stop → Exit. In setup state, not pressing any key for 10 seconds will exit the setup state.

Temporarily turn off the display by pressing the SNOOZE Key for more than 3 seconds. Pressing any key will activate the display again. When the alarm goes off, the display will also turn back on.

Back up battery
Insert 3x 1.5V AAA/LR06 batteries the battery compartment. (not included)
In the event of a power interruption or if unplugged, your time settings will be saved and the clock will operate under power saving function.
In power saving function (working on battery only) the LED display will turn off automatically to save power. Pressing any key will activate the display for 16 seconds.

CALIBER

GB Caliber hereby declares that the item HCG006 is in compliance with the essential requirements and other relevant provisions of Directive 2014/30/EU (EMC), 2009/125/EC (ERP) and 2011/65/EU (RoHS).

FR Par la présente Caliber déclare que l'appareil H HG006 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 2014/30/EU (EMC), 2009/125/EC (ERP) et 2011/65/EU (RoHS).

DE Hiermit erklärt Caliber, dass sich das Gerät HG006 in Übereinstimmung mit den grundlegenden Anforderung und übrigen einschlägigen Bestimmungen der Richtlinie 2014/30/EU (EMC), 2009/125/EC (ERP) und 2011/65/EU (RoHS) befindet.

IT Con la presente Caliber dichiara che questo HG006 è conforme ai requisiti essenziali ed alle alte disposizioni pertinenti stabilite dalla directtiva 2014/30/EU (EMC), 2009/125/EC (ERP) e 2011/65/EU (RoHS).

ES Por medio de la presente Caliber declara que el HG006 cumple con los requisitos esenciales y otra disposiciones aplicables o exigibles de la Directiva 2014/30/EU (EMC), 2009/125/EC (ERP) y 2011/65/EU (RoHS).

PT Caliber declara que este HG006 está conforme com os requisitos essenciais e outras disposições da Directiva 2014/30/EU (EMC), 2009/125/EC (ERP) e 2011/65/EU (RoHS).

NL Hierbij verklaart Caliber dat het toestel HG006 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 2014/30/EU (EMC), 2009/125/EC (ERP) en 2011/65/EU (RoHS).

CE Latest declaration form can be found at: www.calibereurope.com/nlmedia/forms/DeclarationHCG006.pdf

GB Old appliances and/or batteries must not be disposed with garbage!
If the device/battery can not be used anymore, every user is legally obliged to dispose of old appliances and/or batteries separated from the garbage, e.g. at a collection point of his municipality/district.

FR Les vieux appareils et/ou les piles ne doivent pas être jetés avec les ordures ménagères !
Si l'appareil/la pile ne peut plus être utilisé(e), chaque utilisateur est légalement dans l'obligation de mettre au rebut les vieux appareils et/ou les piles séparément des ordures ménagères, par ex. dans un point de collecte de sa municipalité/de son quartier.

DE Altgeräte und/oder Altbatterien müssen getrennt entsorgt werden!
Benutzer sind gesetzlich verpflichtet, Altgeräte und/oder Altbatterien am Ende ihrer Nutzungsdauer getrennt zu entsorgen, z.B. an örtlich verfügbaren Sammelstellen.

IT Dispositivi e/o batterie vecchie non devono essere smaltiti con i rifiuti!
Se il dispositivo/batteria non può più essere utilizzato, ogni utente è obbligato per legge a smaltire i vecchi dispositivi e/o batterie separatamente dai rifiuti, ad es.: in un centro per la raccolta differenziata locale/comunale.

ES ¡Los dispositivos viejos y/o baterías no deben desecharse junto con la basura doméstica!
Si el dispositivo/batería ya no funciona, cada usuario está legalmente obligado a desechar sus aparatos y/o baterías de forma separada de la basura doméstica (por ejemplo, en un punto de recolección de su municipio/distrito).

PT Os aparelhos avariados e/ou as pilhas ou baterias usadas não devem ser eliminados juntamente com o lixo comum! Se o aparelho e/ou as pilhas ou baterias já não puderem ser utilizados, o utilizador tem o dever legal de separar os aparelhos e as pilhas/baterias usados do lixo comum e depositá-los num ponto de recolha para reciclagem na sua região

SE Gamla apparater och/eller batterier får inte kasseras med avfall!
Om enheten/batteriet inte längre kan användas är varje användare skyldig att slänga gamla apparater och/eller batterier avskilt från avfallet, t.ex. på en insamlingsplats i personens kommun/distrikt.

PL Starych urządzeń i baterii nie wolno wyrzucać z odpadkami domowymi!
Jeśli urządzenie lub bateria nie będzie więcej używane, każdy użytkownik jest prawnie zobowiązany do wyrzucania starych urządzeń i/lub baterii oddzielnie, np. w punkcie zbiórki swojej gminy lub dzielnicy.

GR Οι παλιές συσκευές ή/και μπαταρίες δεν πρέπει να απορρίπτονται μαζί με τα οικιακά απορρίμματα!
Αν μια συσκευή/μπαταρία δεν μπορεί πλέον να χρησιμοποιηθεί, οι χρήστες είναι νομικά υποχρεωμένοι να απορρίπτουν τις παλιές συσκευές ή/και μπαταρίες ξεχωριστά από τα οικιακά απορρίμματα, π.χ. σε σημείο συλλογής του δήμου/της περιφέρειάς τους.

SK/CZ Staré spotrebiče a/alebo použité batérie nesmiete likvidovať s domovým odpadom!
Ak sa už zariadenie/batéria nebude dať viac používať, každý používateľ je povinný likvidovať staré spotrebiče a/alebo batérie oddelene od odpadu, napríklad na zbernom mieste svojej obce/regiónu.

NL Oude apparaten en/of batterijen mogen niet bij het huisvuil!
Mocht het apparaat/batterij niet meer kunnen worden gebruikt, dan is iedere gebruiker wettelijk verplicht, oude apparaten en/of batterijen gescheiden van het huisvuil, bijv. bij een inzamelpunt van zijn gemeente/zijn wijk, af te geven.

FR PAPIER & PLASTIQUE

WWW.CALIBEREUROPE.COM

CALIBER EUROPE BV · Wildemanweg 8 · 5301 LT · Zaltbommel · The Netherlands · Support@caliber.nl