Skullcandy

QUICK START GUIDE

CRUSHER® WIRELESS

PAIR NEW DEVICE:

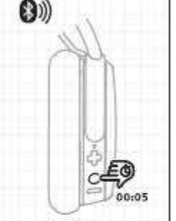

"OFF MODE"

1

2

PAIRING MODE:

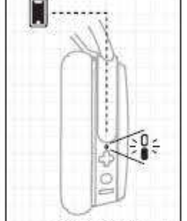

"CRUSHER WIRELESS"

3

4

POWER-ON/OFF:

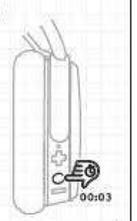

5

6

VOLUME UP:

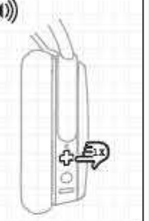

7

8

VOLUME DOWN:

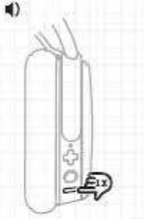

9

10

BASS CONTROL:

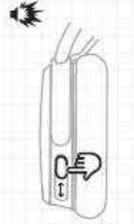

"SLIDE UP/DOWN"

11

12

PLAY/PAUSE

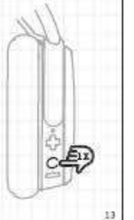

13

14

TRACK FORWARD:

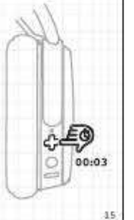

15

16

TRACK BACK:

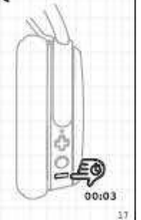

17

18

ANSWER/END:

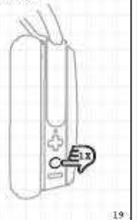

19

20

CHARGE:

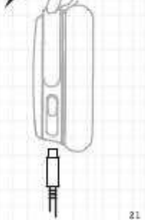

21

22

23