ot turn the
ockwise
on the 0
wise the
be damaged.

perates on 2
AAA batteries.

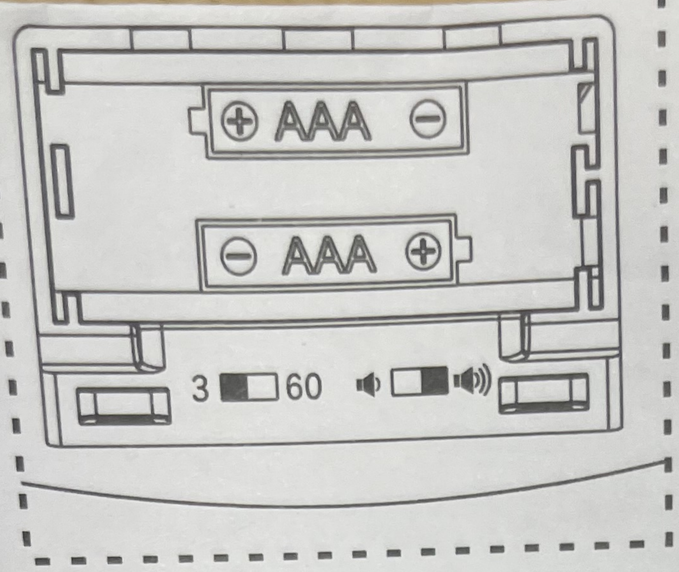


60 =alarm duration 60 sec

★ " " "

= alarm volume low

= alarm volume high

## Maintenance

★ Remove batteries during maintenace

★ Use dry cloth to clean the surface, don't use chemical cleaning agent or wash it in water.

CE