

Installation instructions



1
First open the window and clean the surfaces to be bonded from dust and fat on the window frame and casement. Open the Velcro fastener and stick the Velcro strap to the window frame (side A)

Never stick it to the contact surface of the window seal (window must still be able to close!)



2
Stick Velcro strap (side B) to the a) outside or b) inside of the window casement (side of the window handle).

Be sure that the window is still able to close. Before sticking together, make sure that the sticky tape does not damage the window frames!



3
First stick the wide side A (zipper is closed) with the open window from the middle to the left and right side or to the up and down side to the window frame.




4
Close the window and make sure that the Coolseal is not damped.



5
Stick the narrow side B (zipper is closed) from the middle to the left and right side or to the up and down side to the casement.



6
Open window slightly and pinch the exhaust hose in the Coolseal by using the zipper.

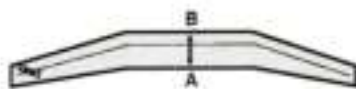

B - Always attach the narrow side of the Coolseal to the casement.

A - Always attach the wide side of the Coolseal to the window frame.

