








# 12 CUBE CABINET

NO.	Qty	Length (mm)	Sketch
A	39	350x350	Squares 
B	42		Connectors 
C	12	350x350	Doors 
D	1		Hammer 
E	2		Hanger 
F	12		Magnets 

1

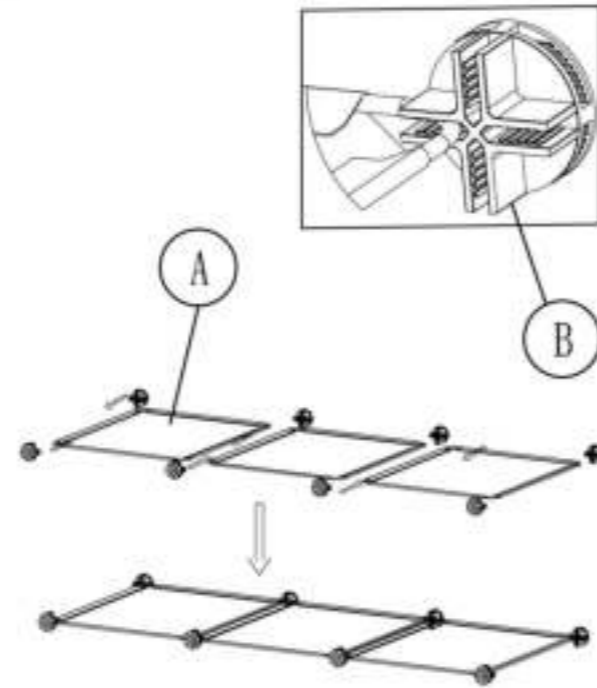


**Install the base**  
Lay the base according to above picture, pls note connectors in the same direction.

2



**Install panels**  
Insert side panel and back panel according to arrow direction


3

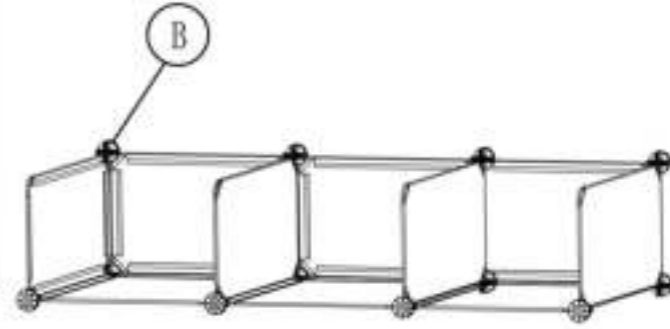

**Install connectors**  
Insert back connectors according to above picture. Note all of connectors in same direction.


- Tips:**
1. Press each verticle panel after install to keep connectors insert panels firmly.
  2. Keep panel and connector tightly.
  3. Be laid flat.
  4. Keep upright and avoid collision.

4

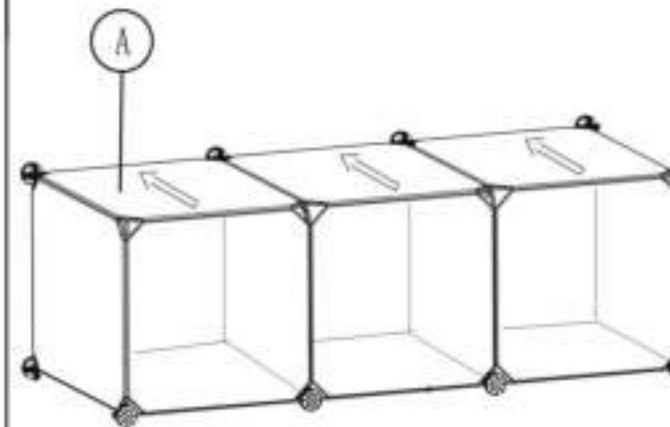


**Install top panels**  
Insert panels according to above picture.

5

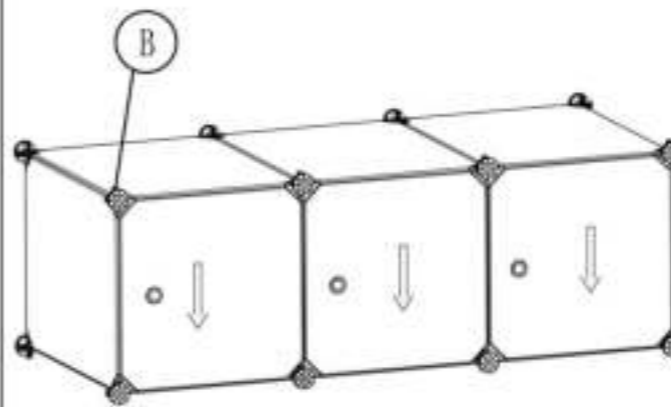

**Install door panel**  
Insert steel frame of door into connector and keep the connector into storage cabinet

6



**Repeat previous assemble way to spread the cubes until all cubes are assembled.**