

INSTALLATION STEPS




Clean the surface. make sure the surface is smooth and dry.



Peel off the tape and stick the product on the wall.



Press the product for 5-8 seconds to make it more stable.

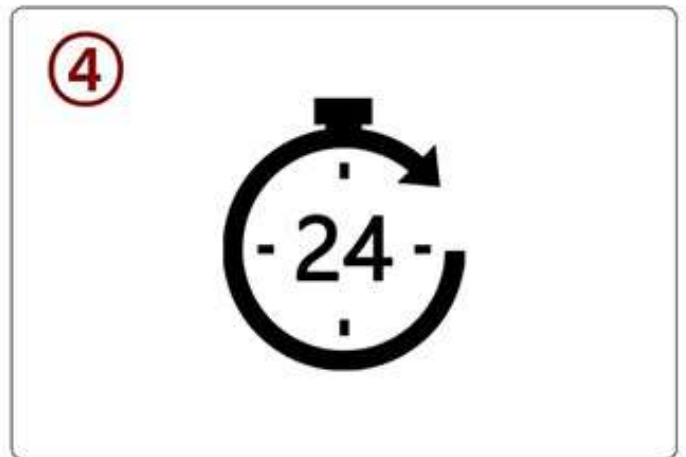

Please wait 24 hours after installing it.