



INSTALLATION




1. Clean the door frame

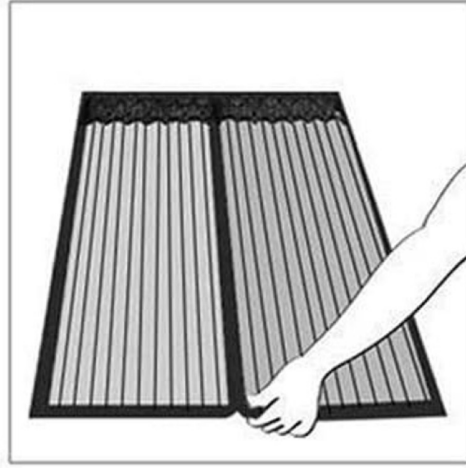


2. Place the mesh flat on the floor

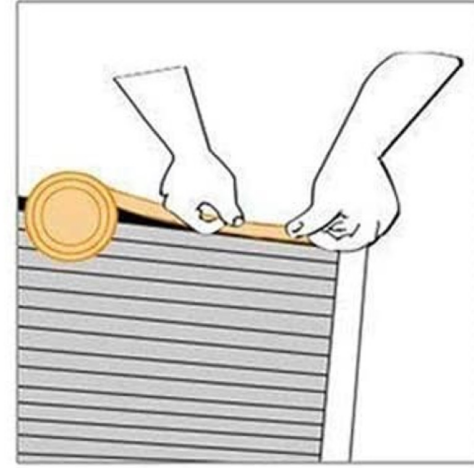


3. Attach the supplied hook strips

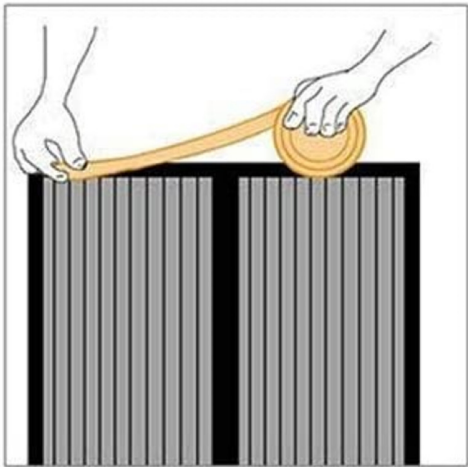

4. Peel off the backing tape

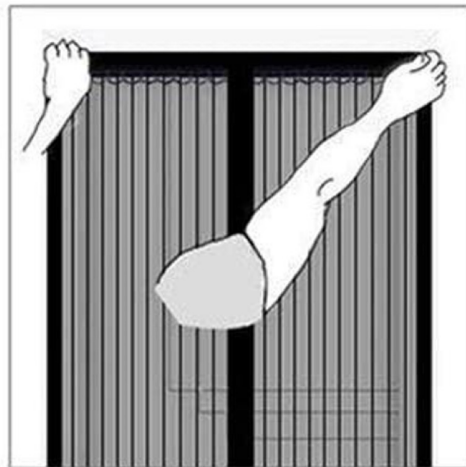

5. Stick the mesh to the door frame

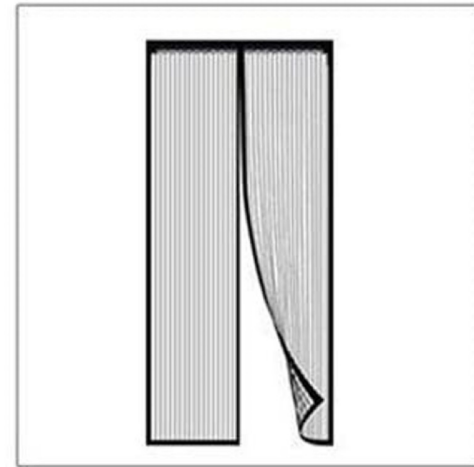

6. Check the mesh