


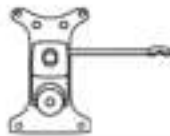












Ax1 	Bx1 	Cx1 	Dx1 	Ex2 	Fx1 	Gx1 	<i>Apro</i> LIFESTYLE
Hx5 	Ix1 	Jx1 	Kx1 	Lx1 	Mx1 	N1x12  (Voorgemonteerd)	

Let op: De meeste bouten zitten al voorgemonteerd in de stoel

Attention: Most bolts are already pre-assembled in the chair

