



DENNIS BEDBANK

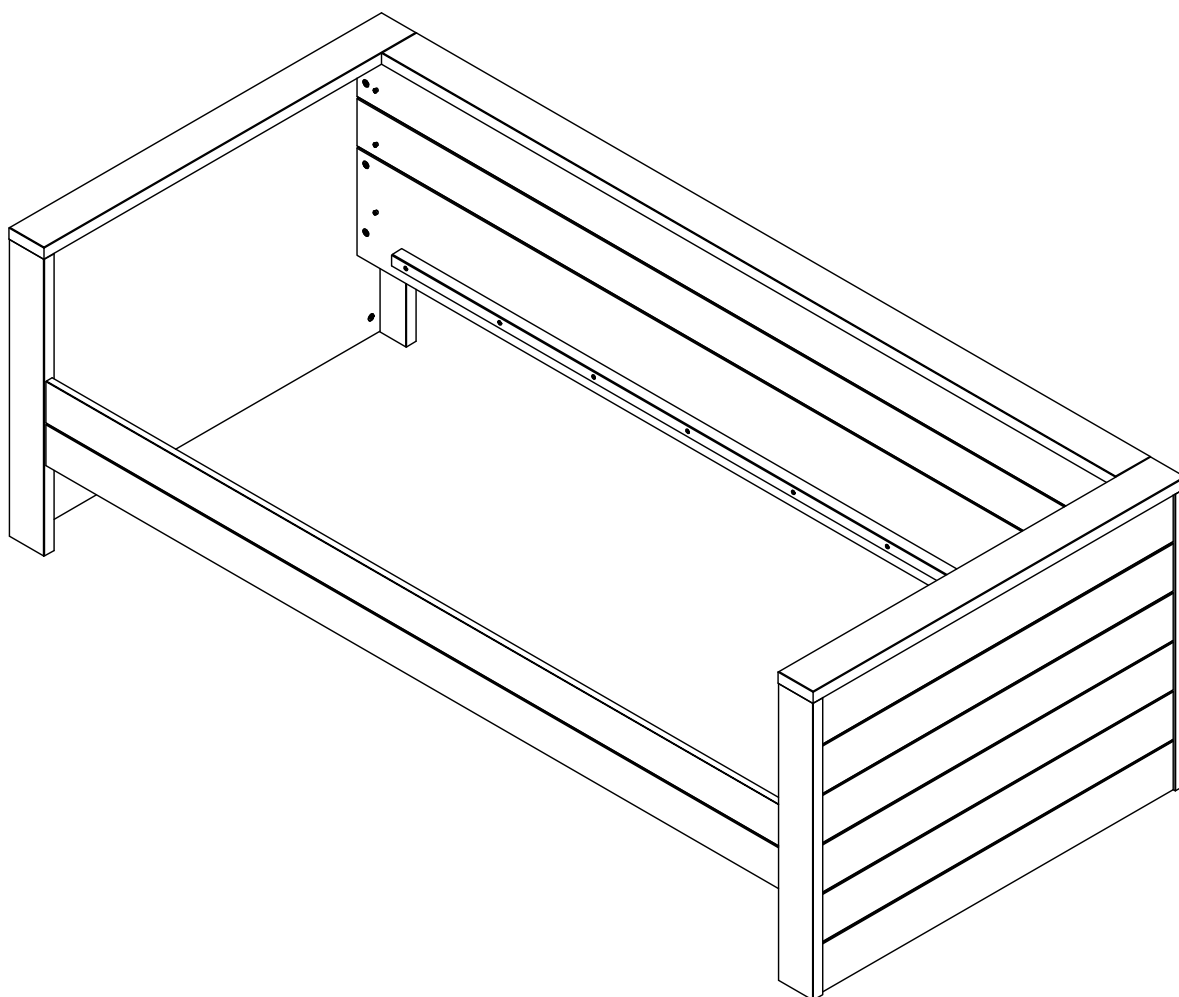

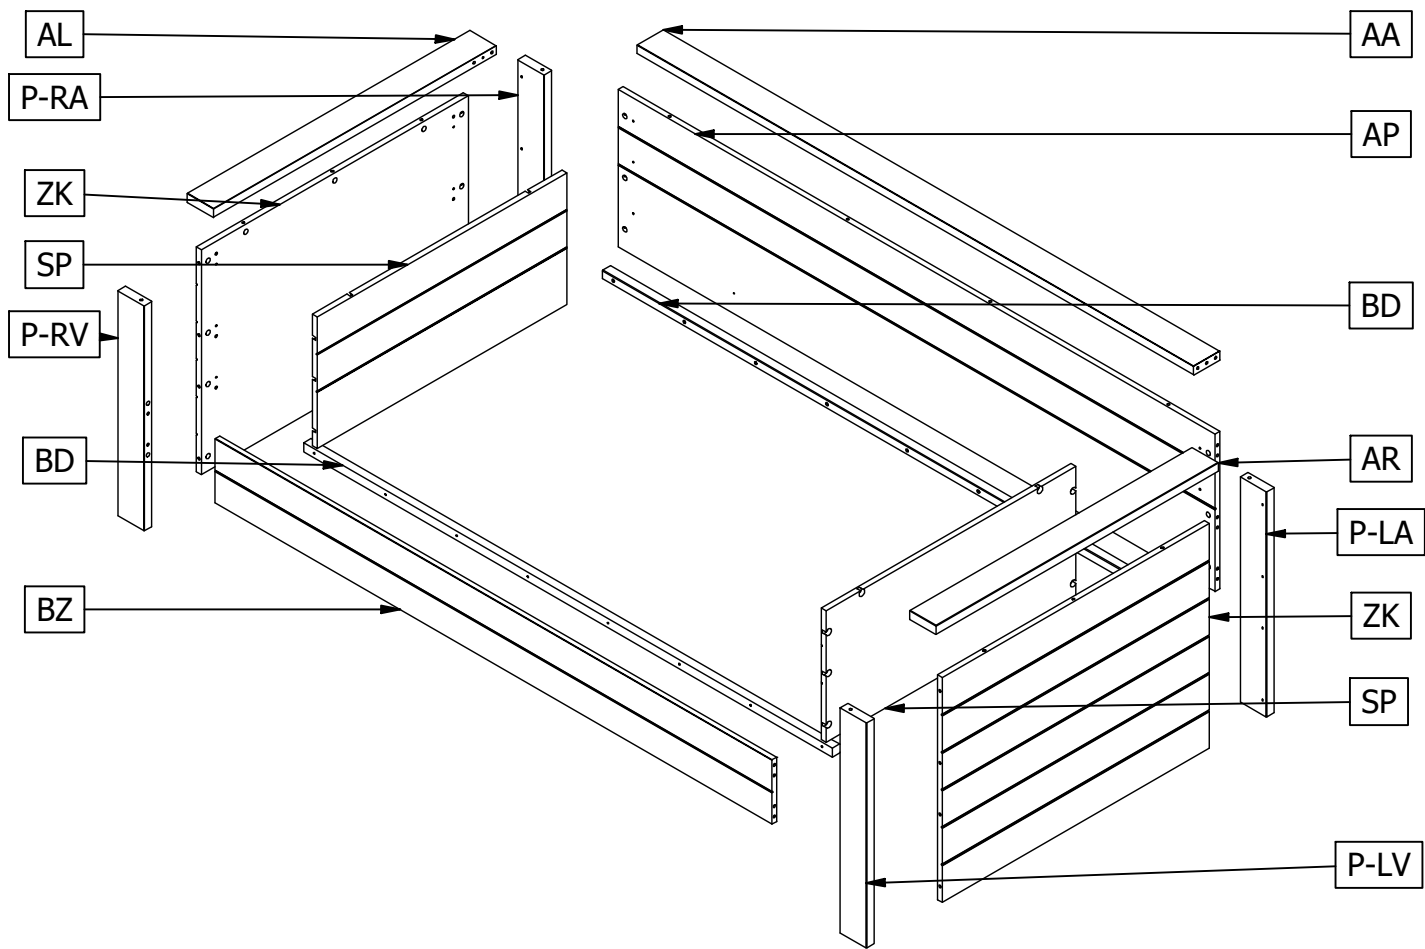









SOFABETT - LIT CANAPE - SOFA BED







Qty	Code	Thickness	Length	Width
1	AA	28	2000	95
1	AL	28	1015	95
1	AP	18	2144	490
1	AR	28	1025	95
2	BD	28	1900	28
1	BZ	18	2000	200
1	P-LA	28	700	95
1	P-LV	28	700	95
1	P-RA	28	700	95
1	P-RV	28	700	95
2	SP	18	897	410
2	ZK	18	959	700





36	Ø15mm	AC000102 	1	Glue	AC000607 
36	24mm	AC000103 			
4	ø10x12,5mm	AC000107 			
16	Ø20x12.5mm	AC000113 			
16	Ø5x9.5mm	AC000114 			
4	Ø35x14mm	AC000135 			
4	M6x50mm	AC000136 			
4	Ø35mm	AC000137 			
1		AC000138 			
16	3.5x40mm	AC000203 			
16	8x35mm	AC000601 			


1

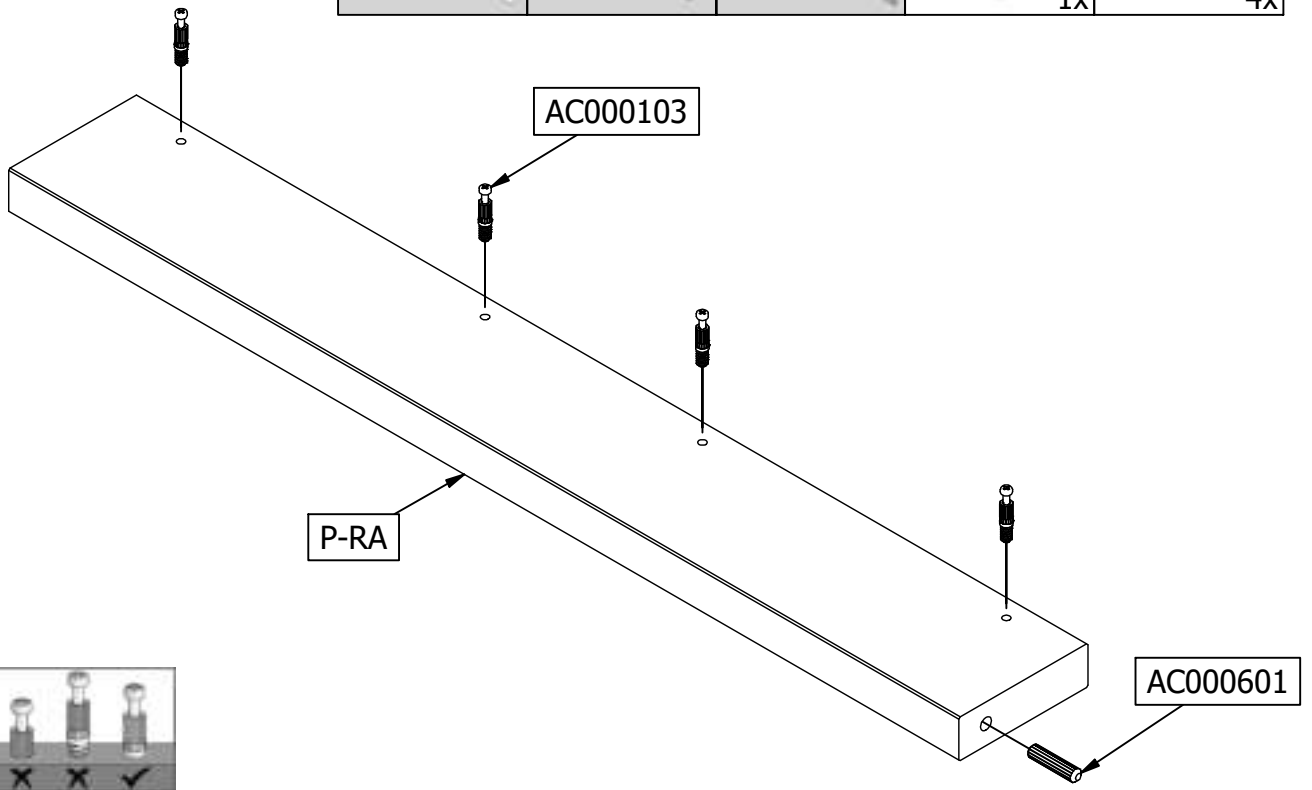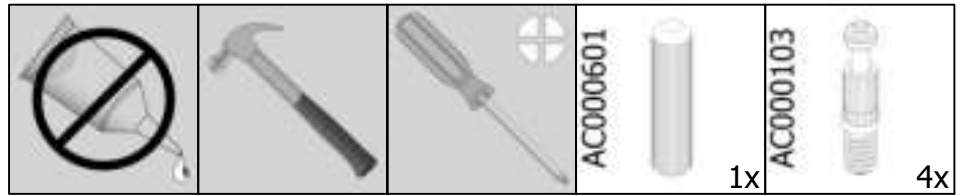



2

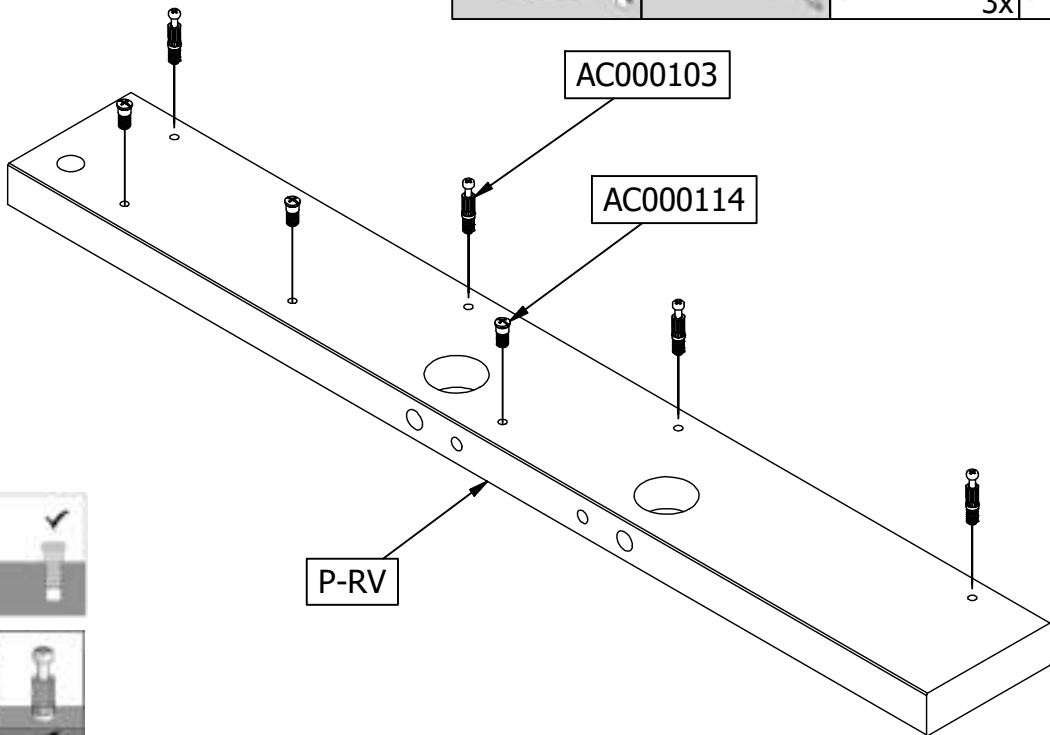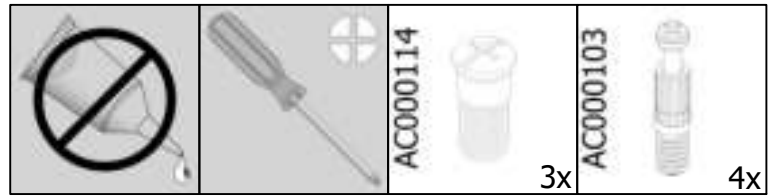


3

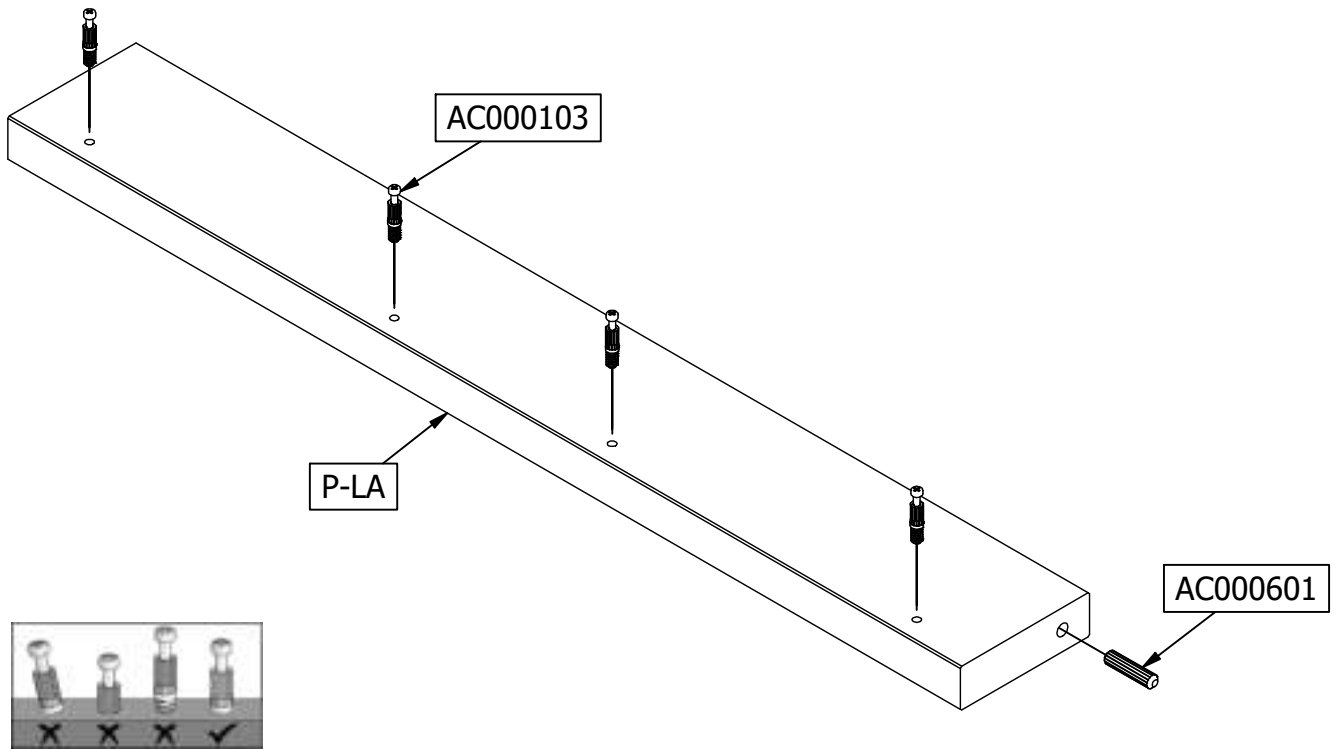



4

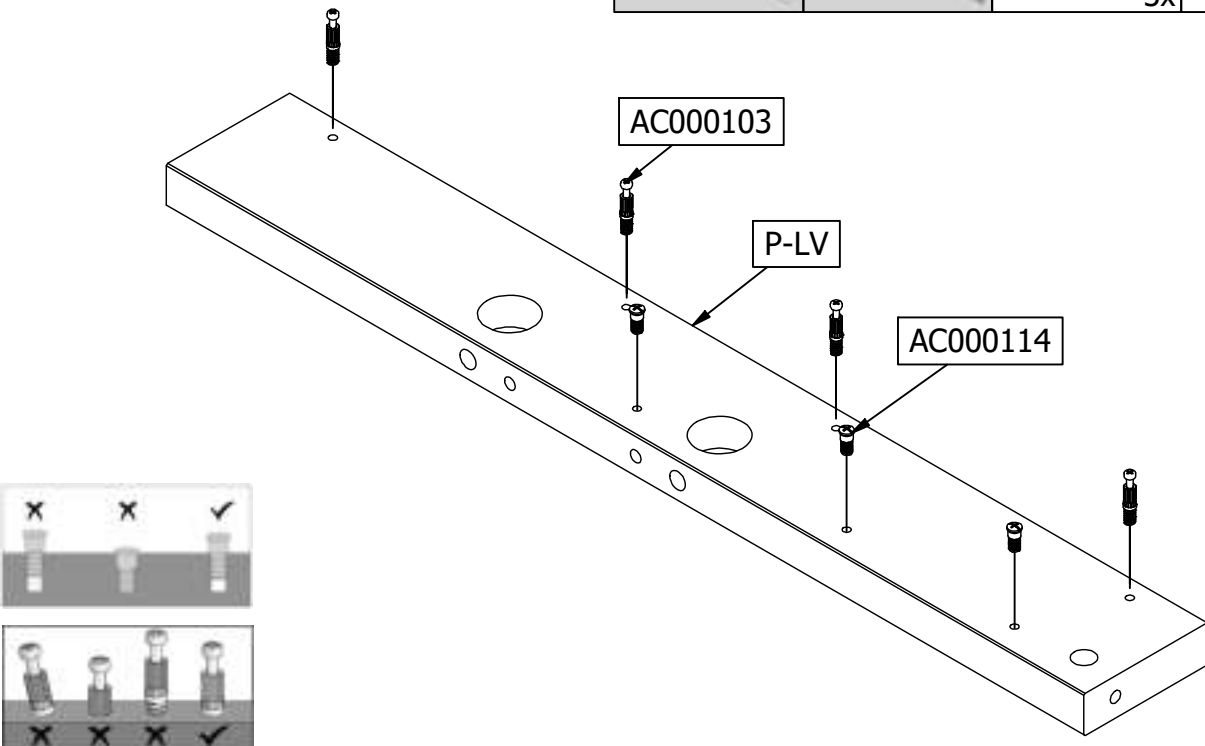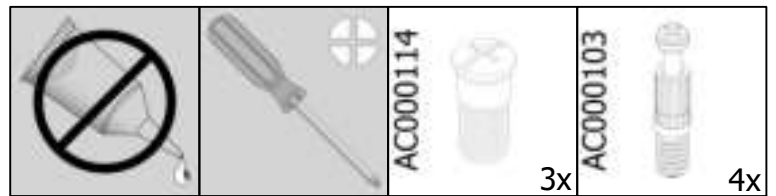


5

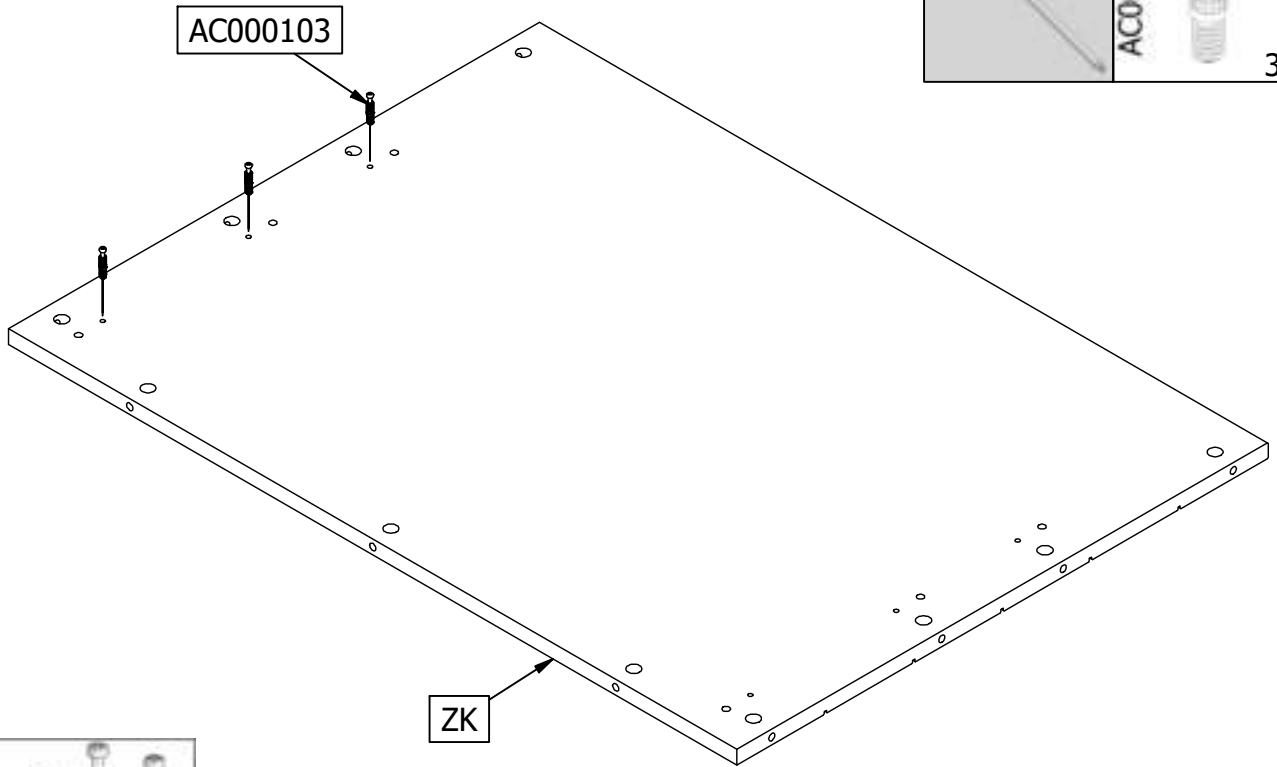


6



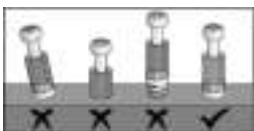
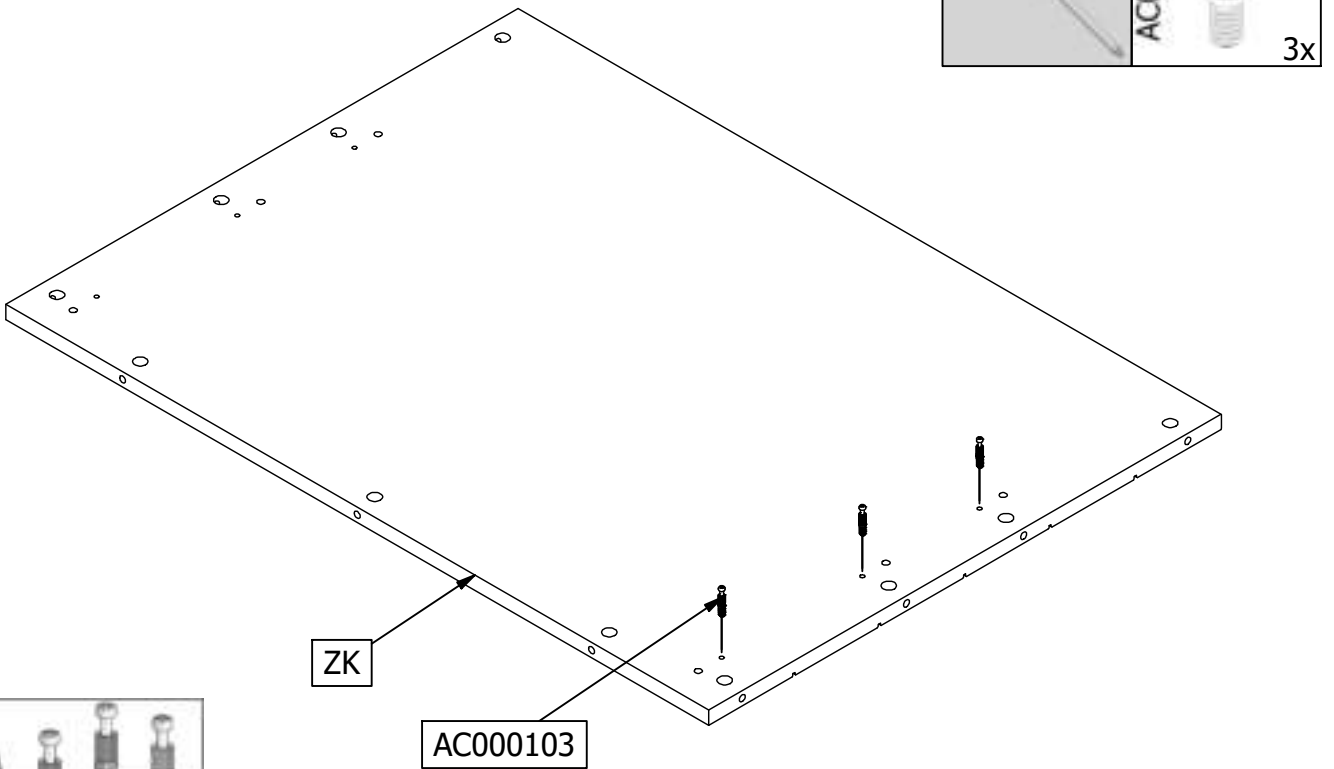






7

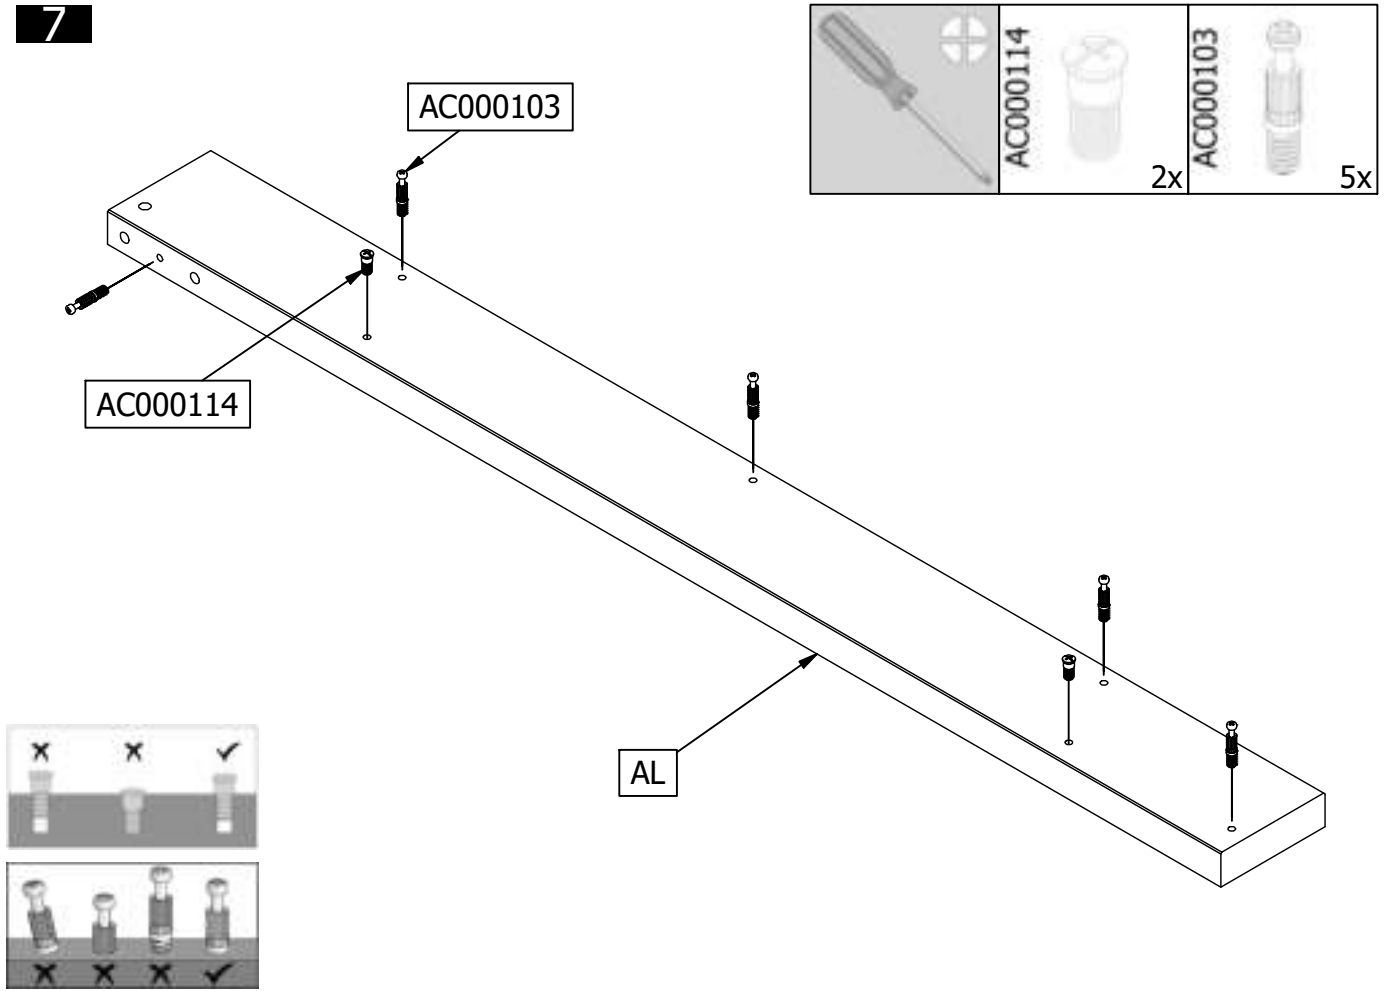




8

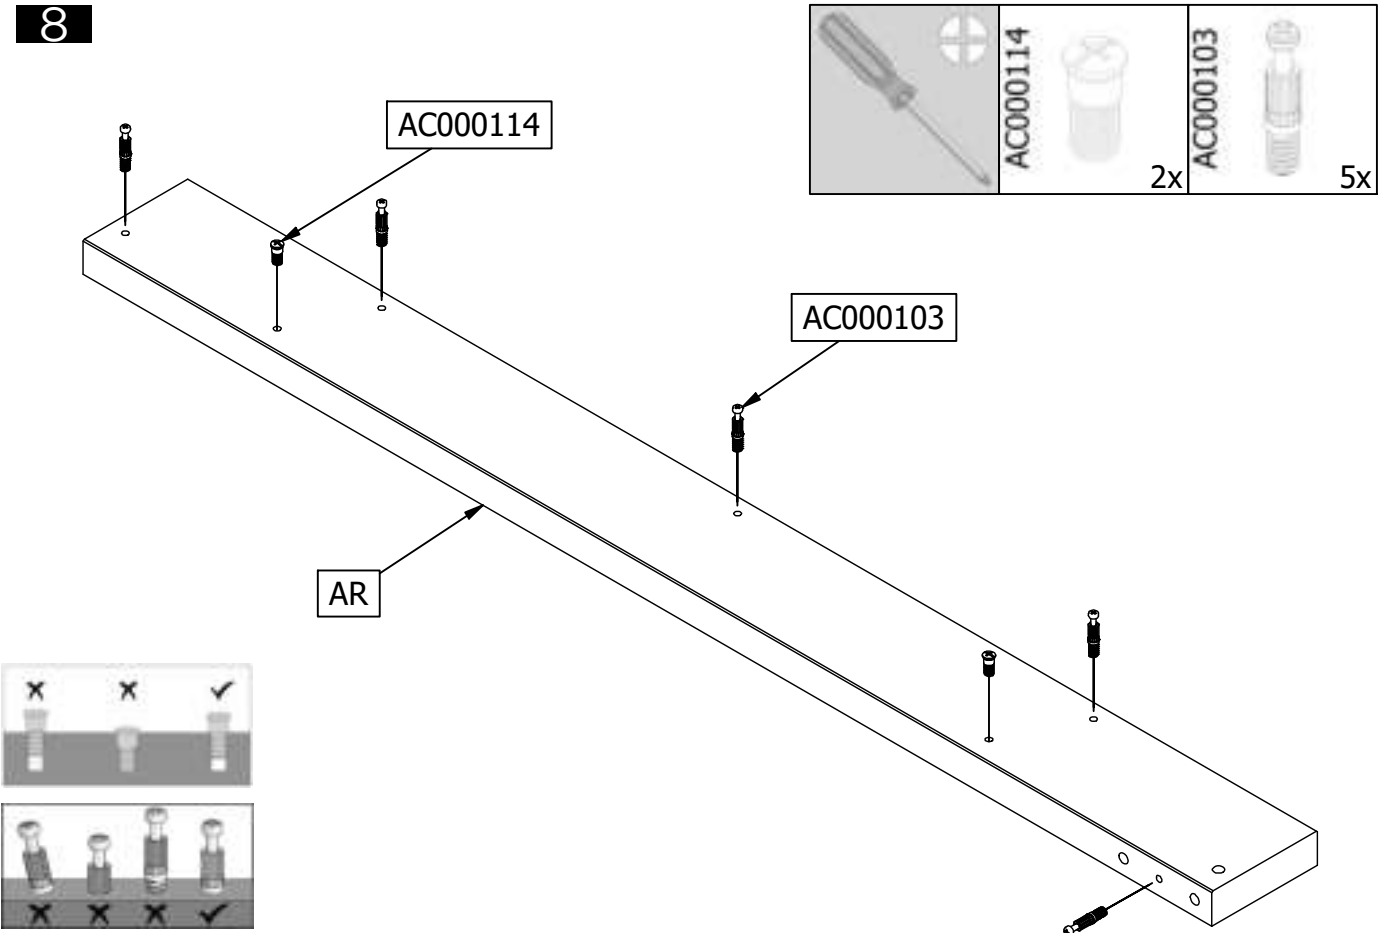

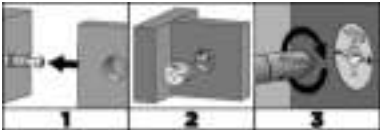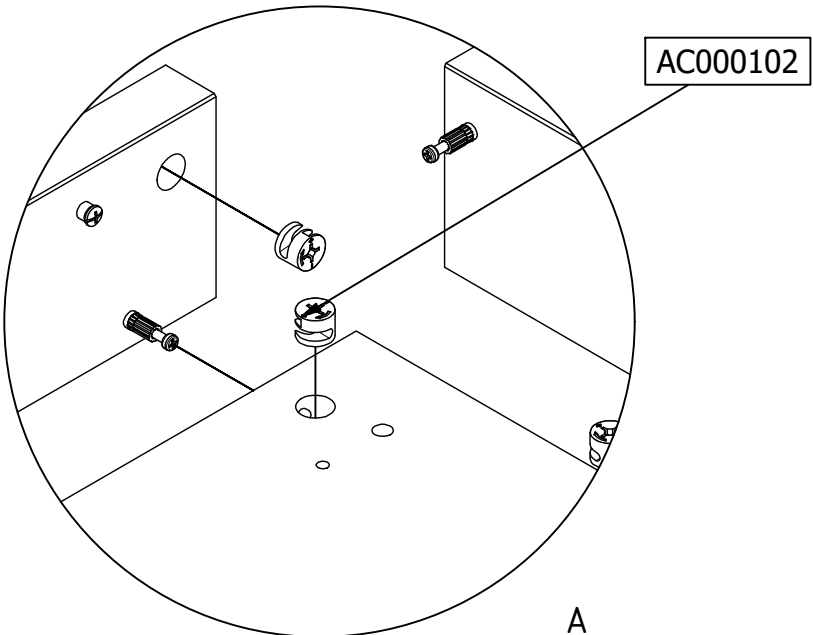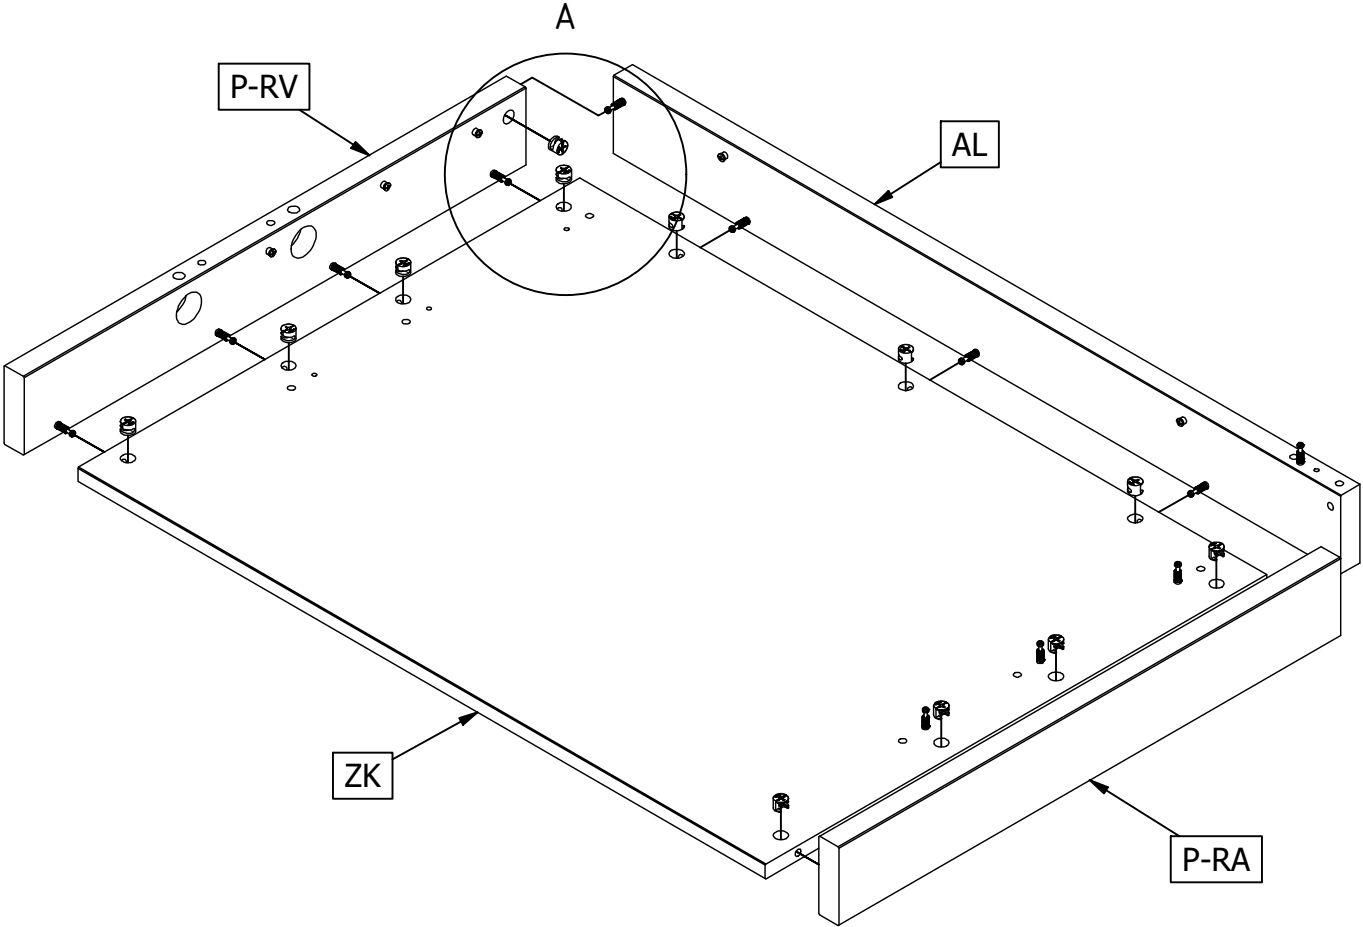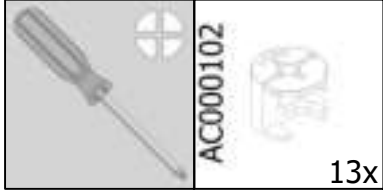

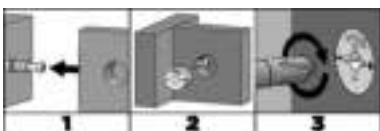
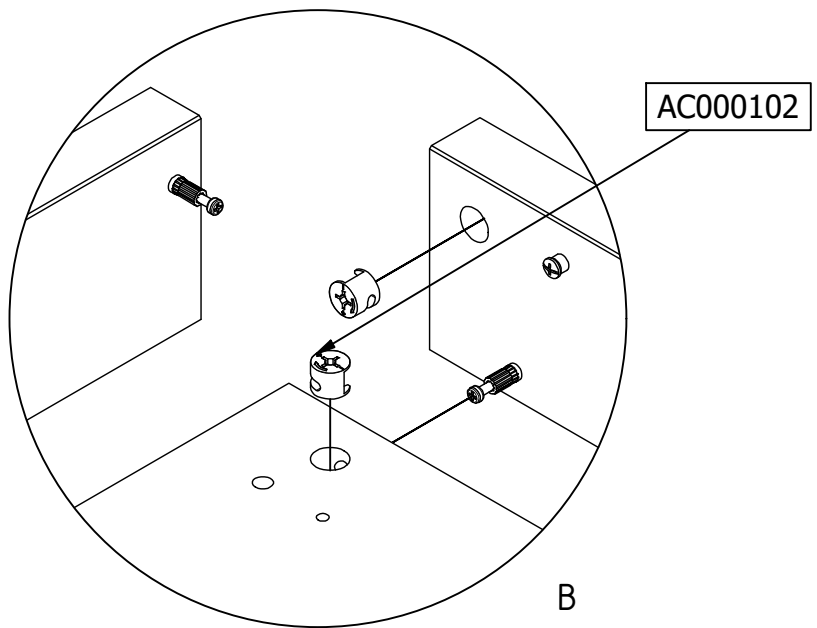
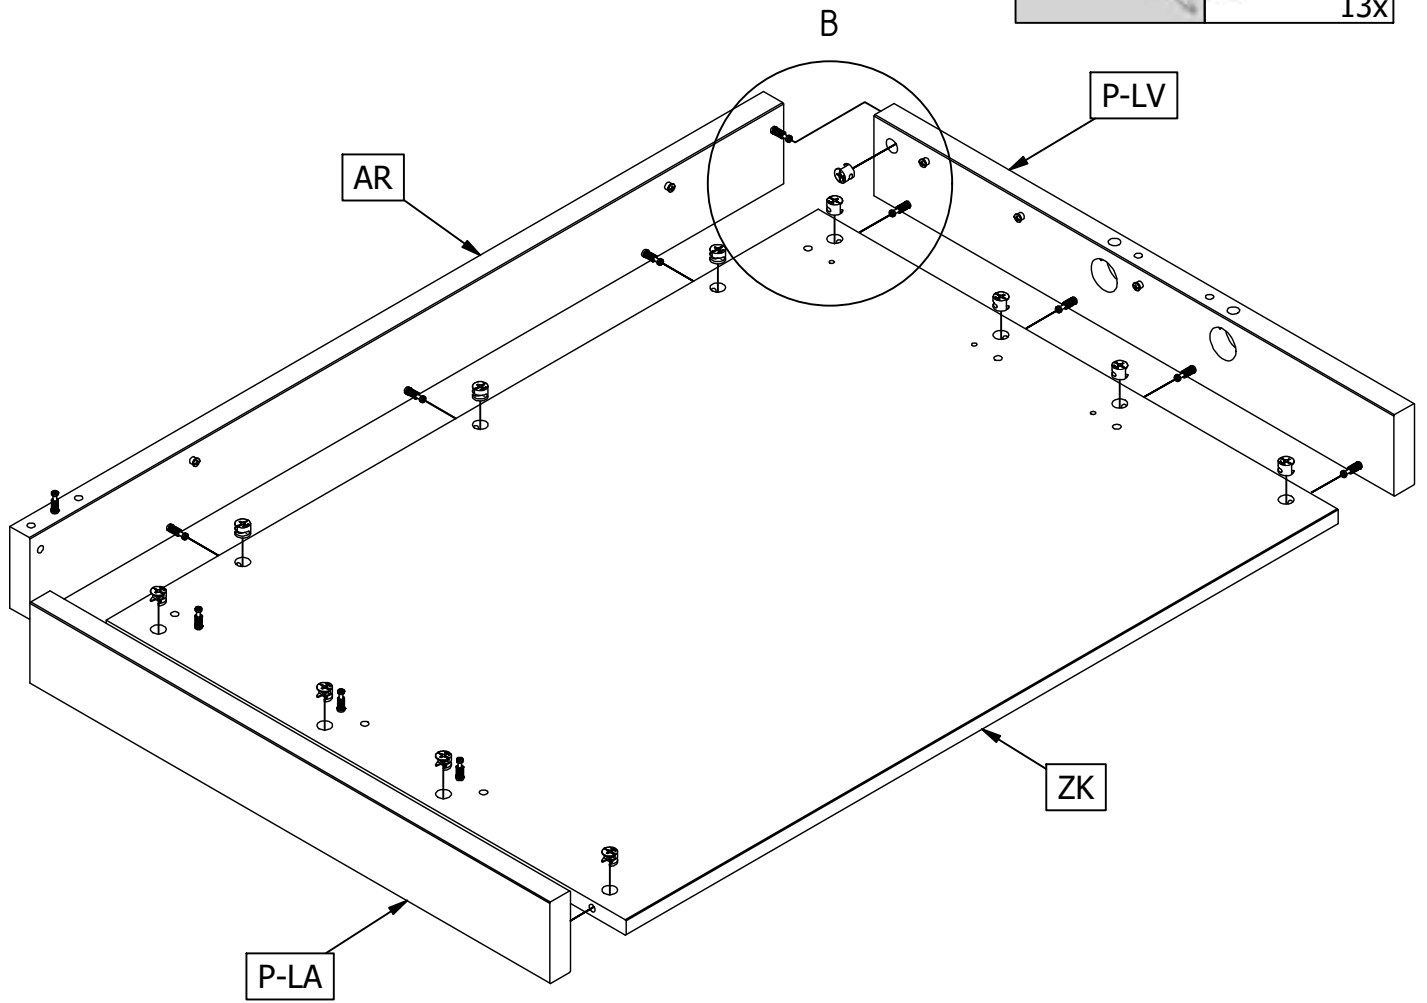
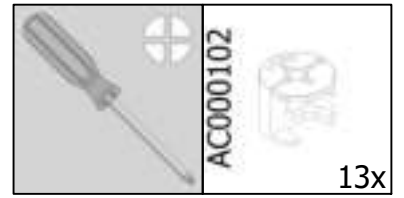






AC000607 1x	AC000601 6x	AC000114 6x	AC000206 8x

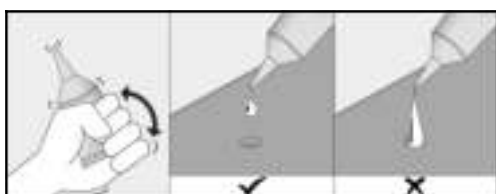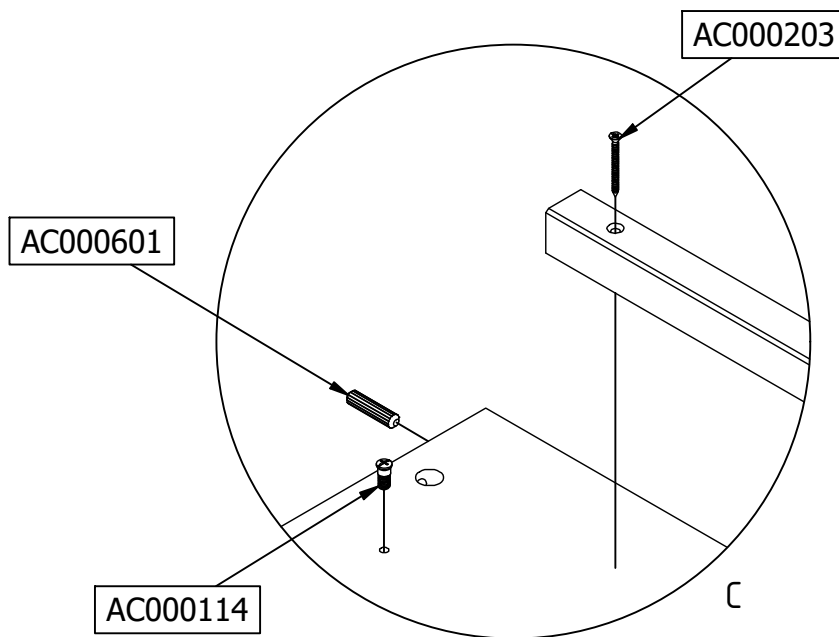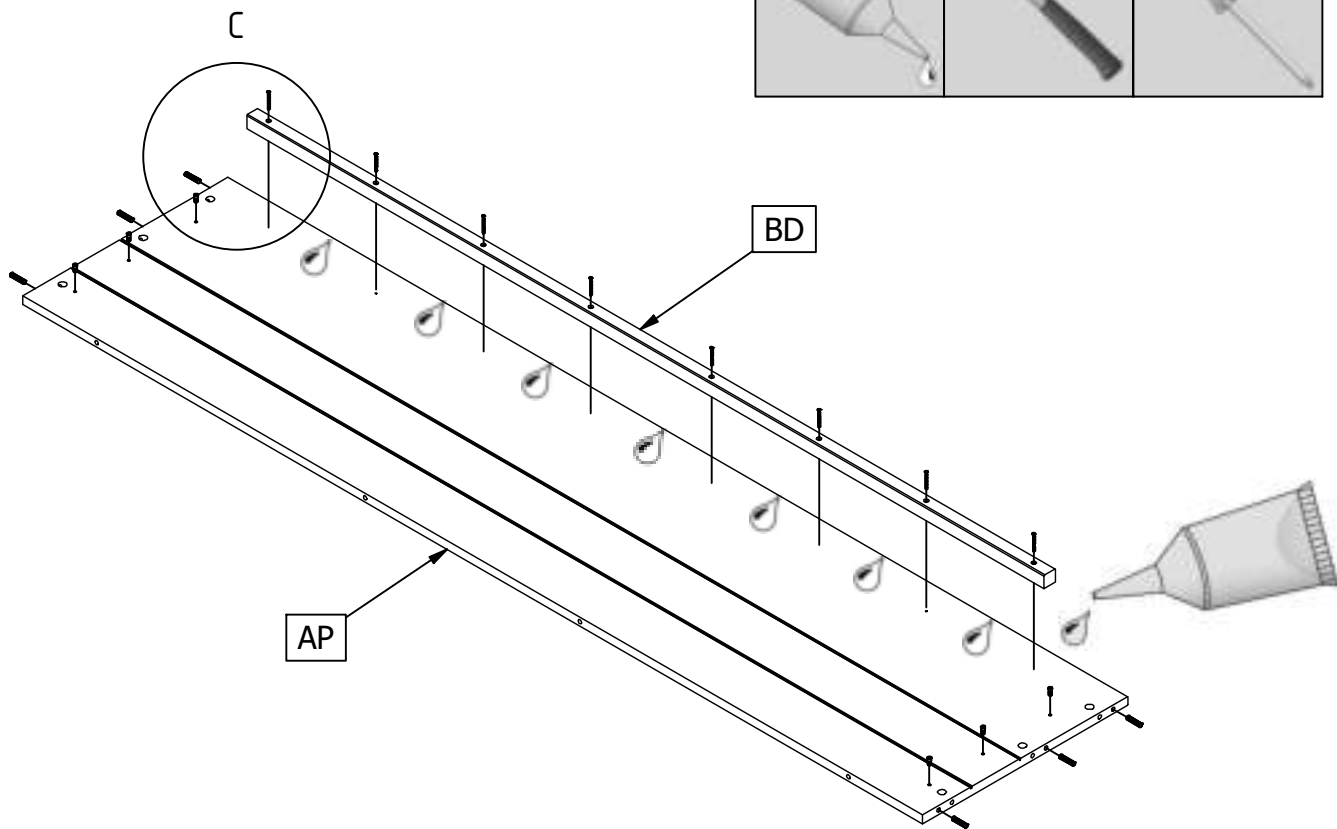



Het gebruik van een klein beetje houtlijm is noodzakelijk voor een goede verbinding
 Für eine stabile Verbindung ist ein bisschen Holzleim erforderlich
 Un peu de colle à bois est nécessaire pour un assemblage solide
 The use of a little wood glue is necessary for proper connection

12

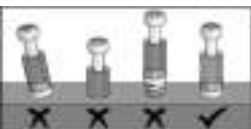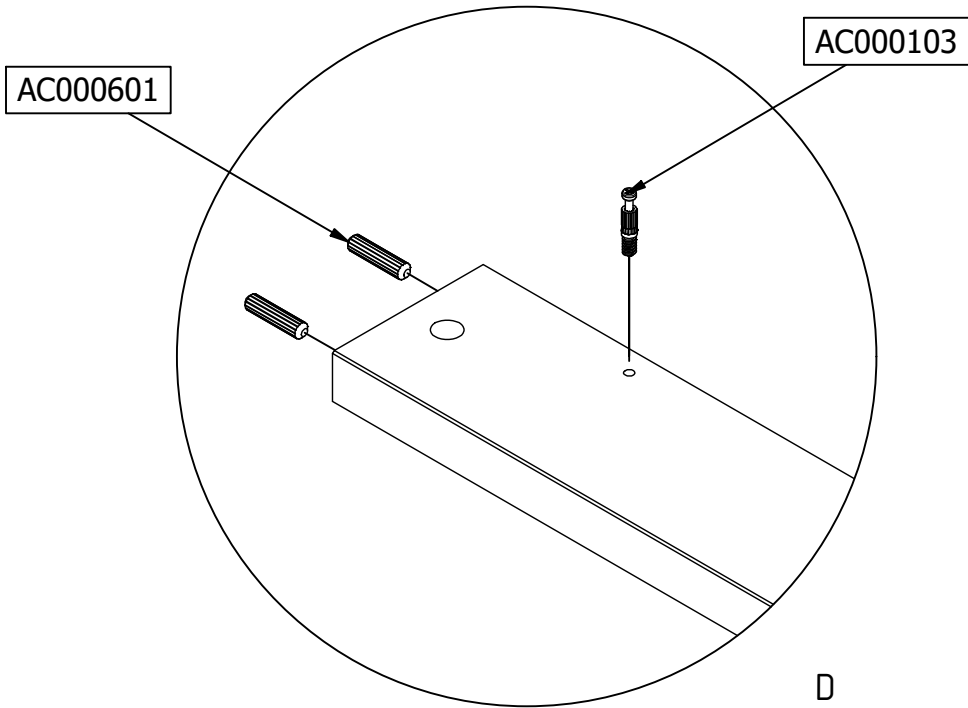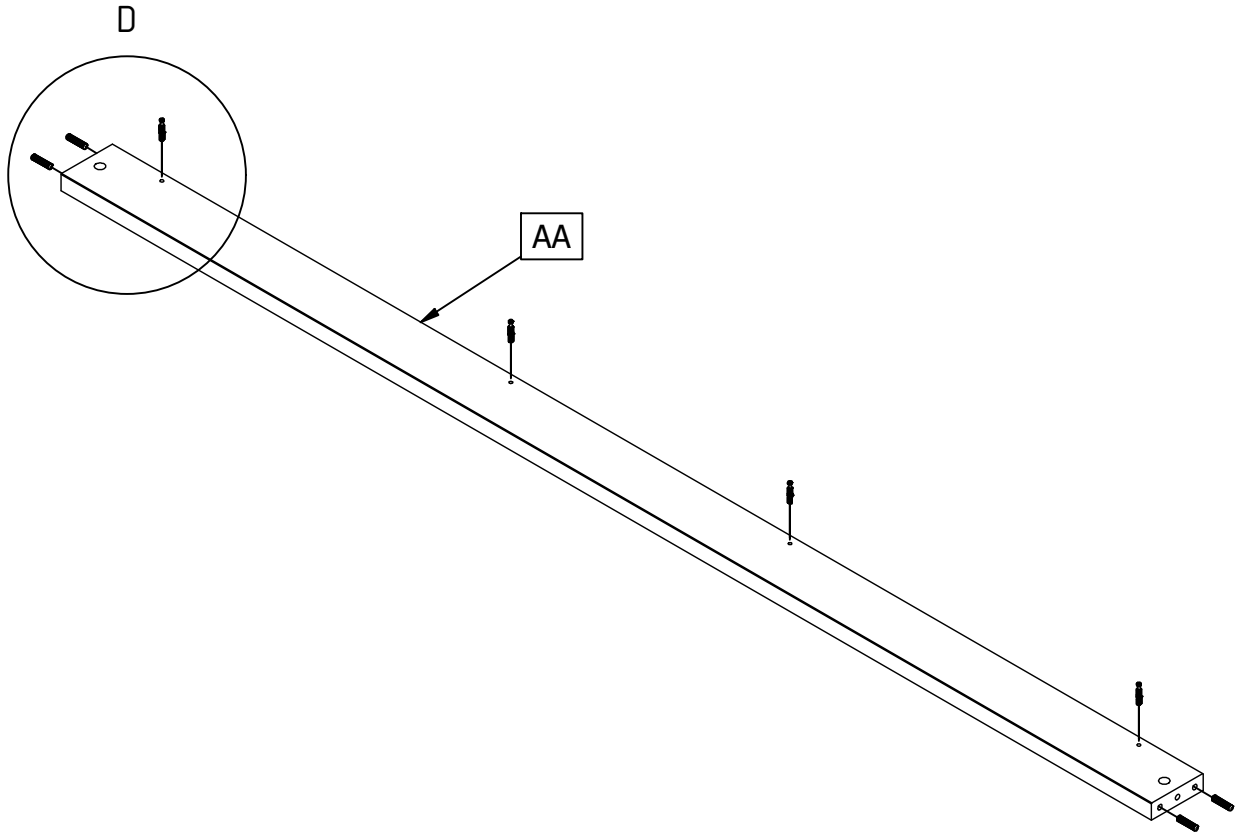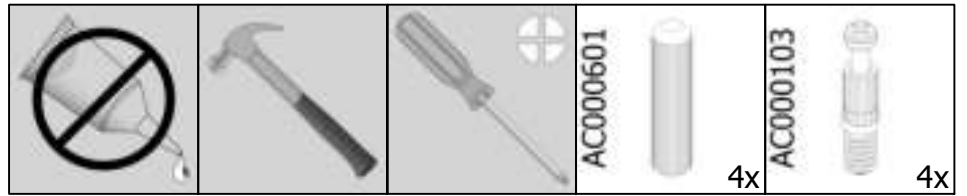


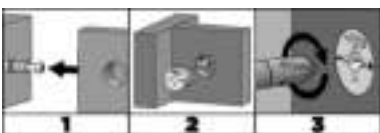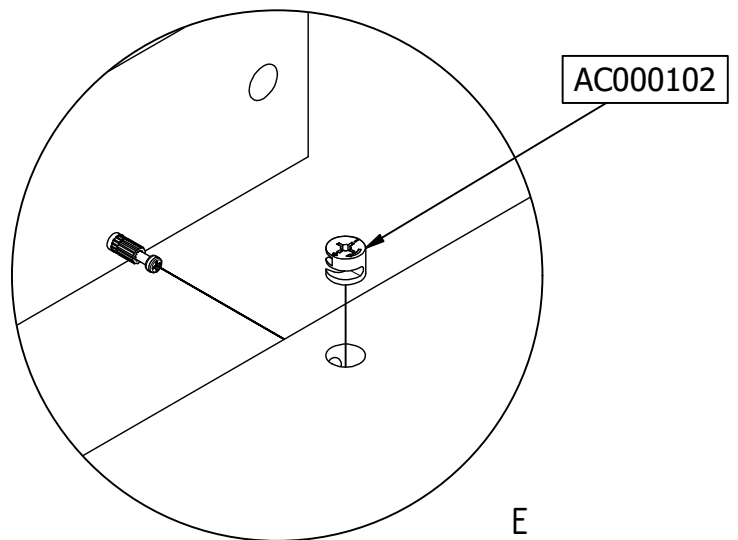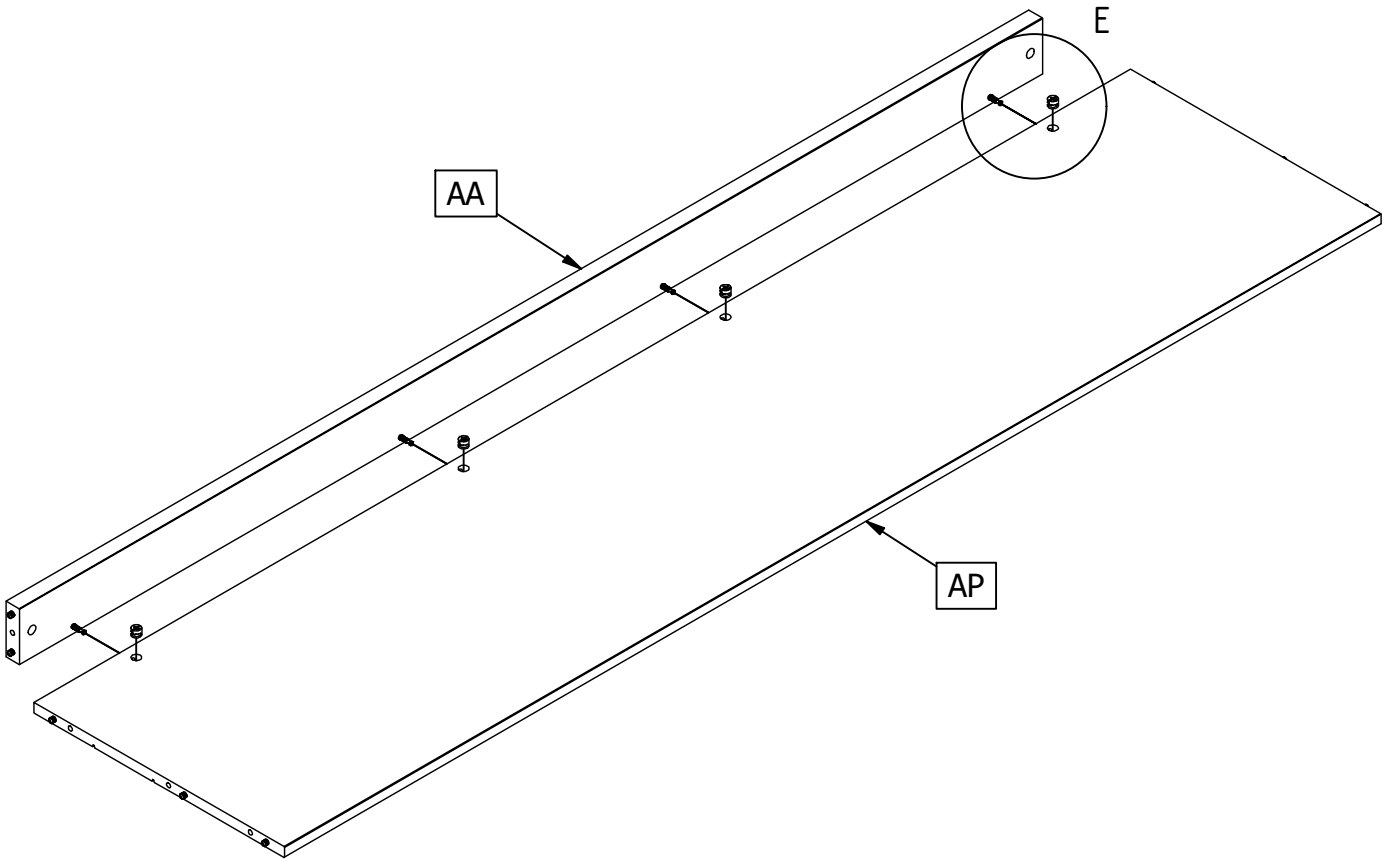
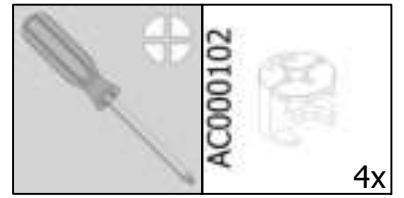


AC000607 1x	AC000601 4x	AC000107 4x	AC000136 4x	AC000206 8x

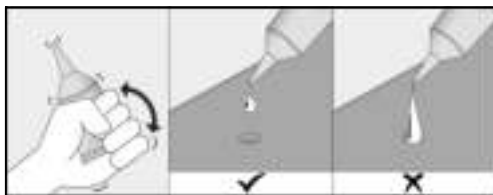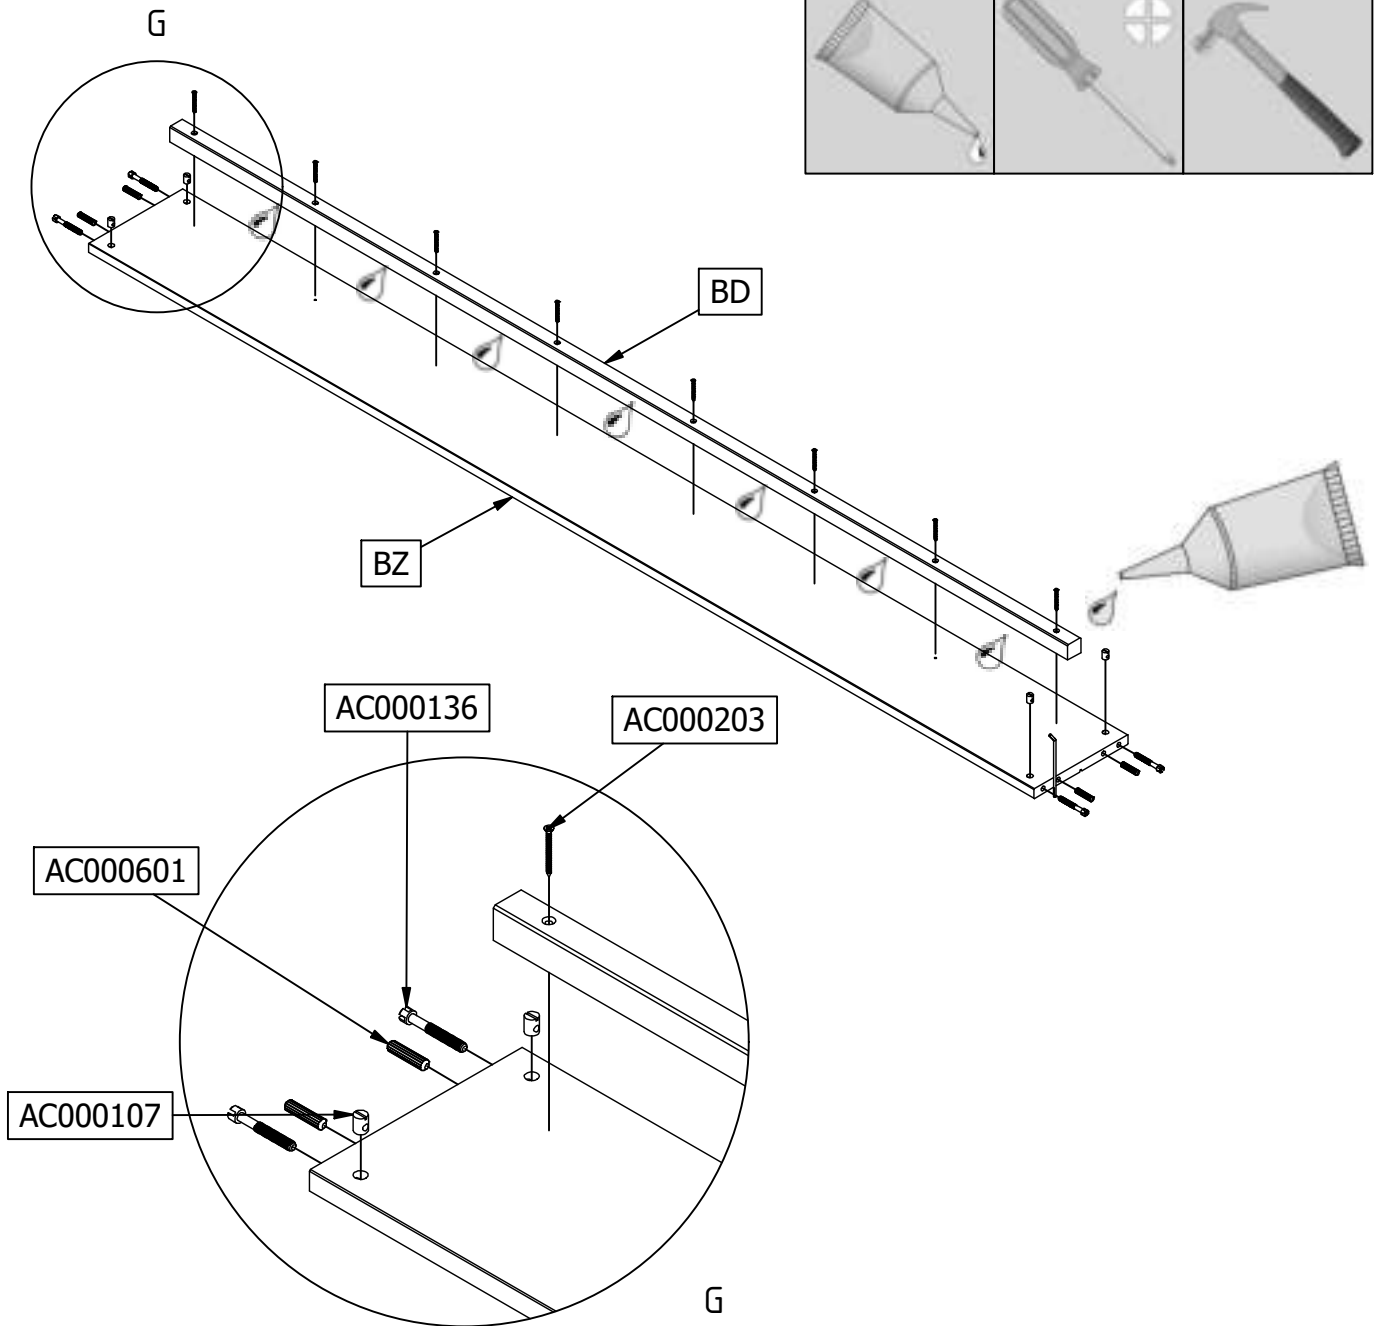






Het gebruik van een klein beetje houtlijm is noodzakelijk voor een goede verbinding
 Für eine stabile Verbindung ist ein bisschen Holzleim erforderlich
 Un peu de colle à bois est nécessaire pour un assemblage solide
 The use of a little wood glue is necessary for proper connection

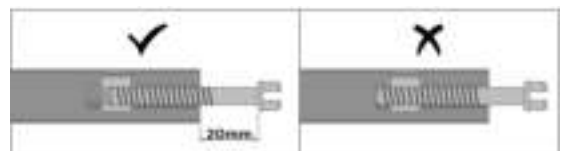


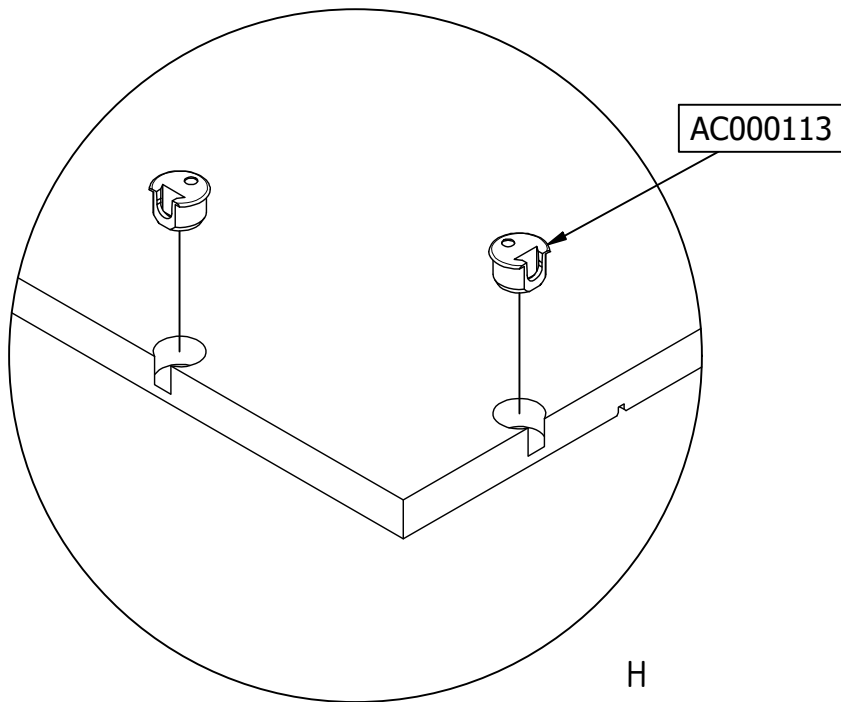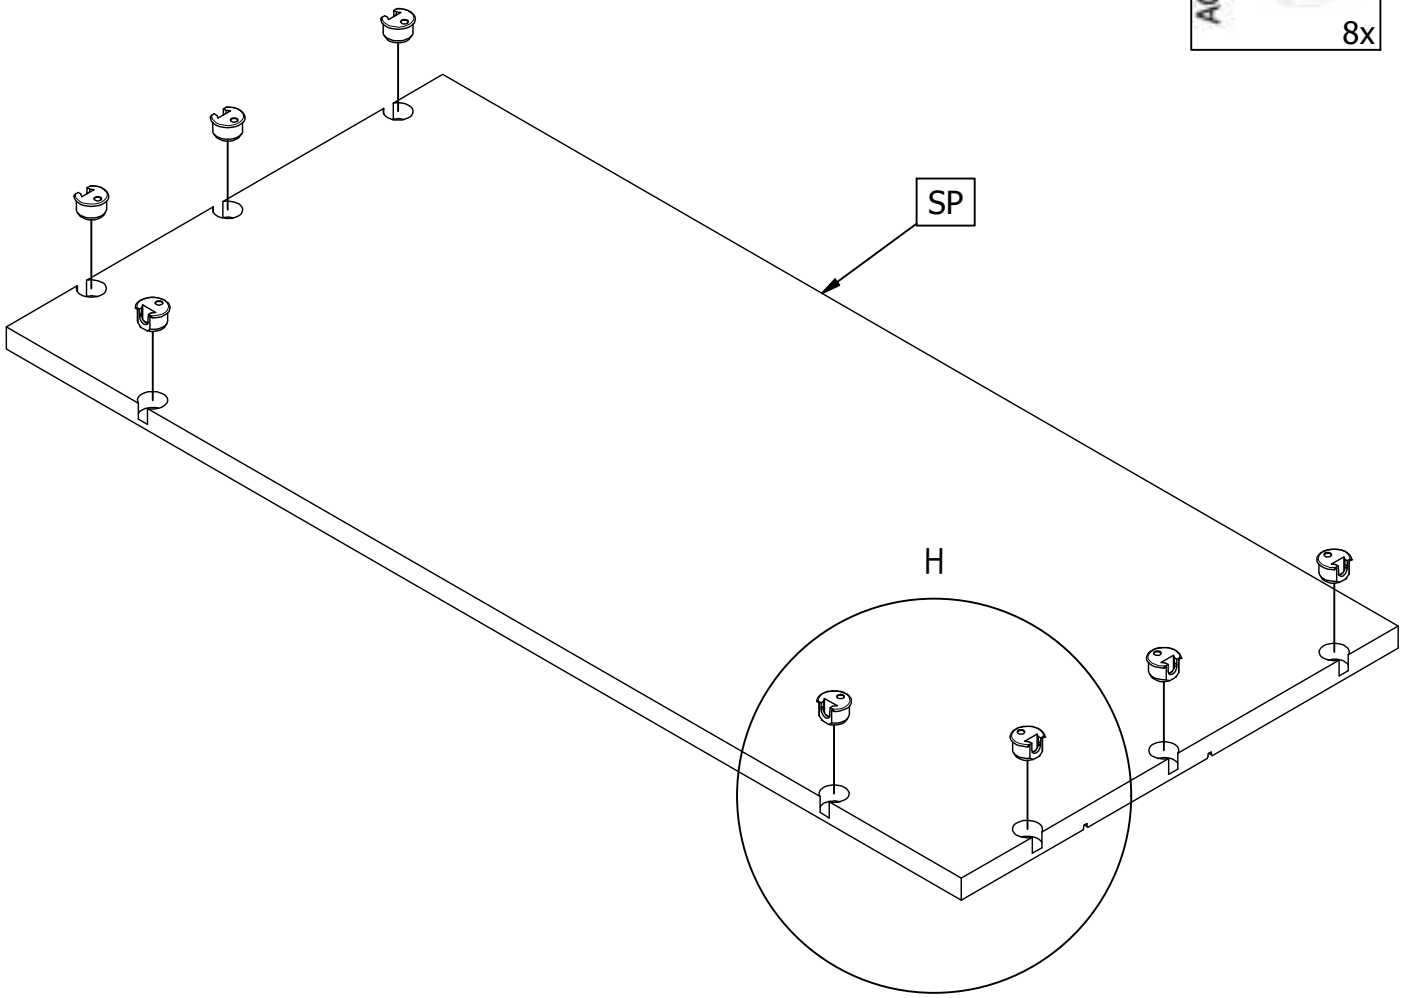

2x

16

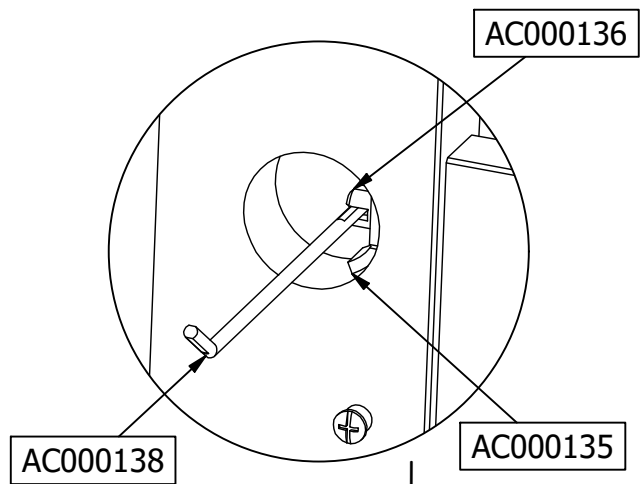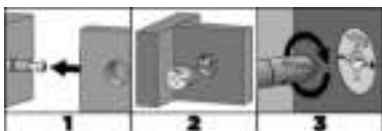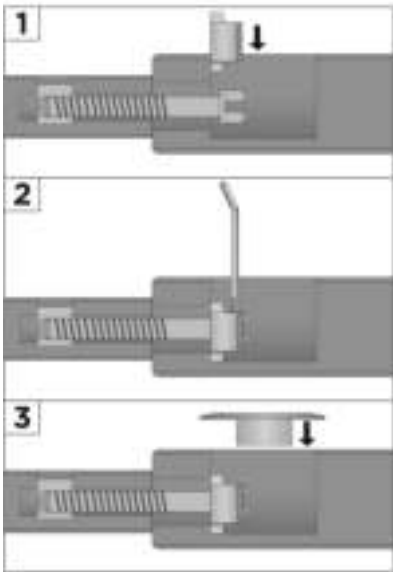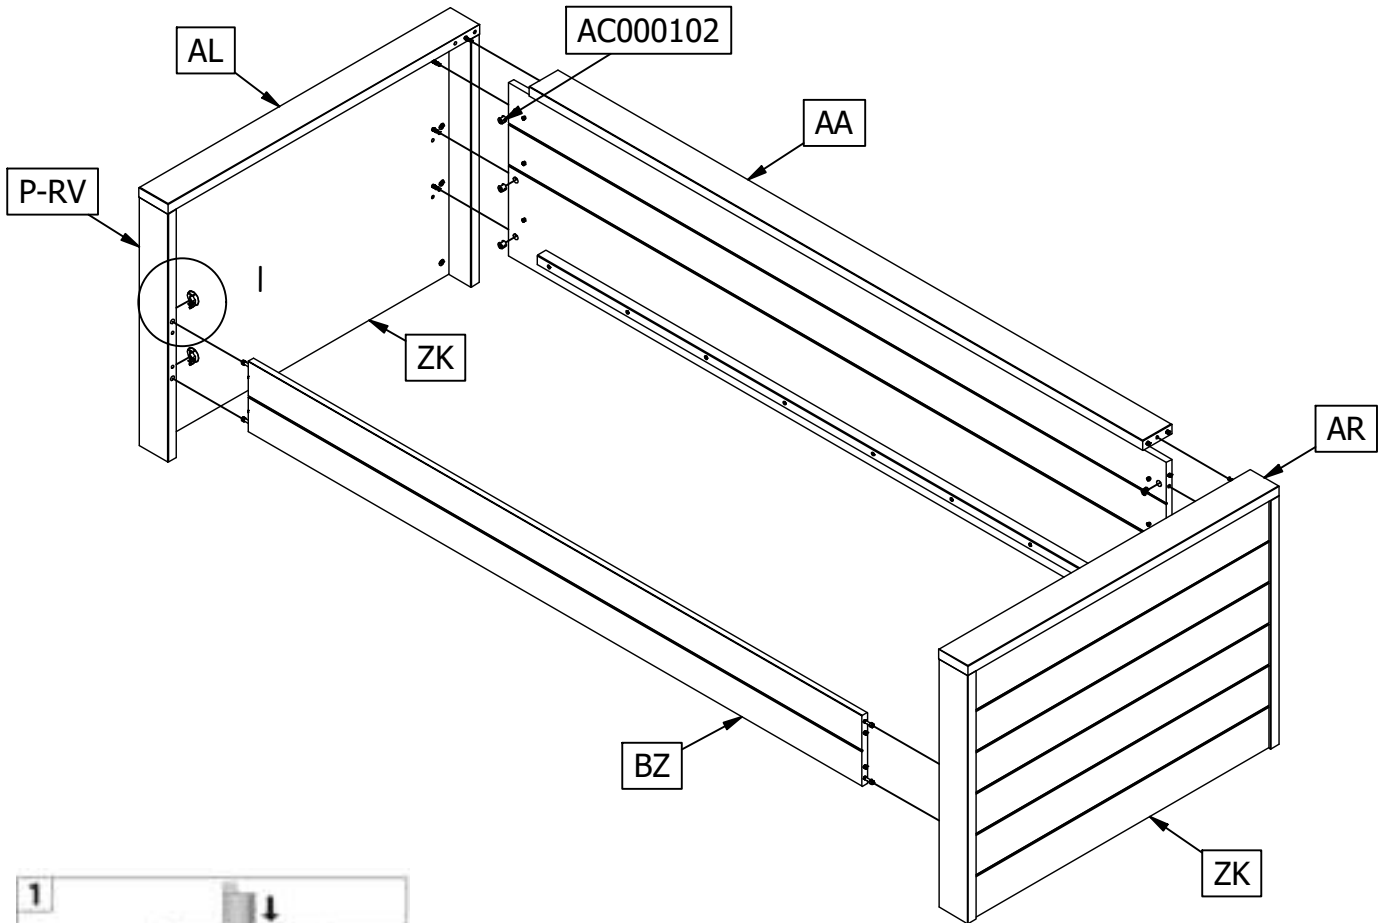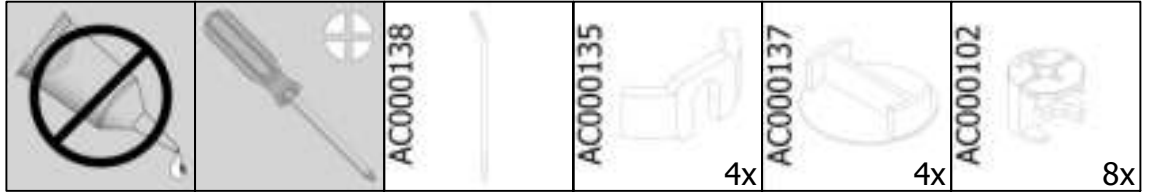

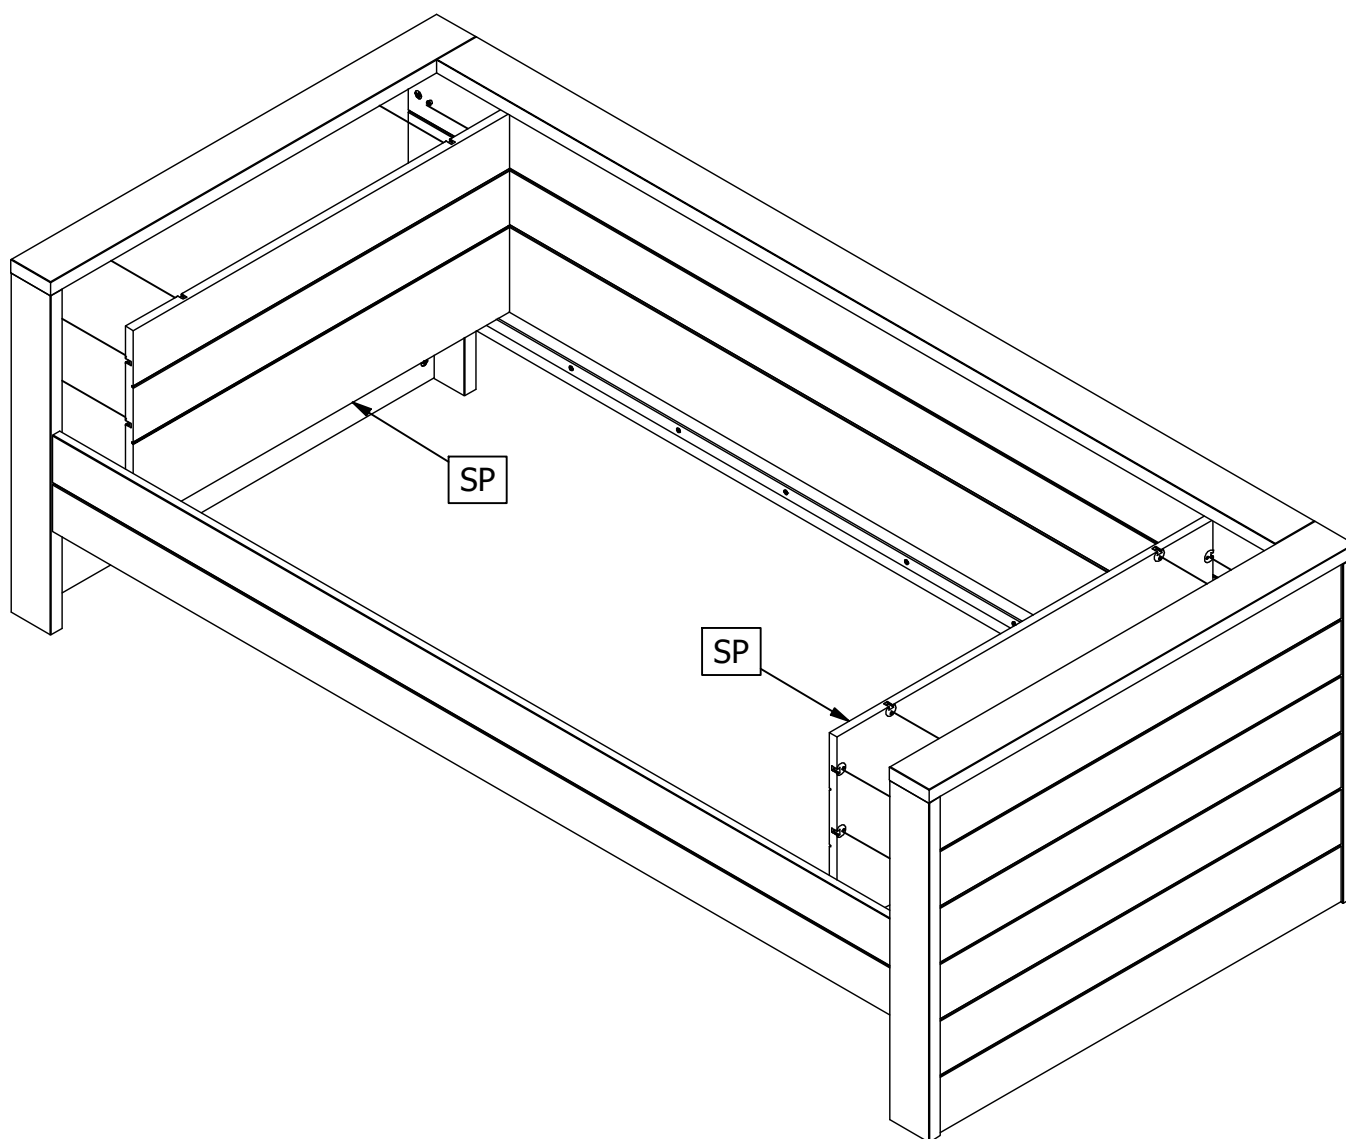

SOCIAL MEDIA

We zijn benieuwd naar het resultaat! Mocht je het met ons willen delen, gebruik #WOOOD op social media.
 We are curious about the result! Would you like to share it with us? Use #WOOOD on social media.
 Wir sind gespannt auf das Ergebnis! Möchten Sie es mit uns teilen? Benutzen Sie #WOOOD in Social Media.
 Nous sommes impatient de connaître le résultat. Souhaitez-vous le partager avec nous? Utilisez #WOOOD sur les médias sociaux.



facebook.com/wood.nl
 instagram.com/madebywood
 pinterest.com/madebywood