


Assembly Instructions

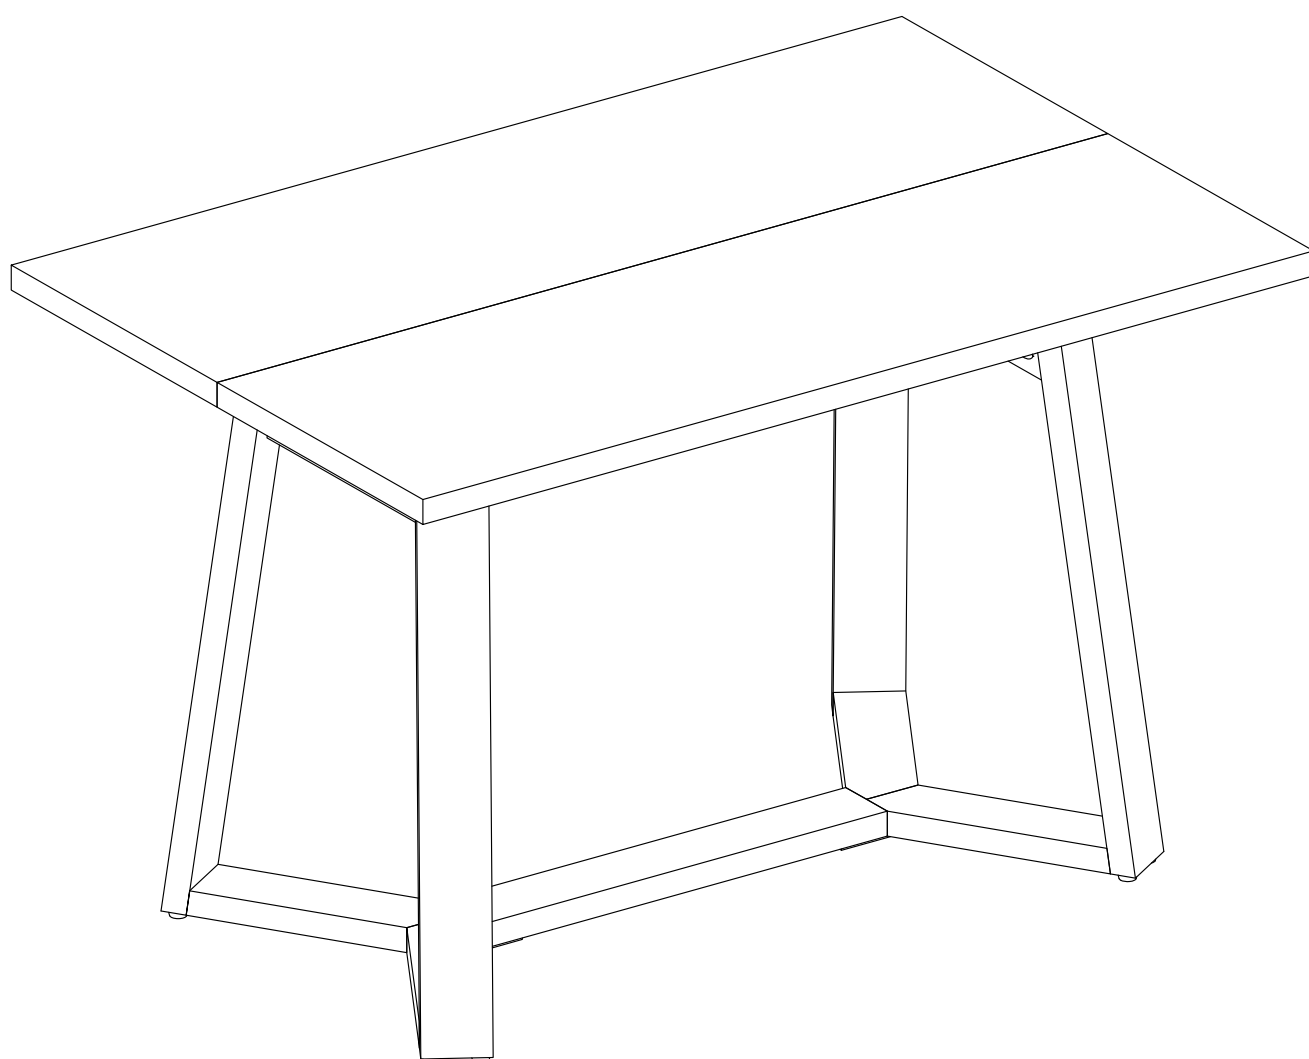


Dining Table

Model No.
HOGA-JW1228

Contact Us


We're here to help you.

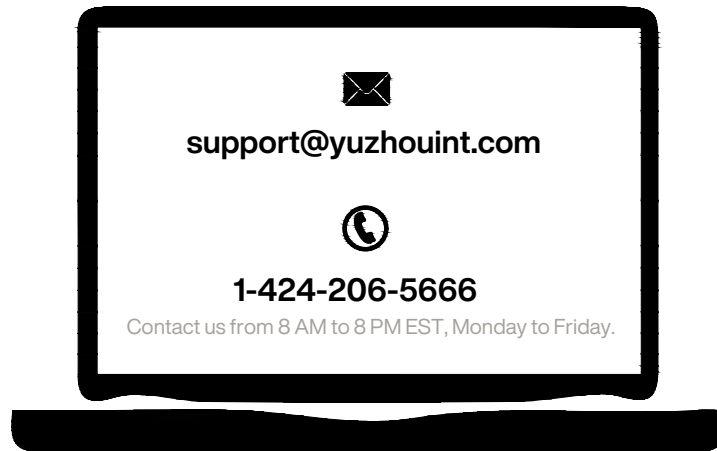

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

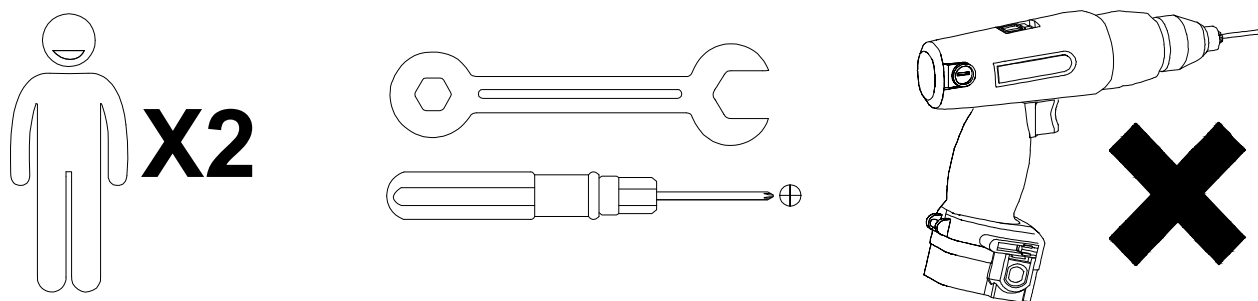


We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

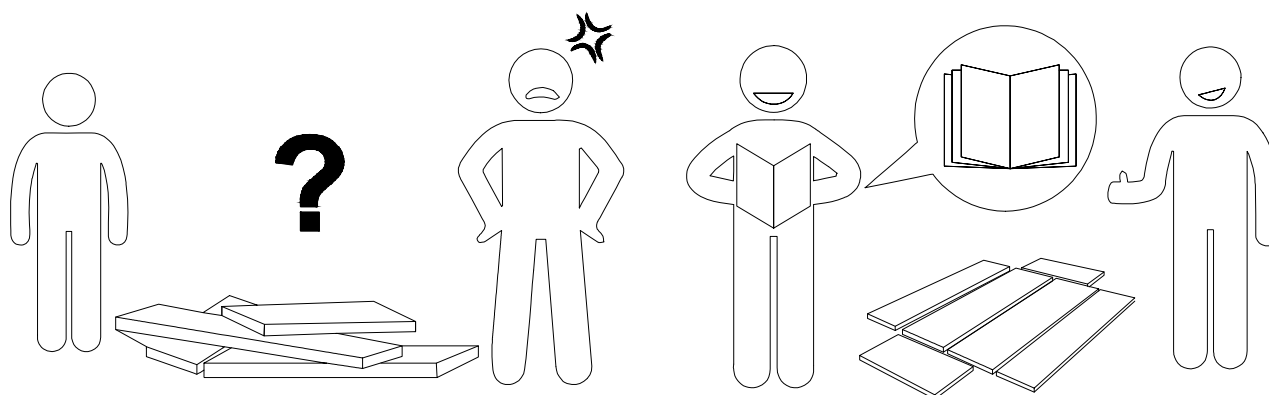

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.








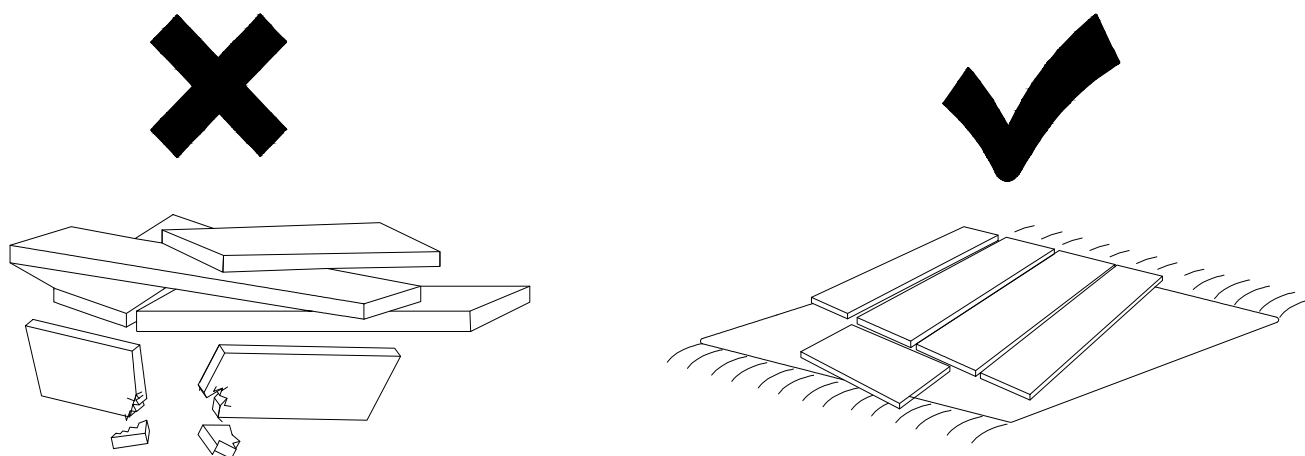


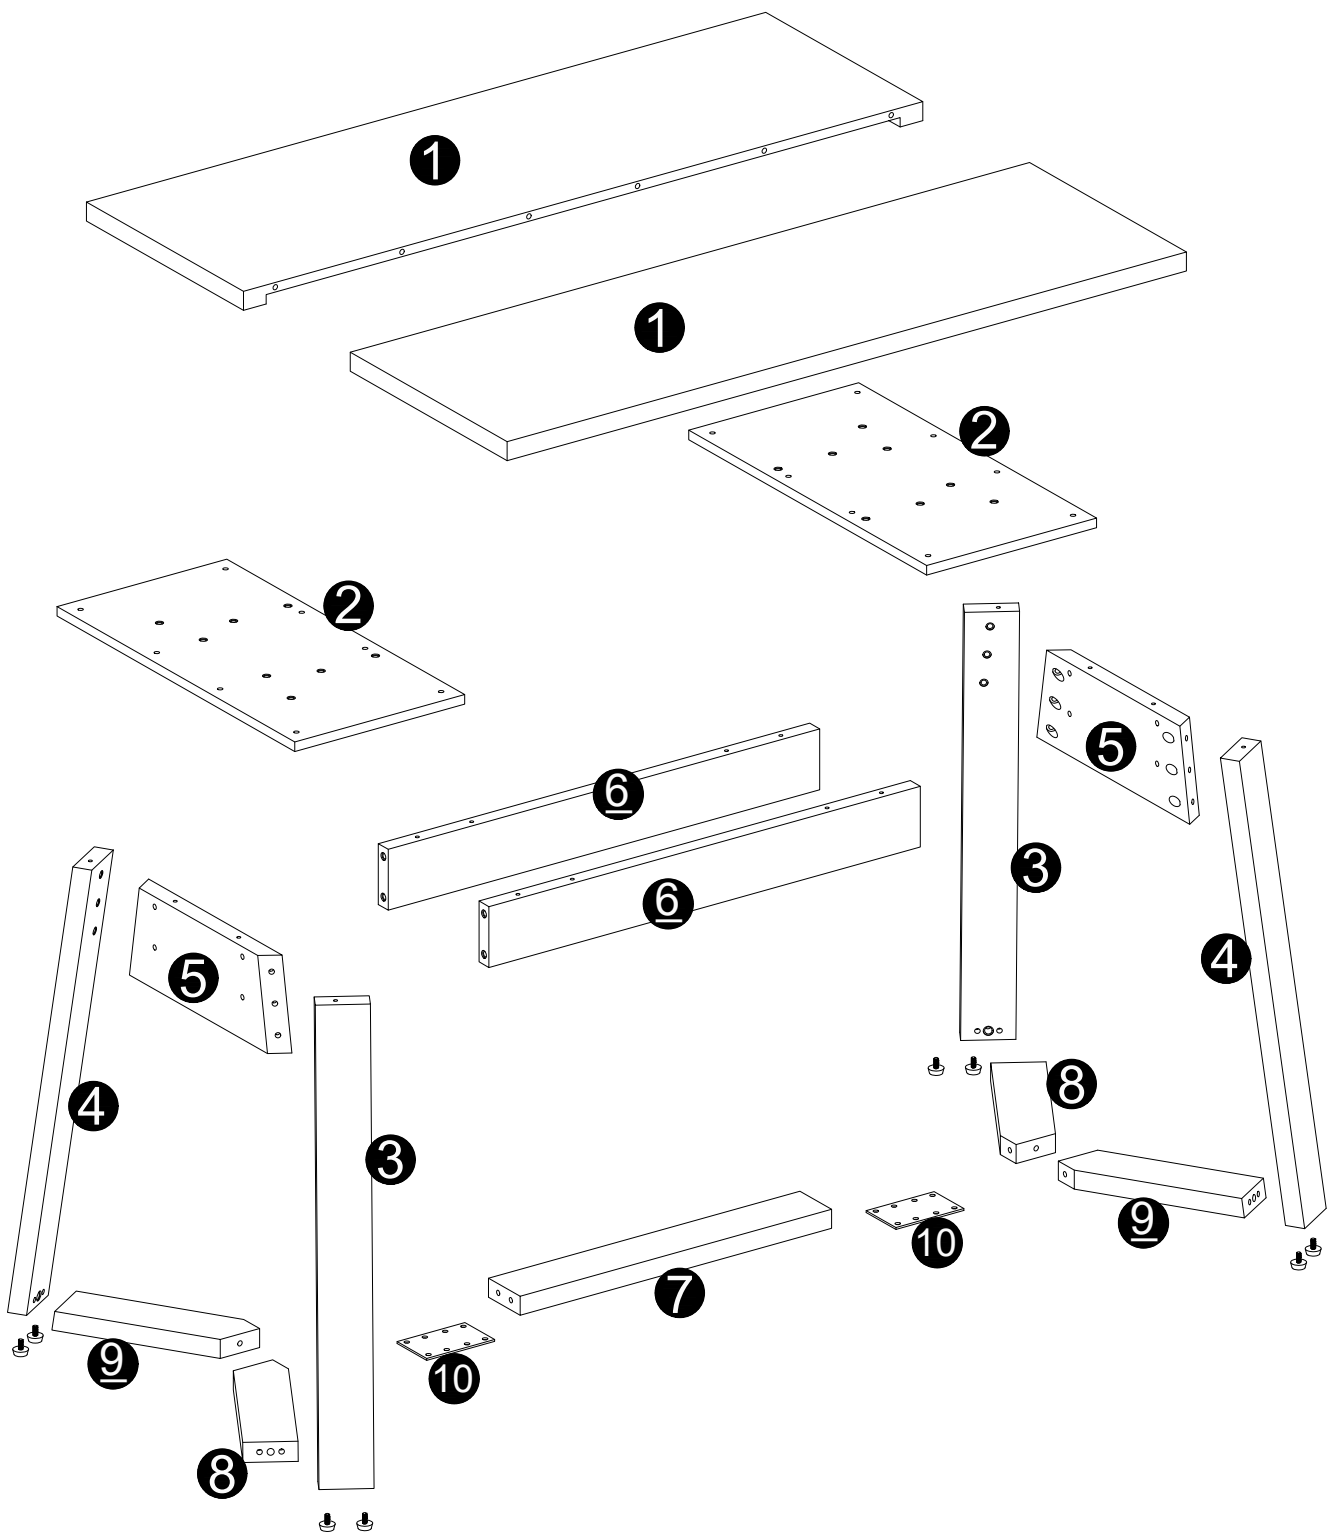











⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

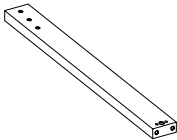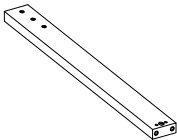
1  2 pcs	2  2 pcs	3  2 pcs	4  2 pcs	5  2 pcs
6  2 pcs	7  1 pc	8  2 pcs	9  2 pcs	10  2 pcs

Hardware List

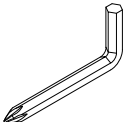
A	B	C	D	E	F
 M6x50mm 8 pcs	 M6x40mm 12 pcs	 M6x25mm 16 pcs	 M6x15mm 16 pcs	 Ø8x40mm 20 pcs	 Ø7x47mm 16 pcs
G	H	I	J	K	L
 Ø3.5x14mm 10 pcs	 47x16mm 5 pcs	 M6xØ23mm 8 pcs	 8x30mm 4 pcs	 M8x70mm 4 pcs	 M8x14x8mm 4 pcs
M	N				
 M8 1 pc	 M4 1 pc				

Installation of Cams and Pins


Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

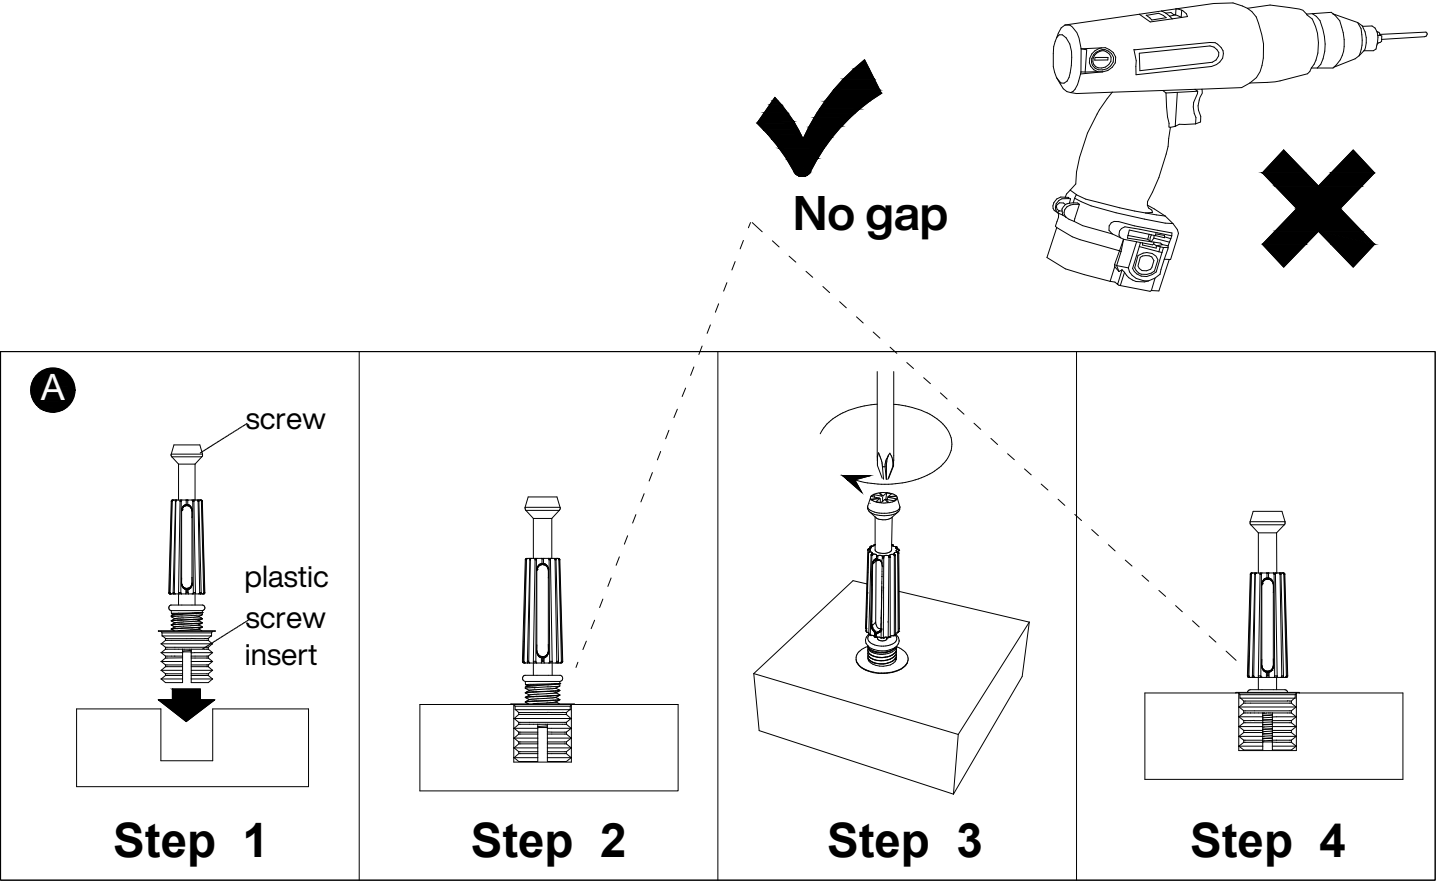


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

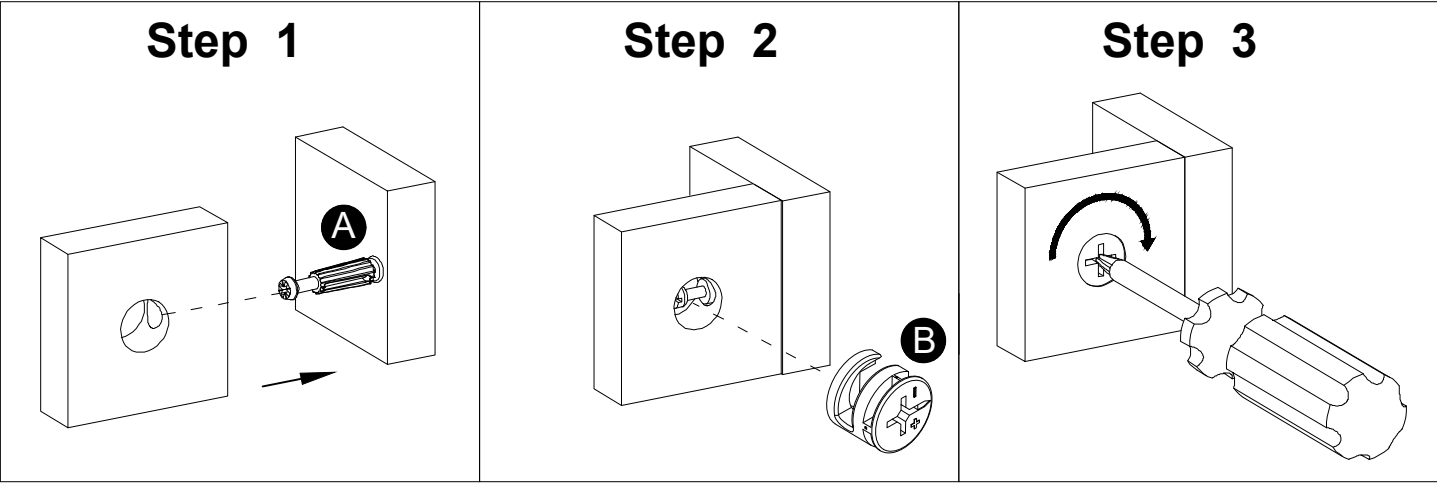


1

K

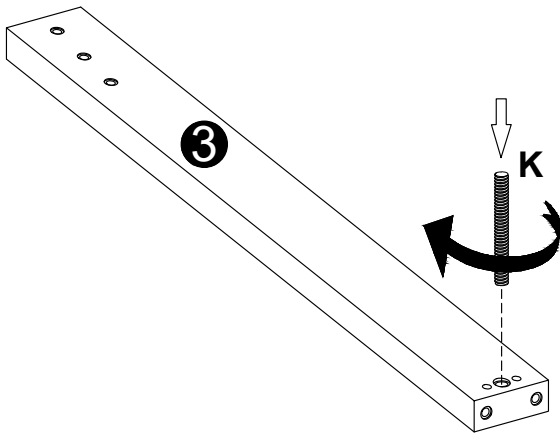M8x70mm
4 pcs

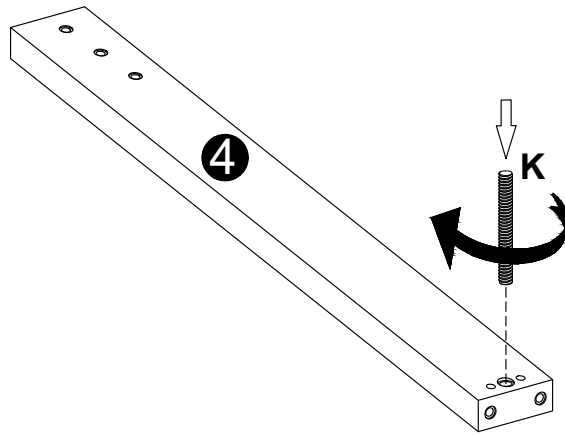



x2




x2


2

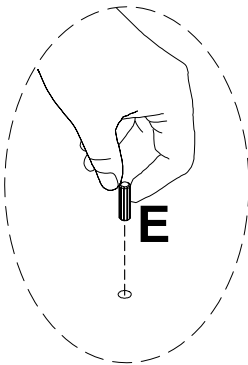



E	J	L	M
			
Ø8x40mm	8x30mm	M8x14x8mm	M8
8 pcs	4 pcs	4 pcs	1 pc

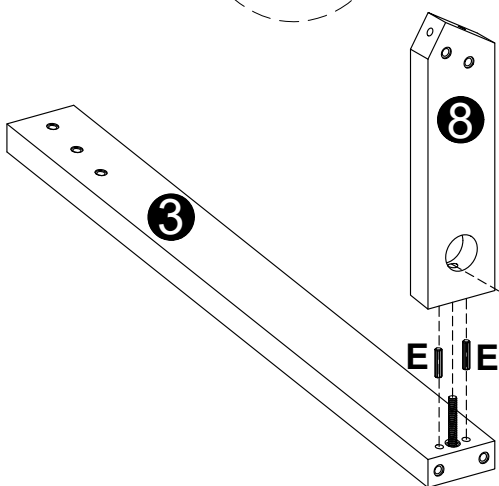


x2

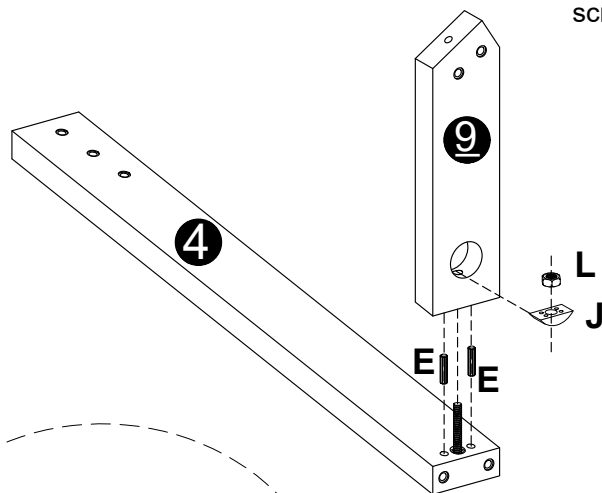


x2

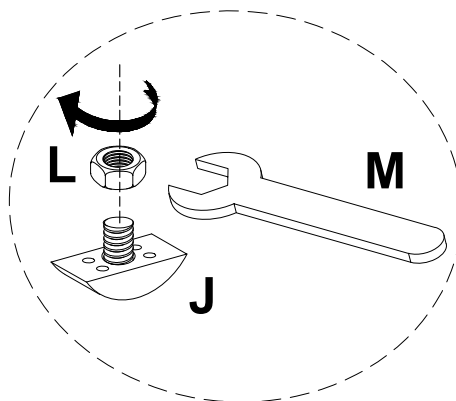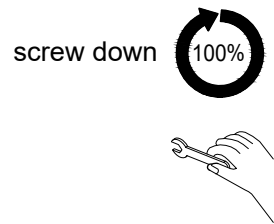


3

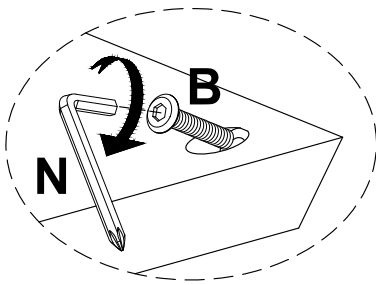


B	E	N
		
M6x40mm	Ø8x40mm	M4
12 pcs	2 pcs	1 pc

pre-drill 90% 

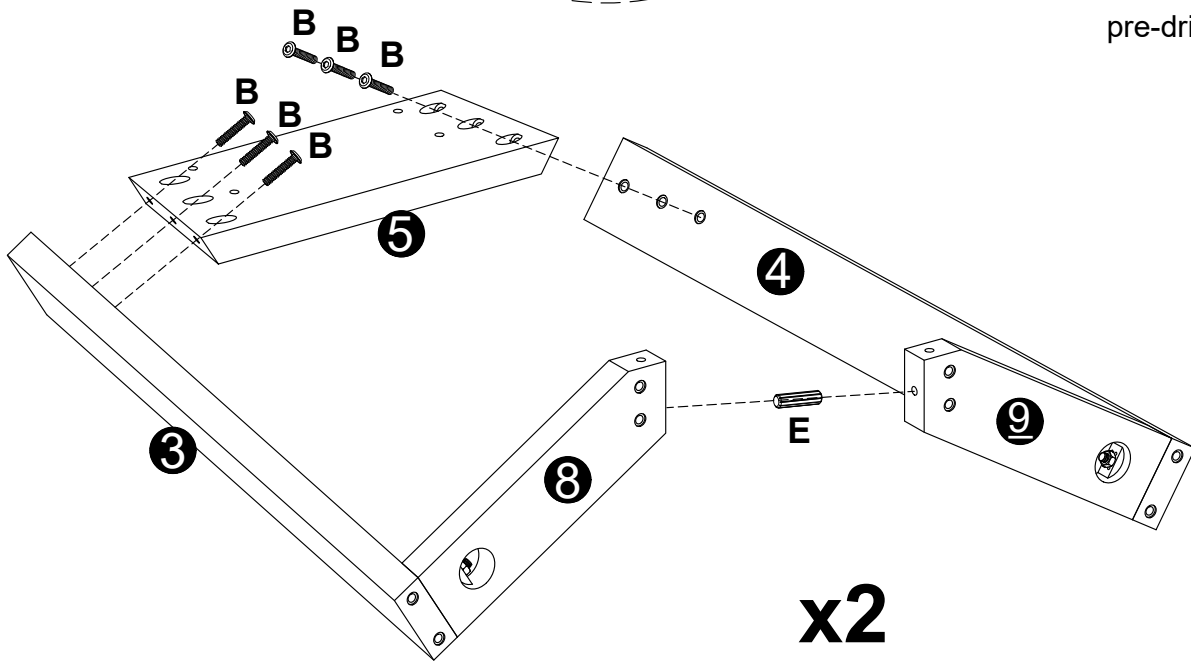


4

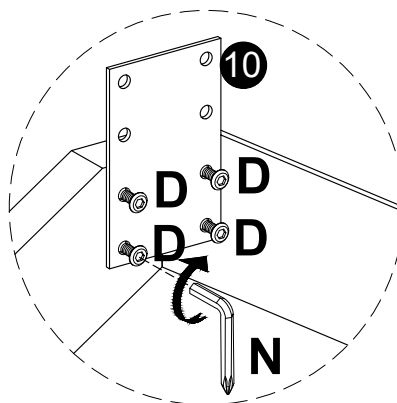


D

M6x15mm
8 pcs

pre-drill 90% 

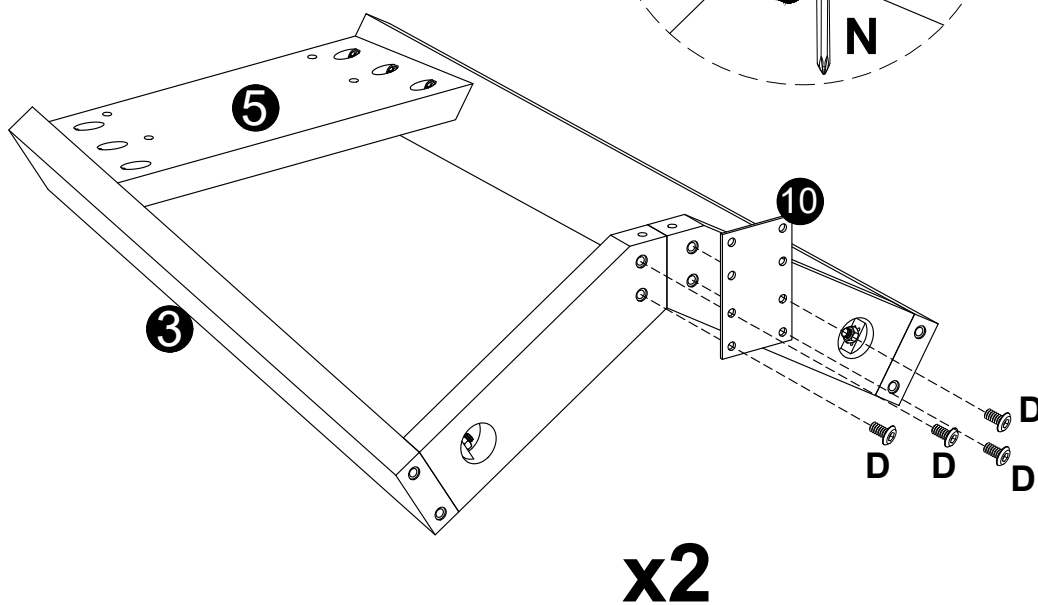



5

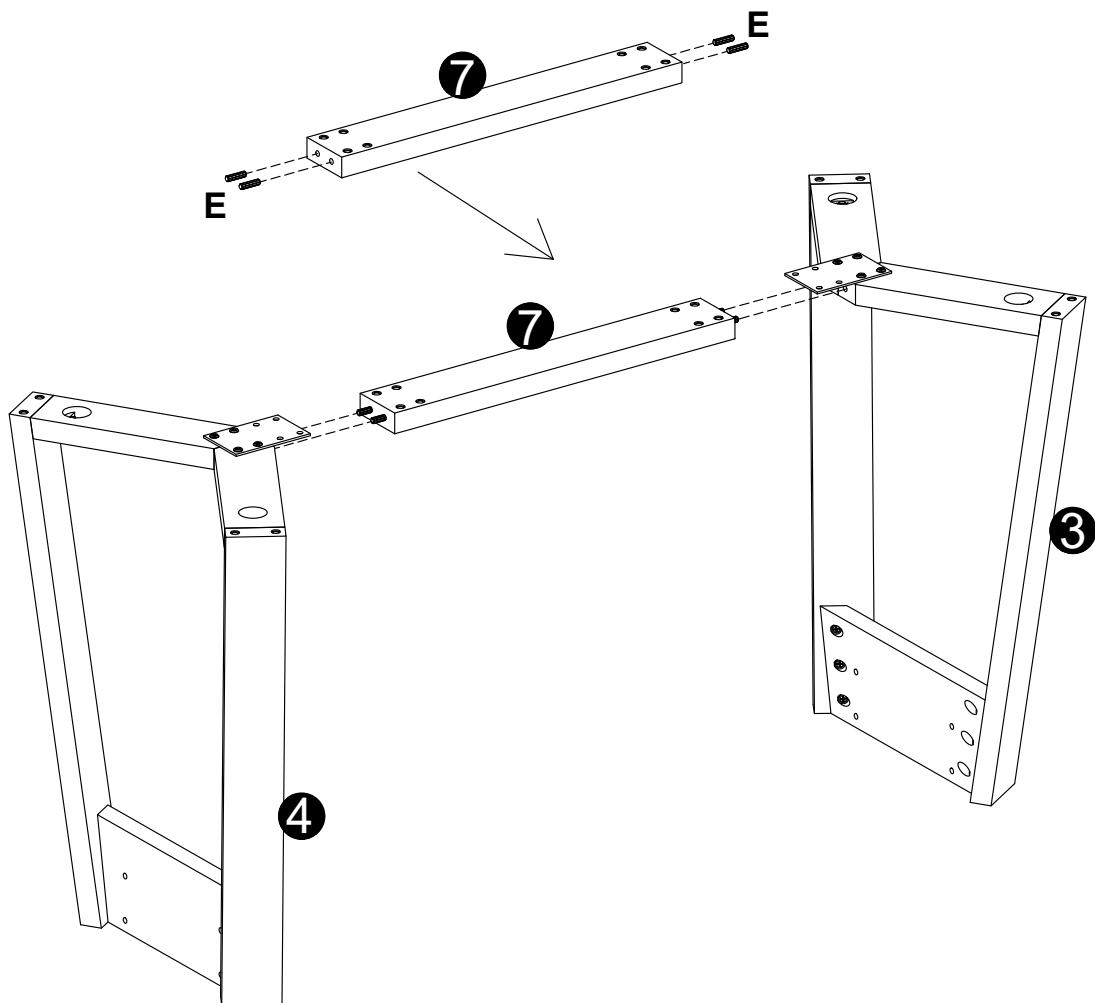

E


Ø8x40mm
4 pcs

6

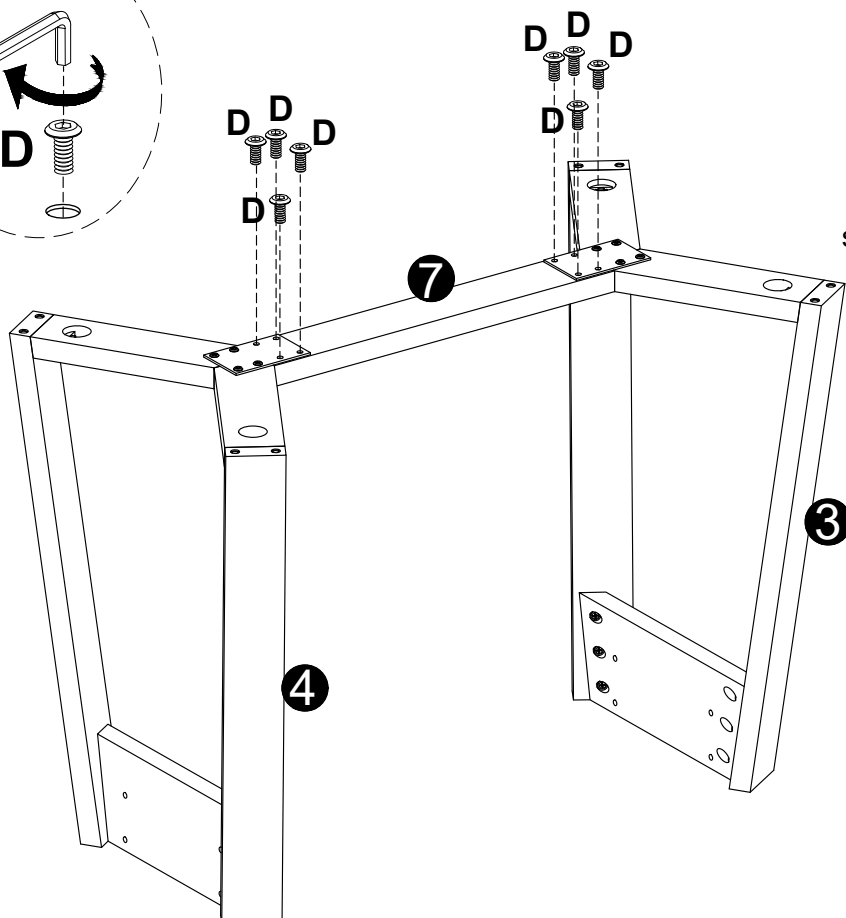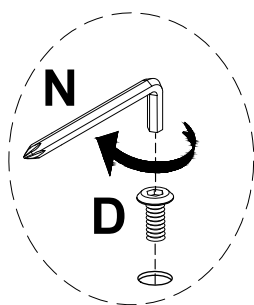



D


M6x15mm
8 pcs

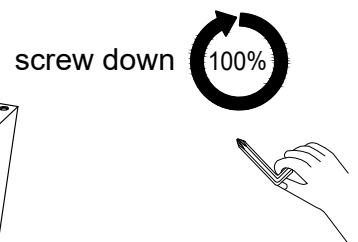


7

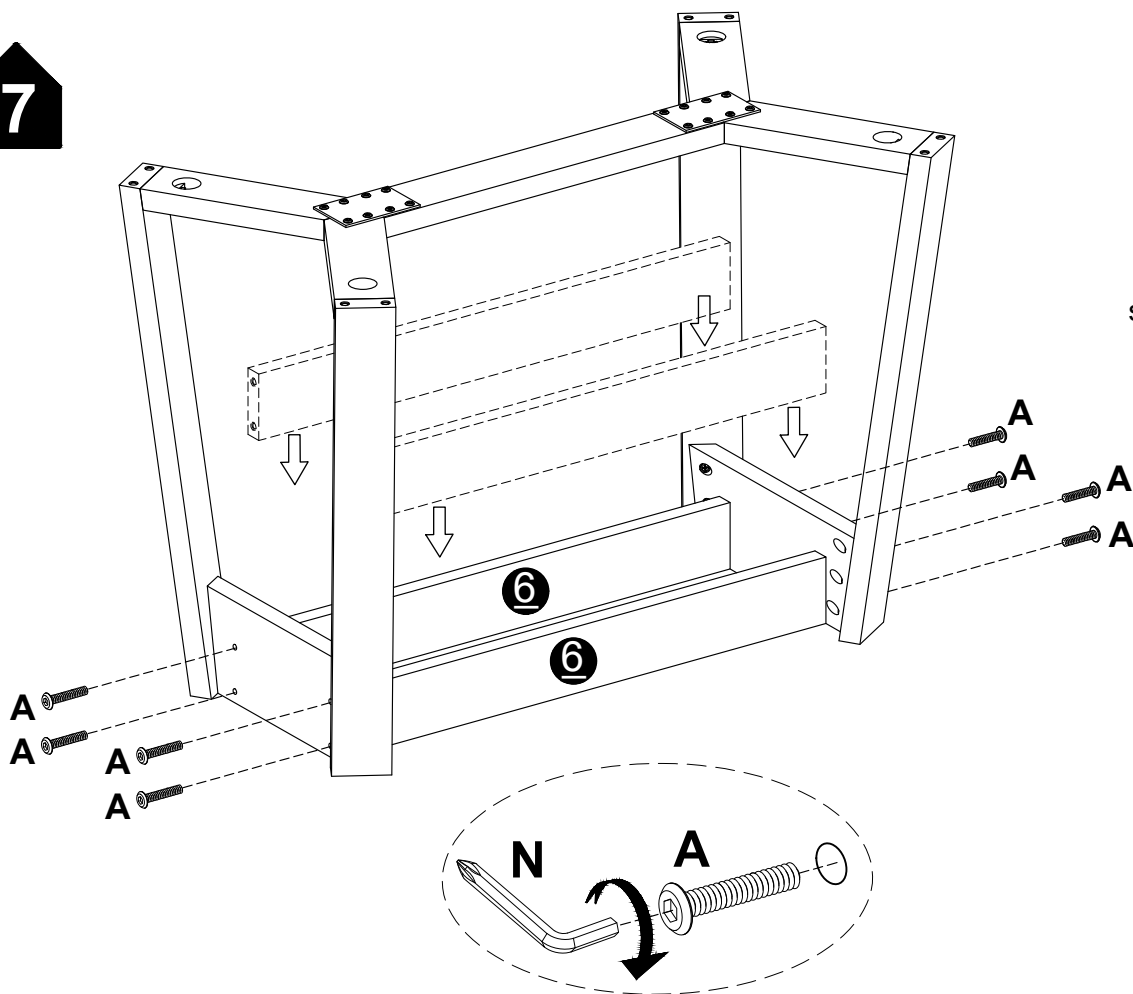

A

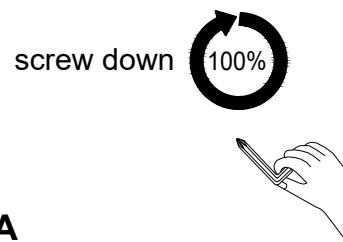M6x50mm
8 pcs

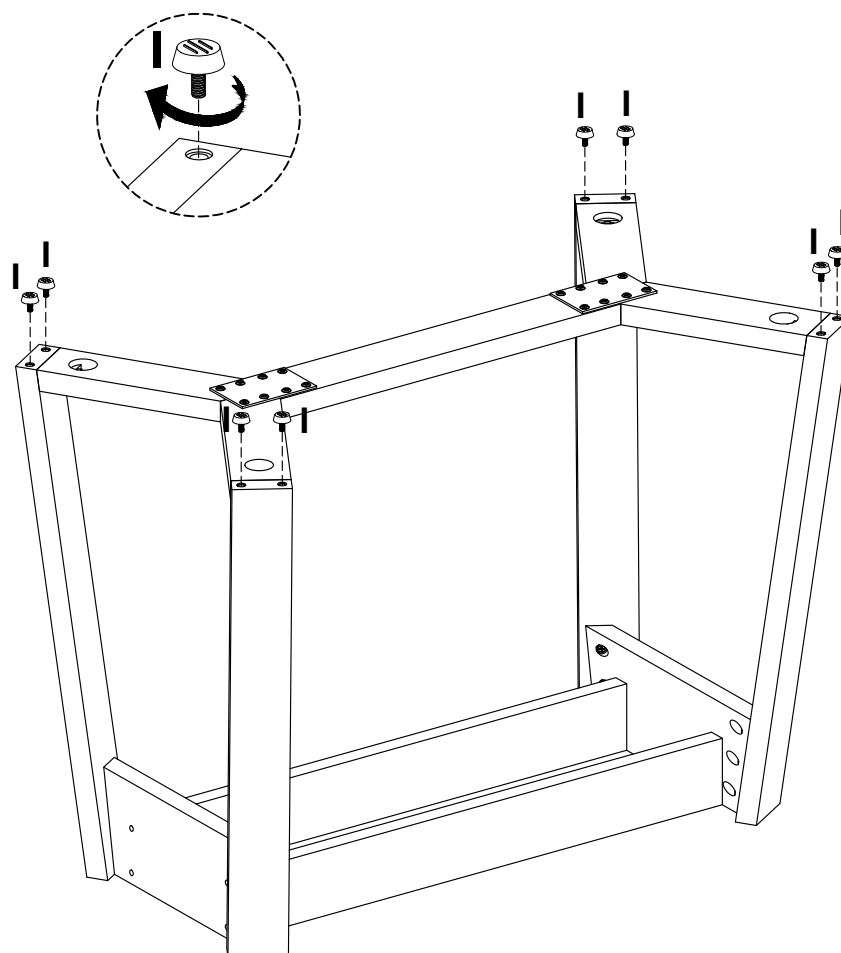




8





I

M6xØ23mm
8 pcs


9

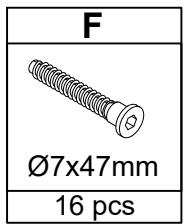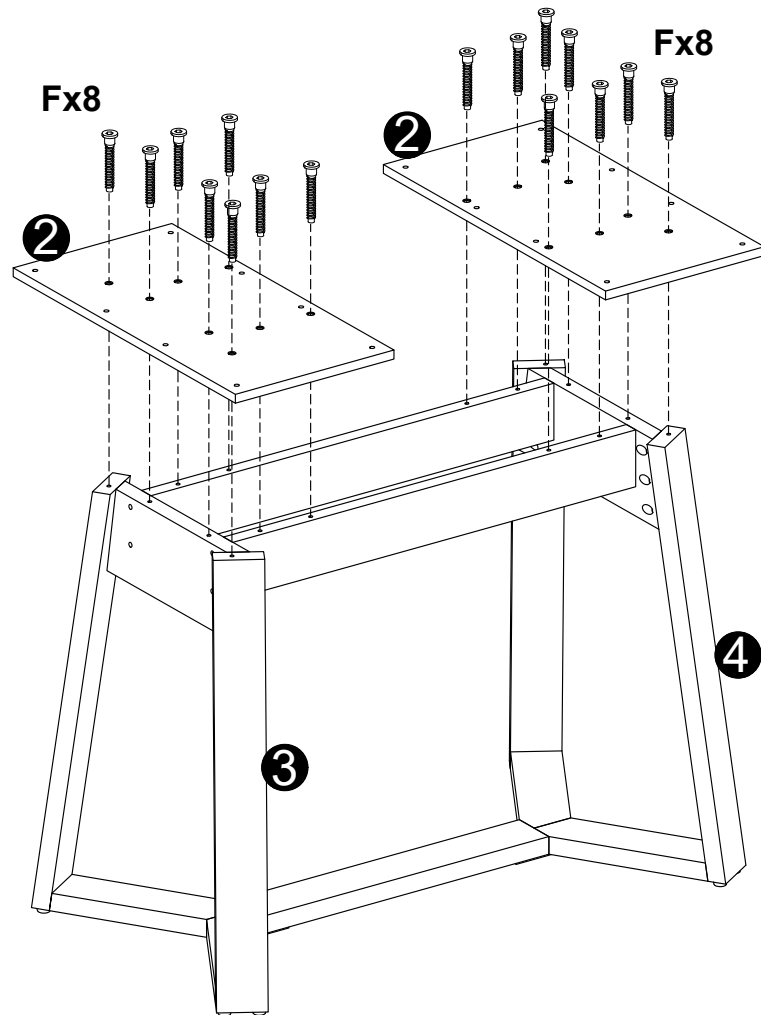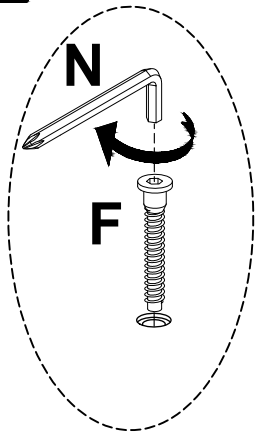


10

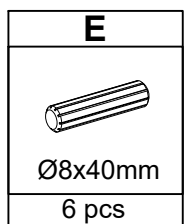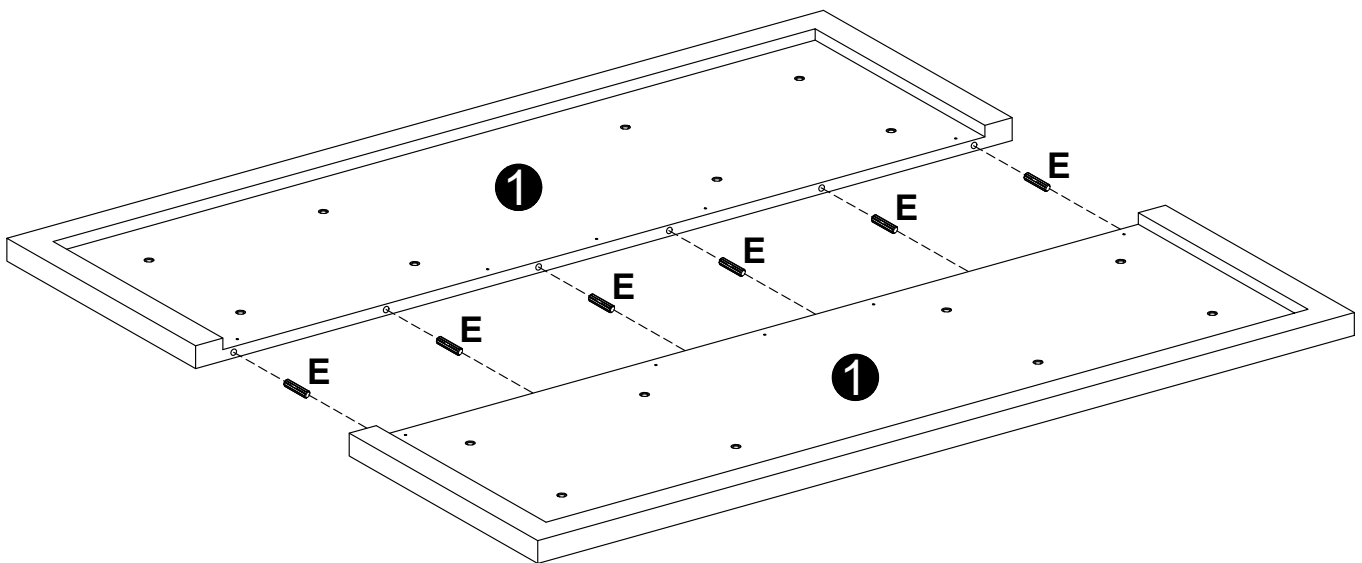


11

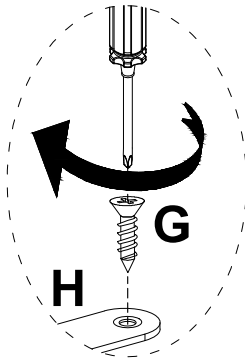

G	H
	
Ø3.5x14mm	47x16mm
10 pcs	5 pcs


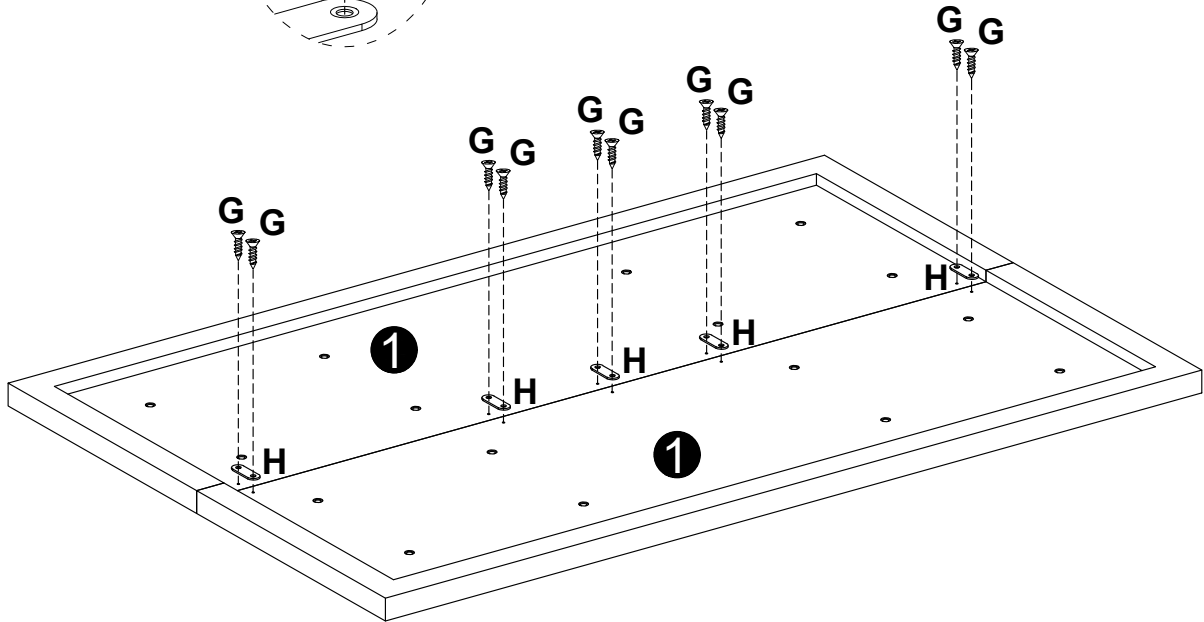


12

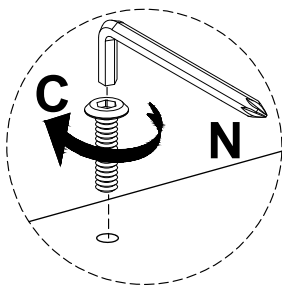


C

M6x25mm
16 pcs

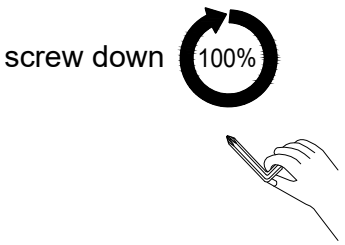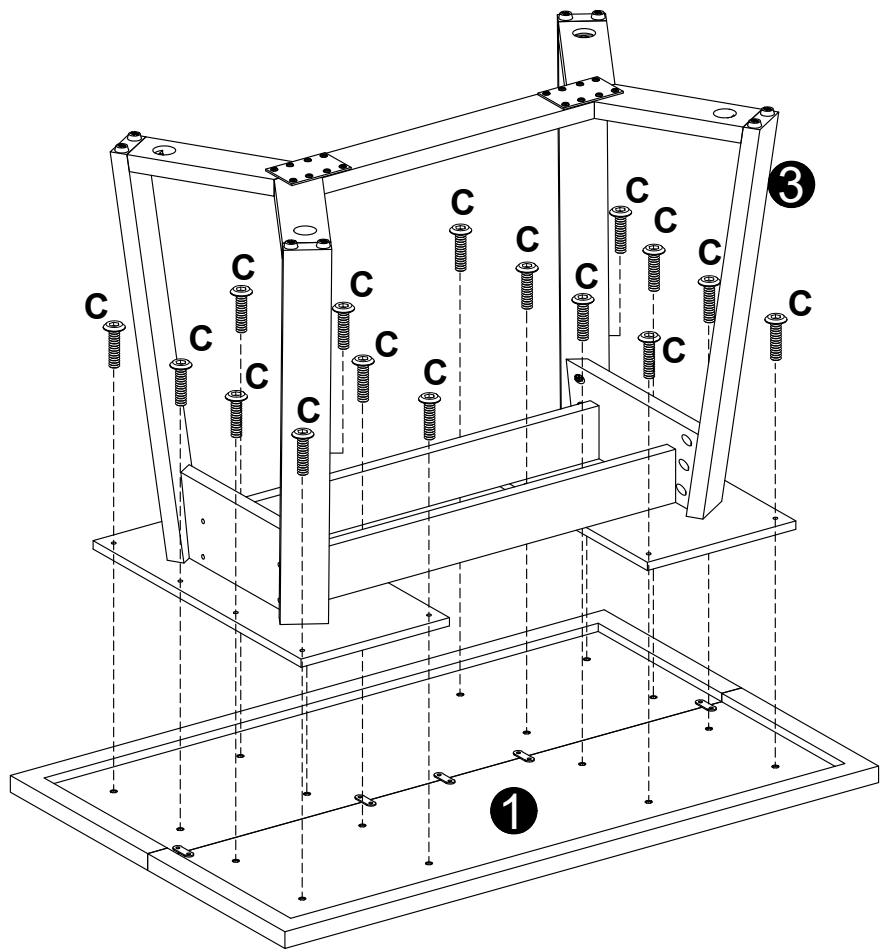

13

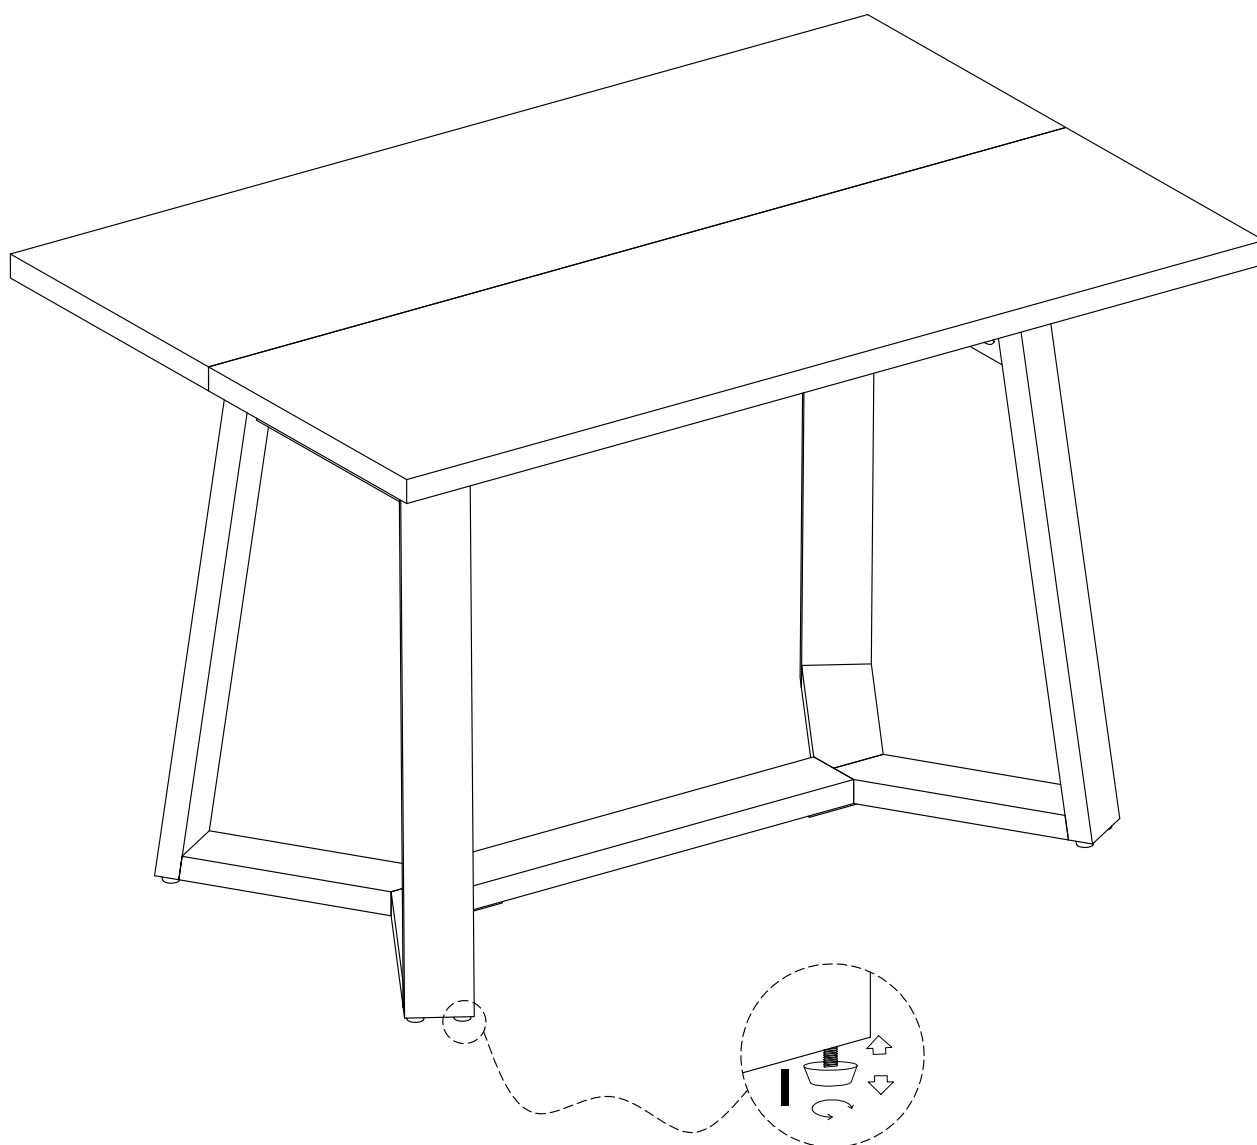

When it is not level on the ground, please adjust here

Thank you for your support!

