

MAGNETIC CABINET LOCKS!

INSTRUCTION MANUAL

Installation reminder:

1. Please clean and dry the surface of drawer
2. When pack lock body on blister already, push the switch up that will make magnet key could not open or close the lock
3. You steps keep 24 hours before your first use for max adhesive.


Installation instruction:

1. Latch Installation

Installation method may have to be slightly altered based on your cabinet or drawer style and design.

Latch installation: your cabinet or drawer have two styles, please choose right installation method

Style 1: door not inserted into frame

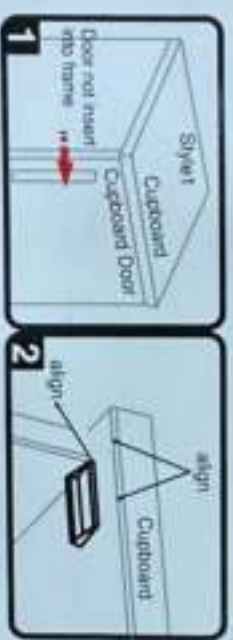

For cabinet where the door is not inserted into the frame (figure 1), latch side aligns with side frame, latch front part aligns with the cabinet frame (figure 2)

Style 2: door inserted into frame



For cabinet where door is inserted into frame (figure 3), latch at a depth equal to the depth of the door (figure 4)

2. Lock body installation




Attach the lock body to the inside of cabinet door, lock body aligns with latch on the same level (figure 5), aligns with the center of latch (figure 6).

3: Key Installation



Adhere key holder out of reach of child

Usage

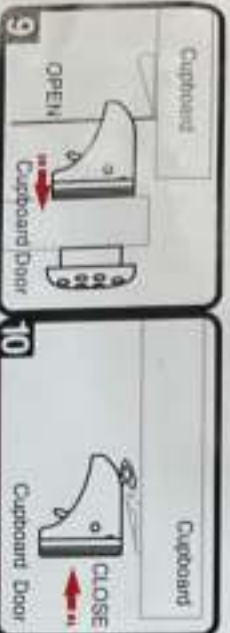

Touch the magnet key on the surface of cabinet door, aligning with lock body place could open the lock (figure 9) close the lock (figure 10)



Magnetic lock have normal open and normal close function (figure 11, 12) when need normal open function (baby or child not at home), please tick switch up (figure 11)

Please adhere key on key holder after use to avoid missing (figure 6)

Caution:

1. This is not a toy.
2. Please stop using if there is any defect.
3. This product can't replace the care of adults.
4. When installing do not touch sticker with hands

Materials: ABS

WARM TIPS

In order to make sure the adhesive Tapes to stay in the strongest adhesion, please make sure there is NO dust, water or wax on the surface of installation position. Use the Alcohol cotton to clean the surface if necessary.

Notes for Super Strong Adhesive Tape

EXTRA 3M FOAM



1. Do not touch the surface of the Adhesive Tapes when the released paper is off
2. Press firmly when it is applied on the surface
3. It can reach its best adhesion after 24 hours
4. When remove try to use a hair dryer to help release the tapes on the surface

This Cabinet's Drawer Lock is not suitable for the metal furniture, which are made of magnet materials