

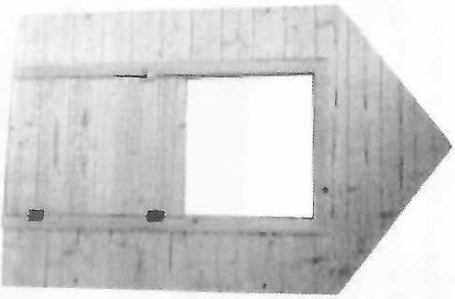
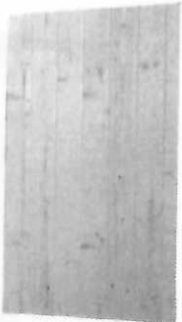
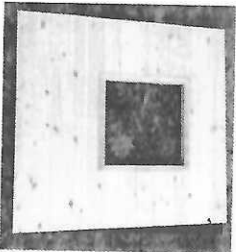
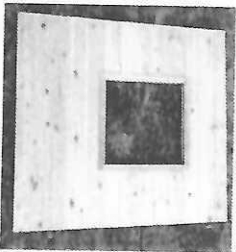




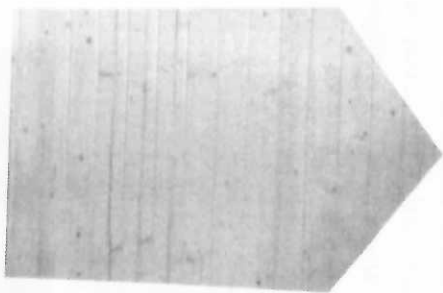


# Parts List

|  |                           |   |                            |
|--|---------------------------|---|----------------------------|
|  | <b>Back Panel</b><br>x 1  |  | <b>Roof Panel 1</b><br>x 1 |
|    | <b>Front Panel</b><br>x 1 |    | <b>Roof Panel 2</b><br>x 1 |

|   |                                   |   |                                    |
|---|-----------------------------------|---|------------------------------------|
|  | <b>Side Panel 1 (Left)</b><br>x 1 |  | <b>Side Panel 2 (Right)</b><br>x 1 |
|    | <b>Roof Joiner</b><br>x 1         |    | <b>30 x Screws</b>                 |

Note the left side will have 2 pre drilled holes inside the window frame. (This is to connect the shelf)

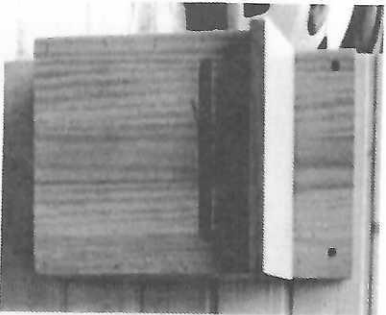Note the right side panel will have 2 pre drilled holes on the inside bracing as image shows. (This is to connect the planter box)


|   |                |   |              |
|---|----------------|---|--------------|
|  | <b>Mailbox</b> |  | <b>Shelf</b> |
|  | <b>Planter</b> |   |              |

2

3


**STEP 1**

Connect front panel to side panel with 3 x screws.

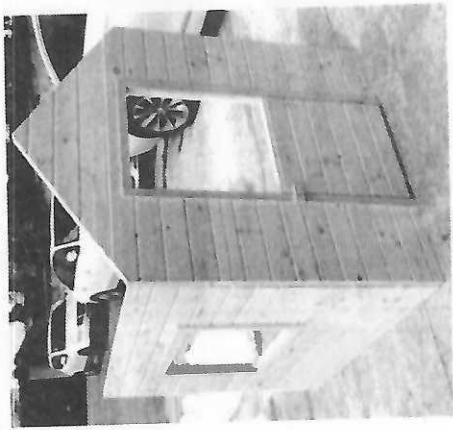


**STEP 2**

Connect second side panel to front panel with 3 x screws.

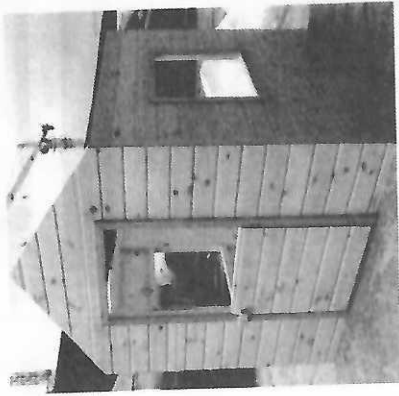

**STEP 5**

Align roof panel two with roof panel one & connect with 4 x screws. Then place roof joiner on top of roof peak & connect with 4 x screws to roof panels. See picture.

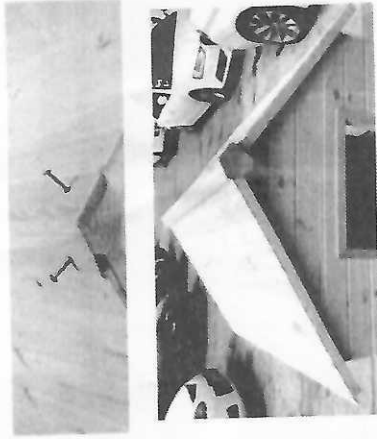


**STEP 6**

Position mailbox on front panel, Check that the top 2 holes align with the bracing support inside the cubby as image shows. When mail box is aligned connect using 2 x screws.




**STEP 3**

Connect back panel to the two side panels with 6 x screws.

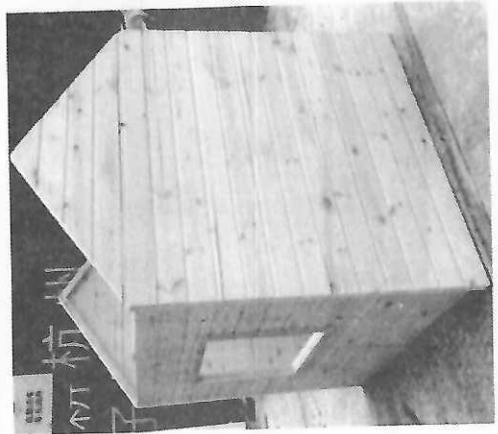


**STEP 4**

Connect roof panel one to cubby frame with 4 x screws. Ensure panel is square & flush with the roof peaks on front & back panels. See picture.

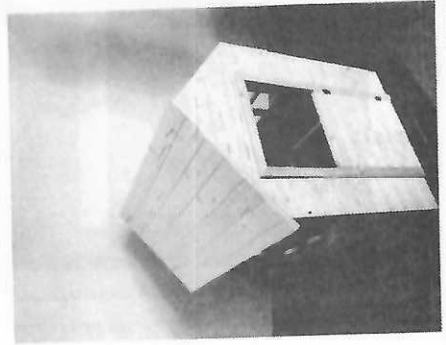

**STEP 7**

Align window shelf on right side window. Note the shelf will sit slightly inside as image shows. Use 2 x screws to connect shelf into position.

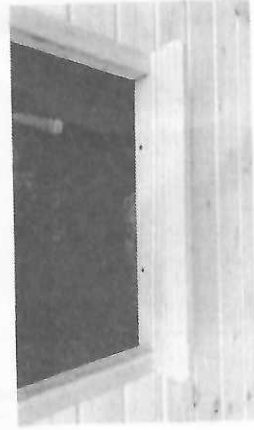

**STEP 8**

Position Planter box flush on the underside of window frame (Left side). Once aligned screw from the **INSIDE** 2 x screws to fix into position.

