

**Note:** It is recommended to do the installation with the help of a drill.

**1**



1-) Fix the side metal profiles to the 45 cm side surfaces of the chipboards you have placed on a flat surface with 3.5 x 50 mm chipboard screws.

**2**

2-) Then connect the side profiles with the intermediate metal profiles with the help of 5 x 50 mm screws.


**3**

Your nesting table is ready to use.  
Have a nice day.

<p>3.5 x 50 mm chipboard screw</p>  <p>12 pieces</p>	<p>5 x 50 mm screw</p>  <p>6 pieces</p>
---	--


**Opmerking:** het wordt aanbevolen om de installatie uit te voeren met behulp van een boormachine.

1

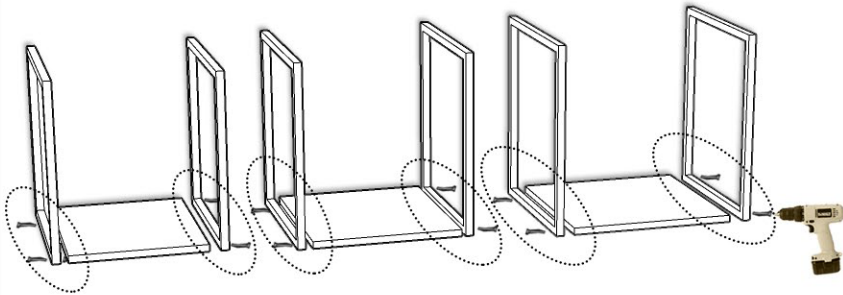


1-) Bevestig de metalen zijprofielen aan de zijvlakken van 45 cm van de spaanplaten die je op een vlakke ondergrond hebt geplaatst met spaanplaatschroeven 3,5 x 50 mm.

2

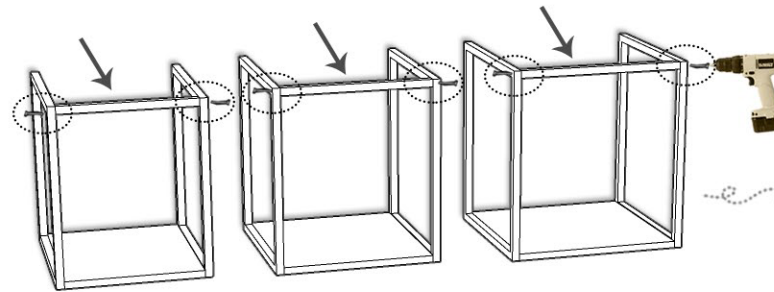

2-) Verbind vervolgens de zijprofielen met de metalen tussenprofielen met behulp van 5 x 50 mm schroeven.

3

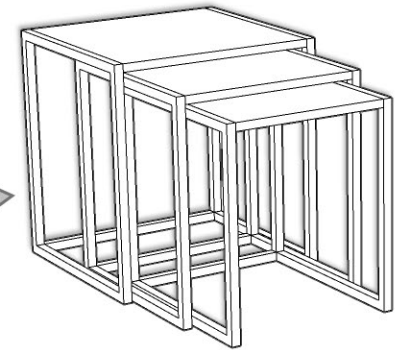

Uw nesttafel is klaar voor gebruik.  
Fijne dag.

Spaanplaatschroef 3,5 x 50 mm



12 stuks

5 x 50 mm schroef



6 stuks