




Installation Instructions

Notes: Don't tighten screws completely at first, just in case parts were assembled wrong and need disassemble. Tighten screws at last when all parts are put together.

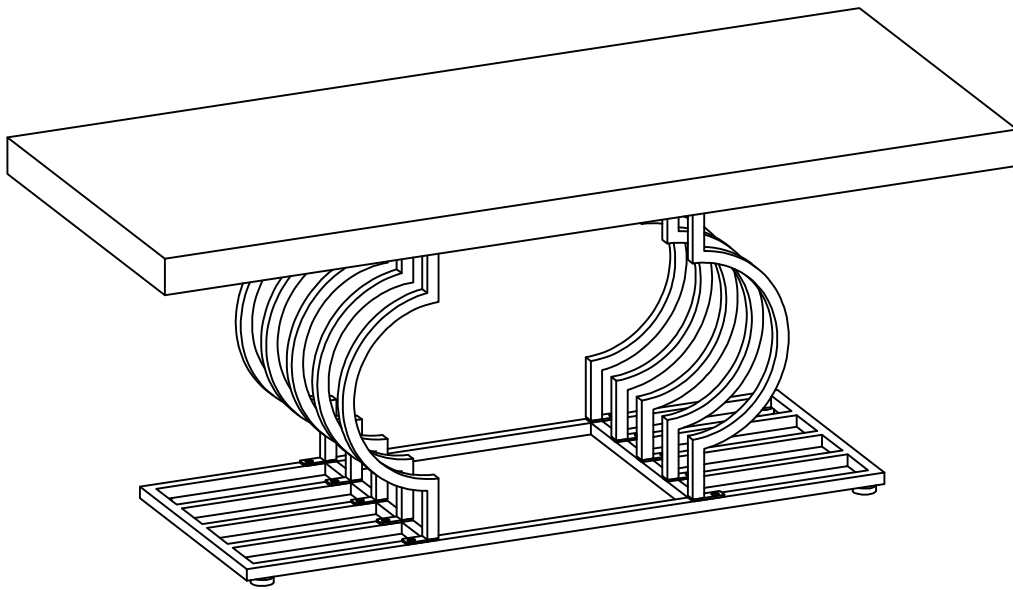

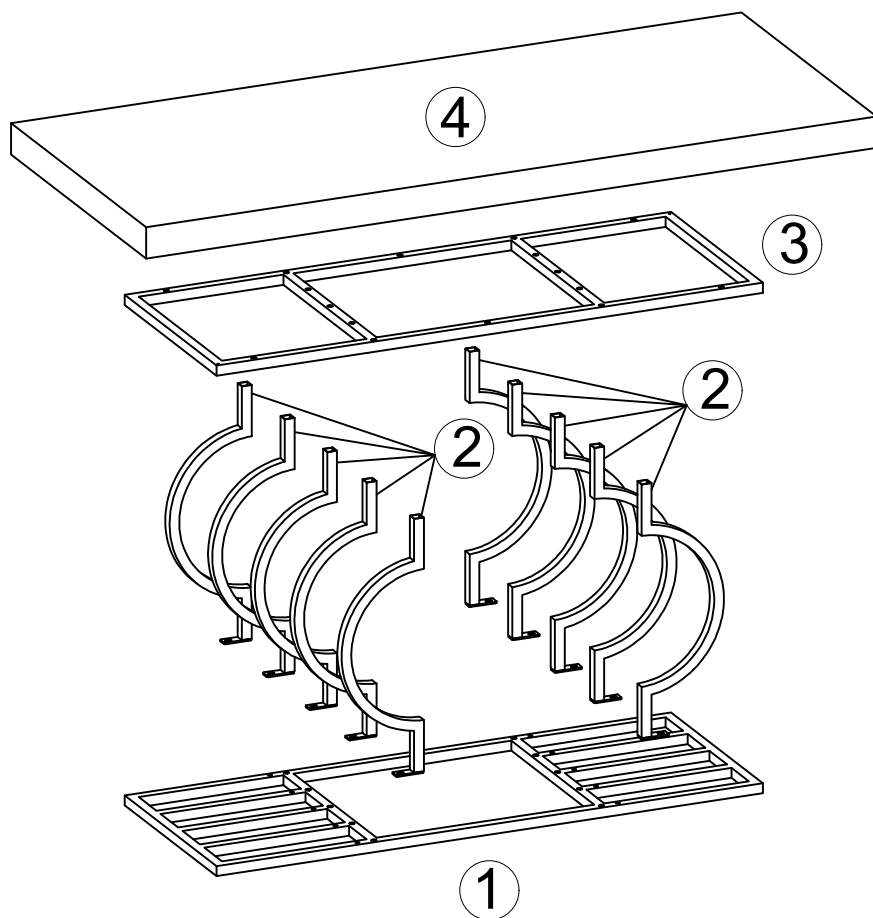


1

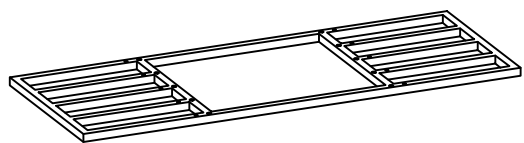


1PC

2

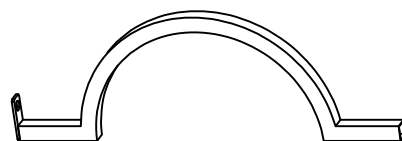


10PCS

3

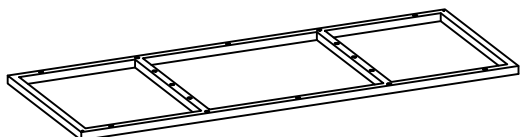

1PC

4

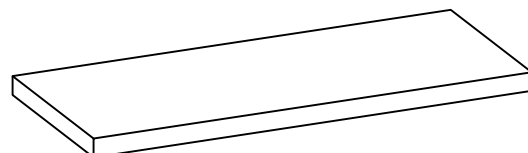


1PC

A




M6×12mm
10pcs+1pc

B



M6×32mm
6pcs+1pc

C



M6×35mm
20pcs+1pc

D




4pcs

E




1pc

STEP 1

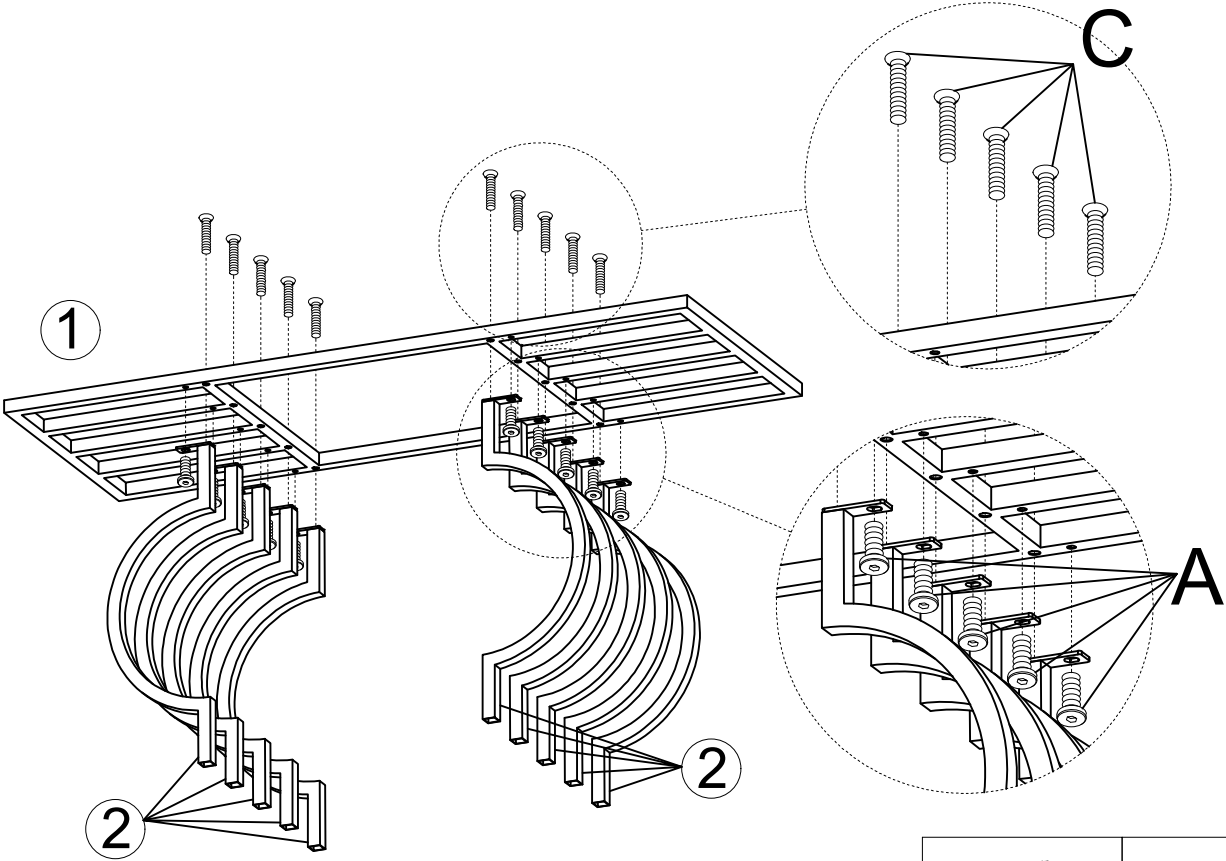


	
M6×12mm	M6×35mm
A×10pcs	C×10pcs

STEP 2

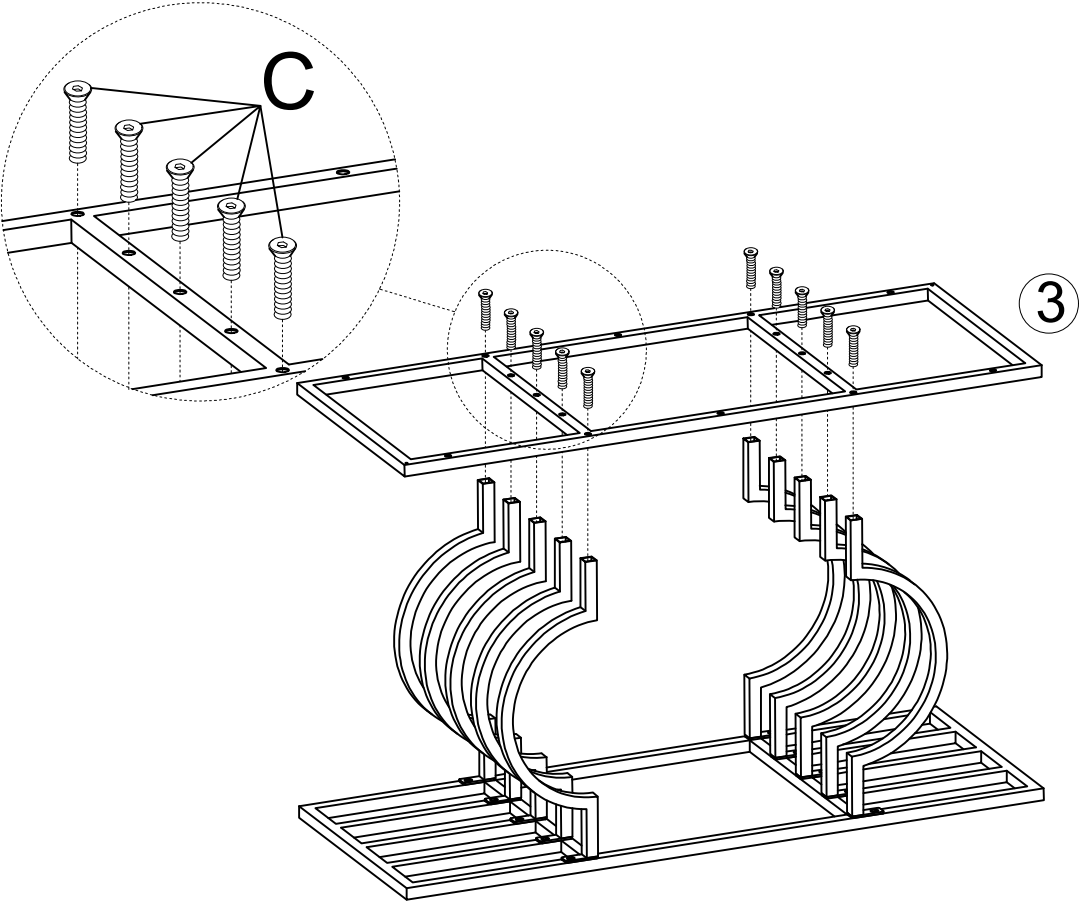



M6×35mm
C×10pcs

STEP 3

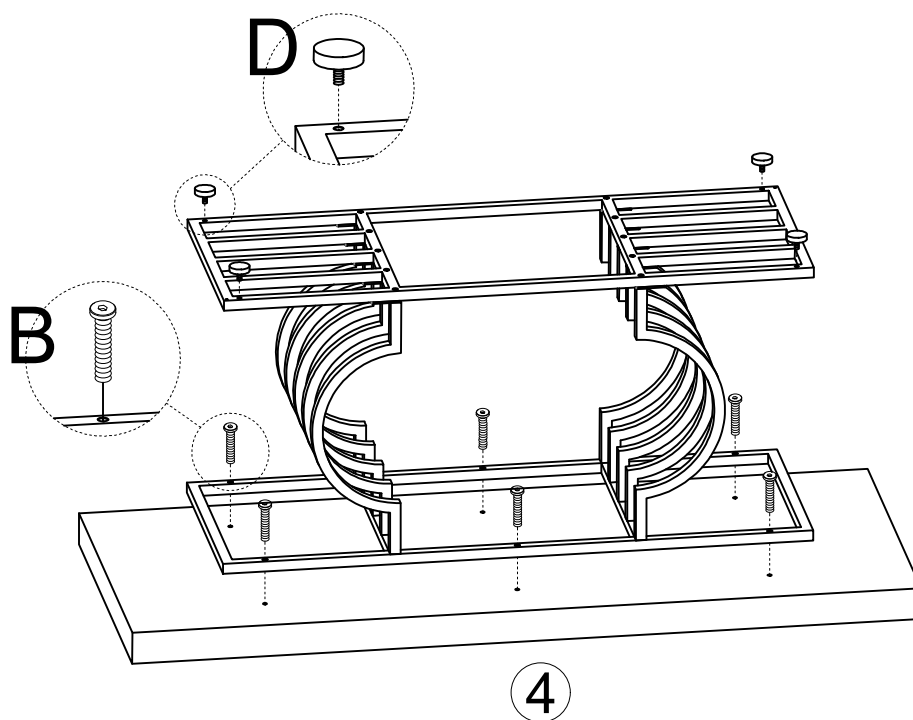

 M6×32mm	
Ⓑ ×6pcs	Ⓓ ×4pcs

STEP 4

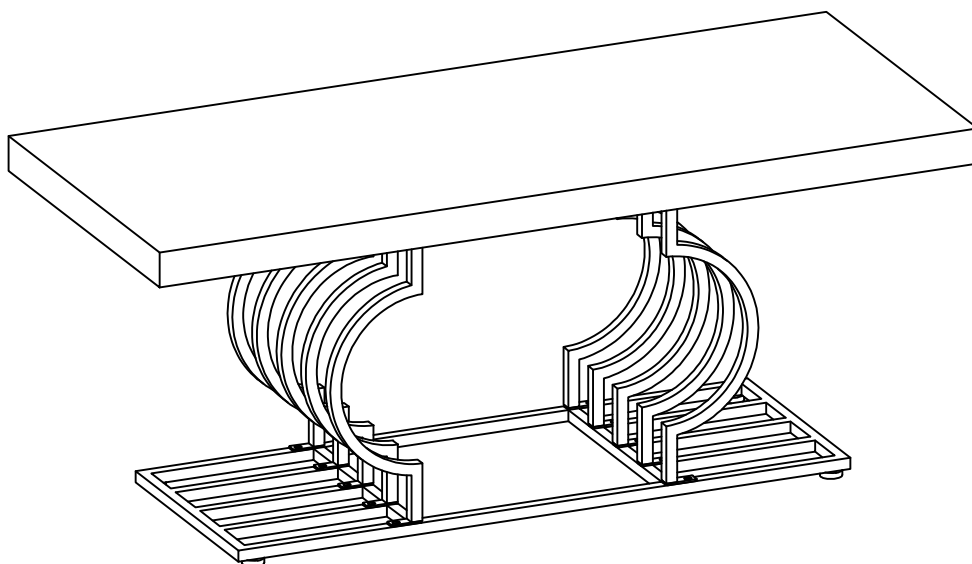

We genuinely appreciate your purchase of our product.
Any problem (installation or damage caused by shipping), please feel free to contact us.
Our customer service will help to solve the problem for your ASAP
Email:support@tribesigns.com customer service hotline: +14242206888