


Assembly Instructions

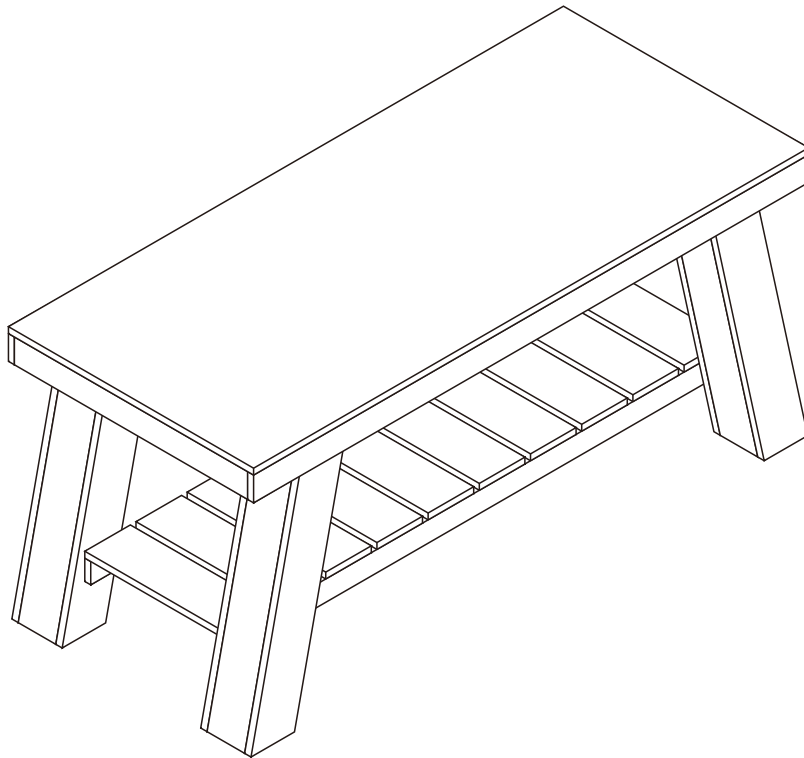

Coffee Table

Model No.
HOGA-QQ0009

Contact Us




We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

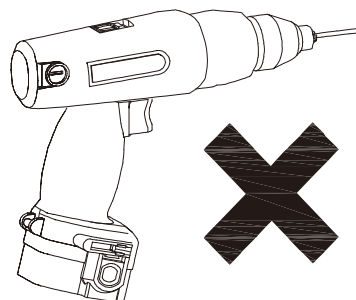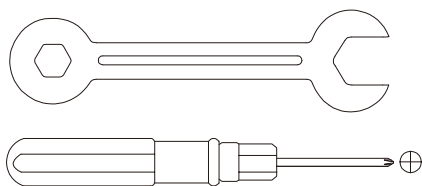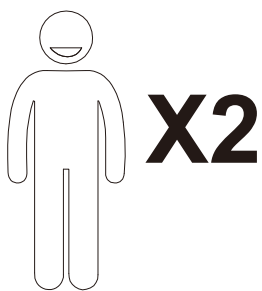



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

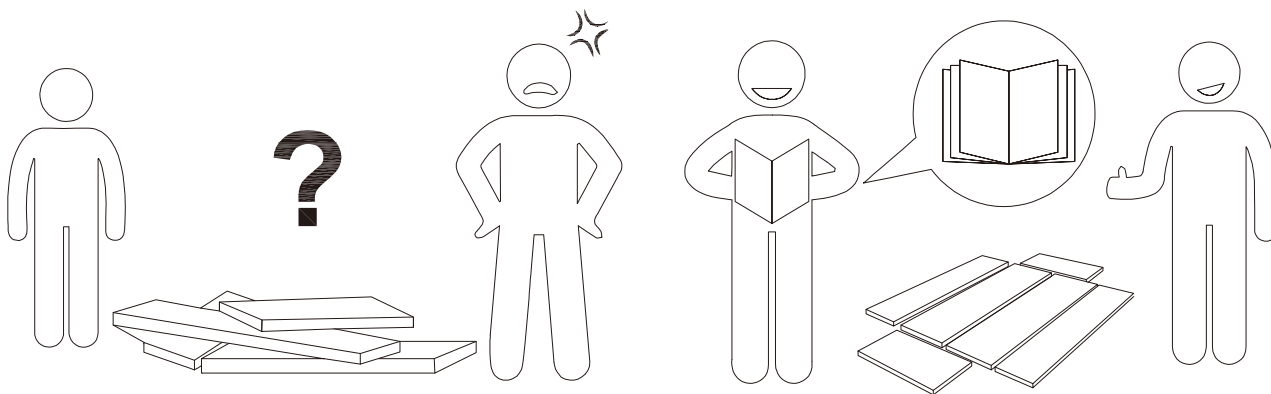

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.






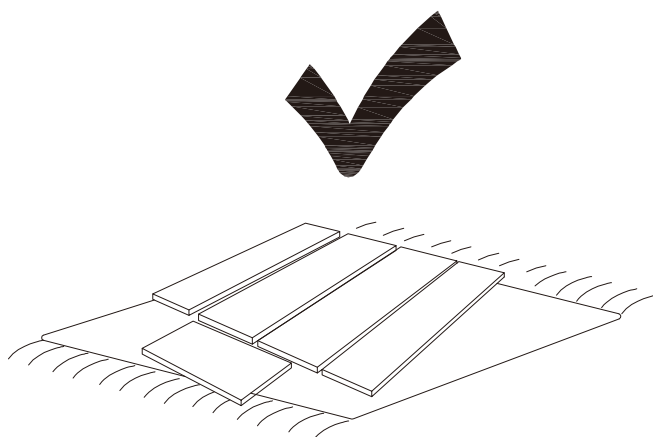
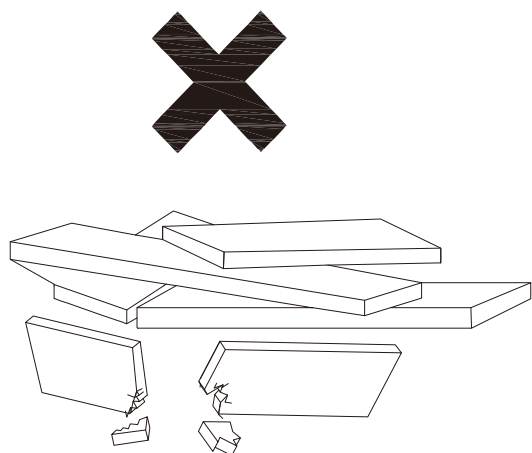


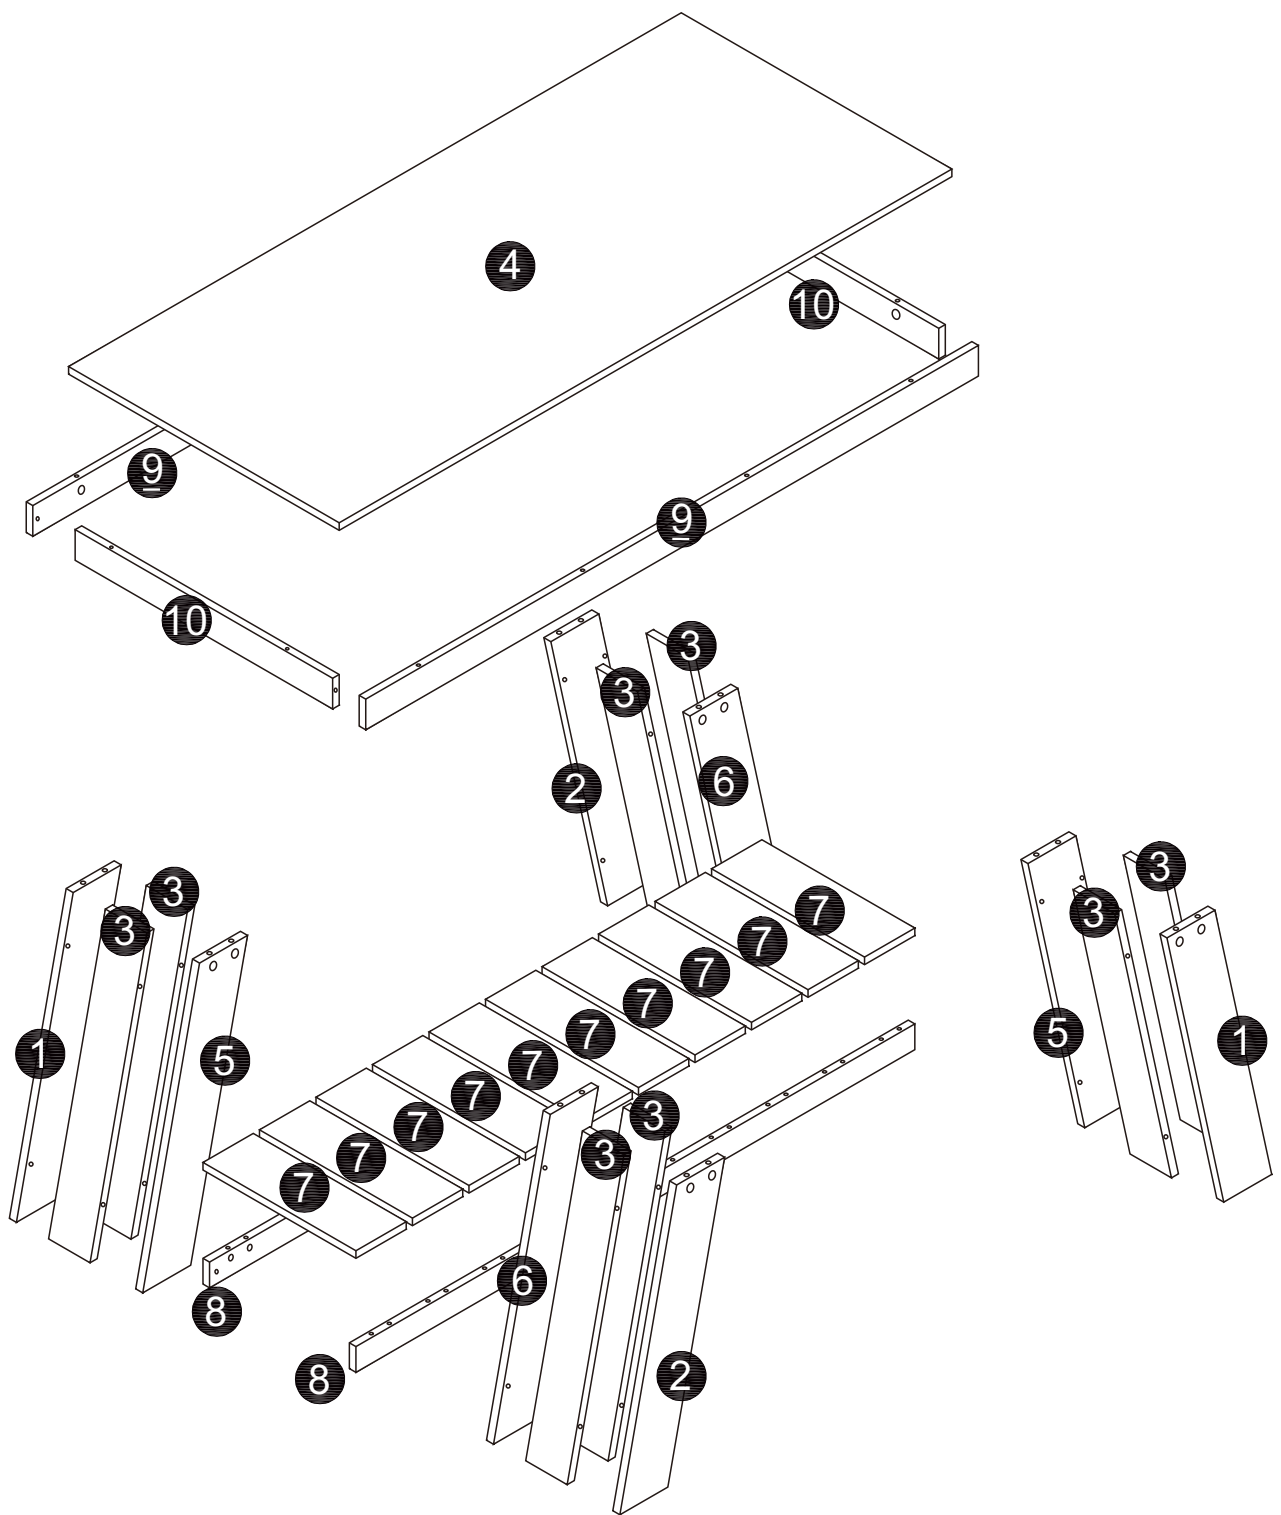





⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

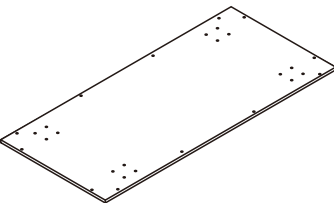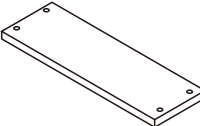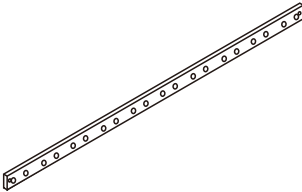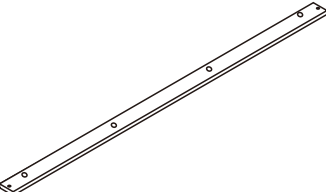
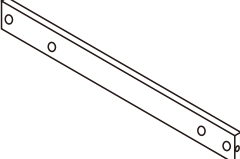
1  2 pcs	2  2 pcs	3  8 pcs	4  1 pc
5  2 pcs	6  2 pcs	7  10 pcs	8  2 pcs
9  2 pcs	10  2 pcs		

Hardware List


A	B	C	D
 M6x40mm 72 pcs	 Ø15x11mm 72 pcs	 8 pcs	 M6x25mm 4 pcs
E	F	G	
 32 pcs	 1 pc	 1 pc	

Installation of Cams and Pins

Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

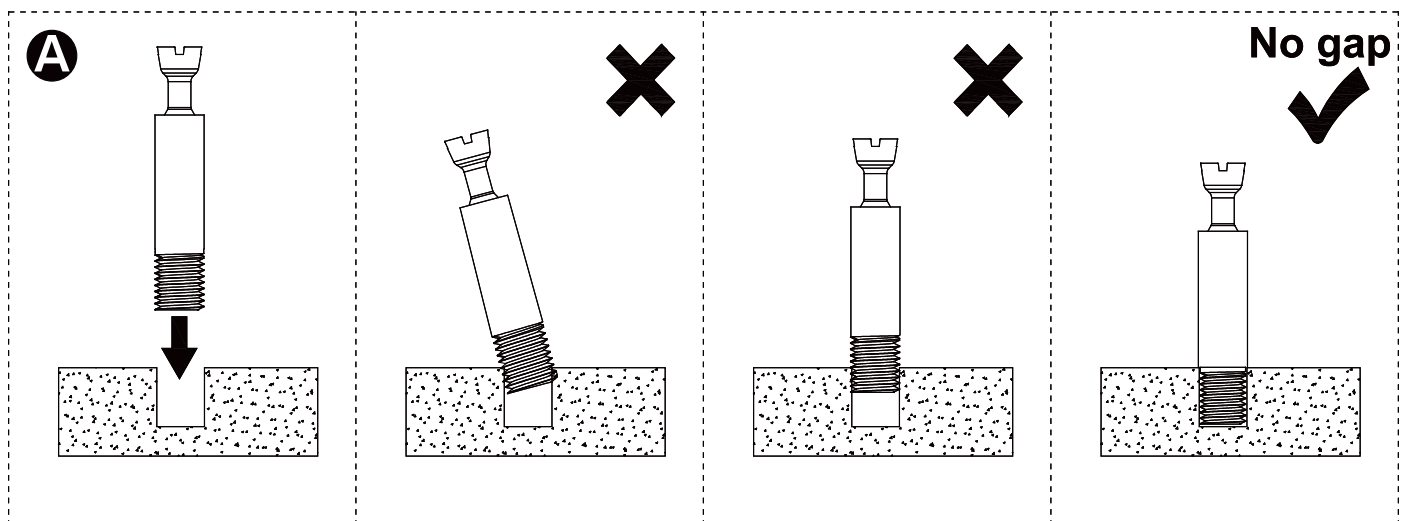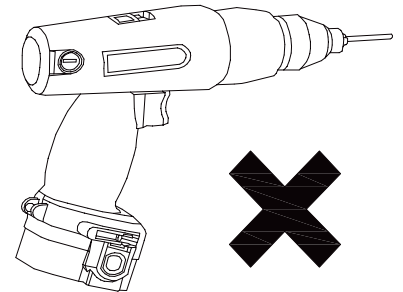


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

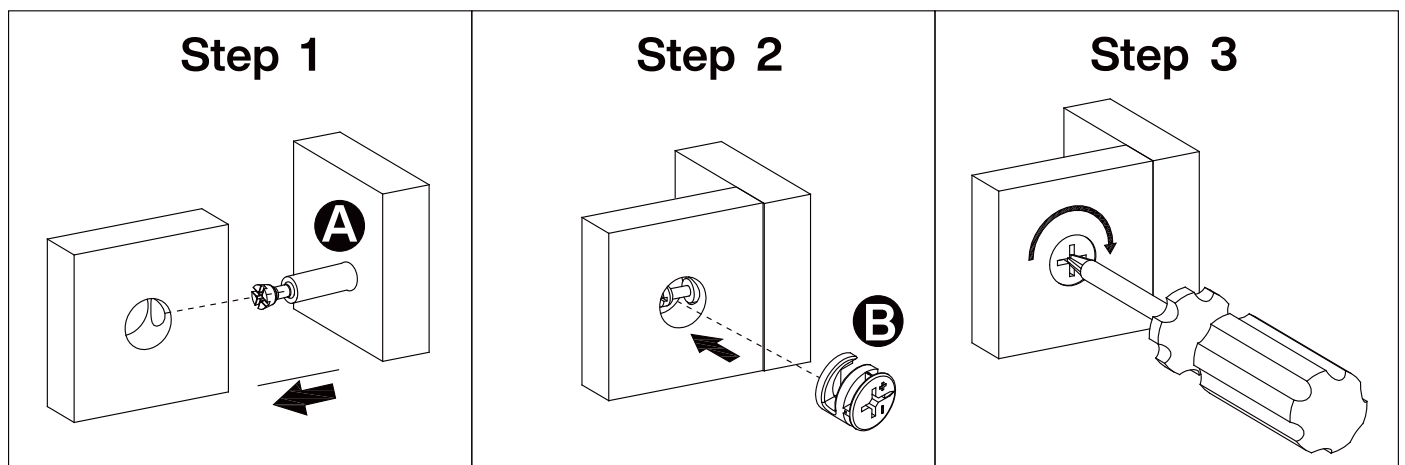


1

E

32 pcs

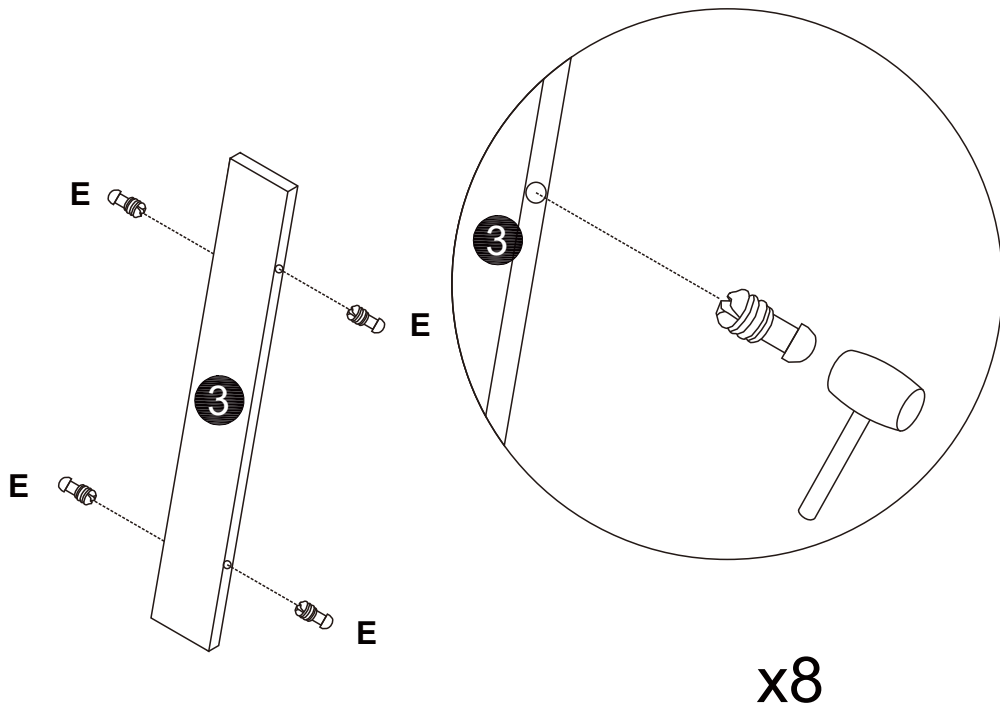



2

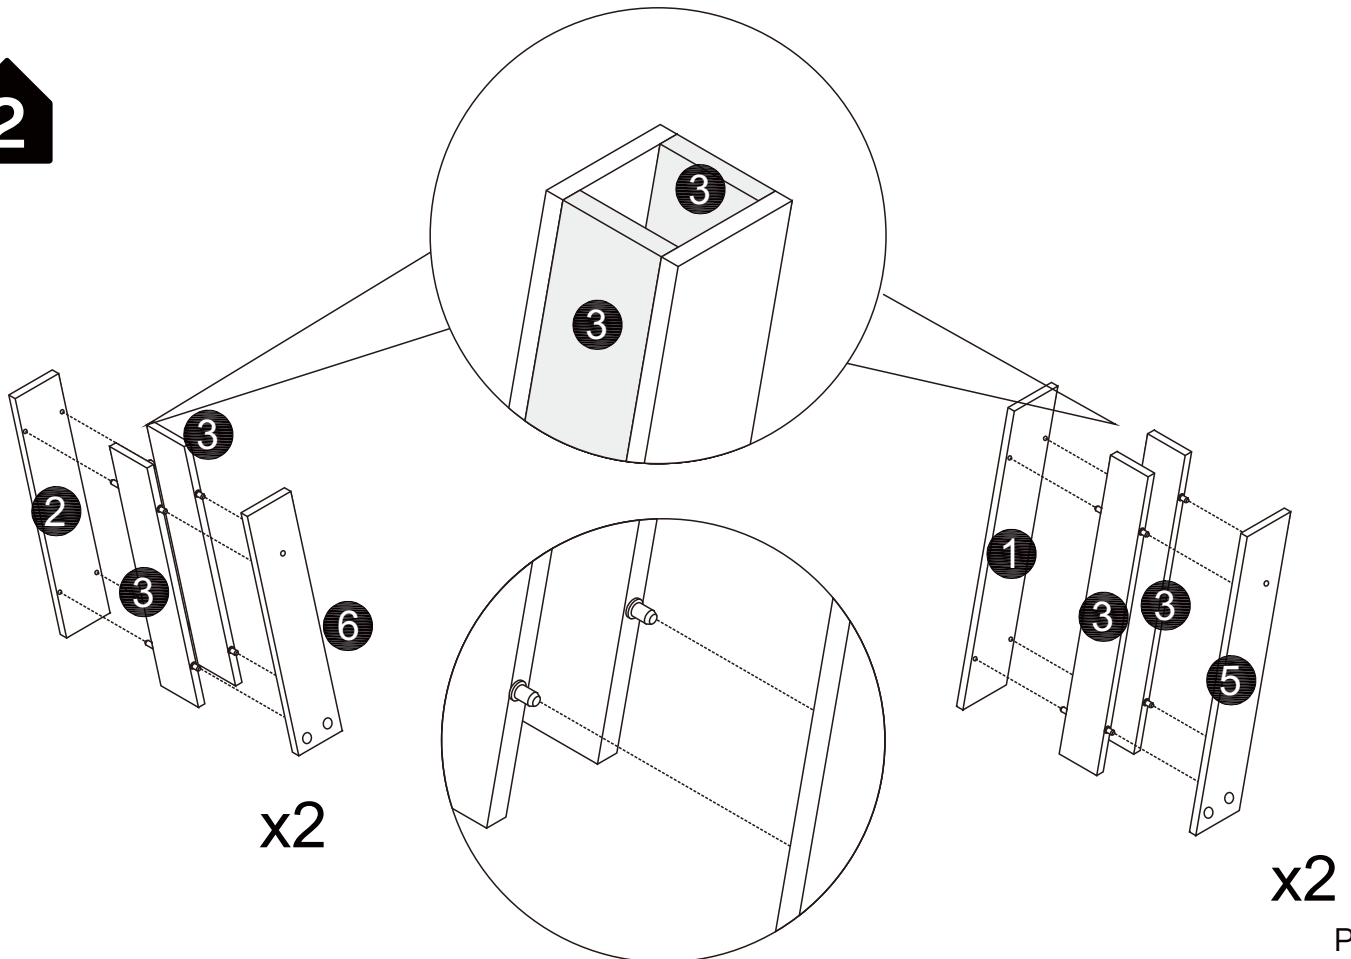


x2

3

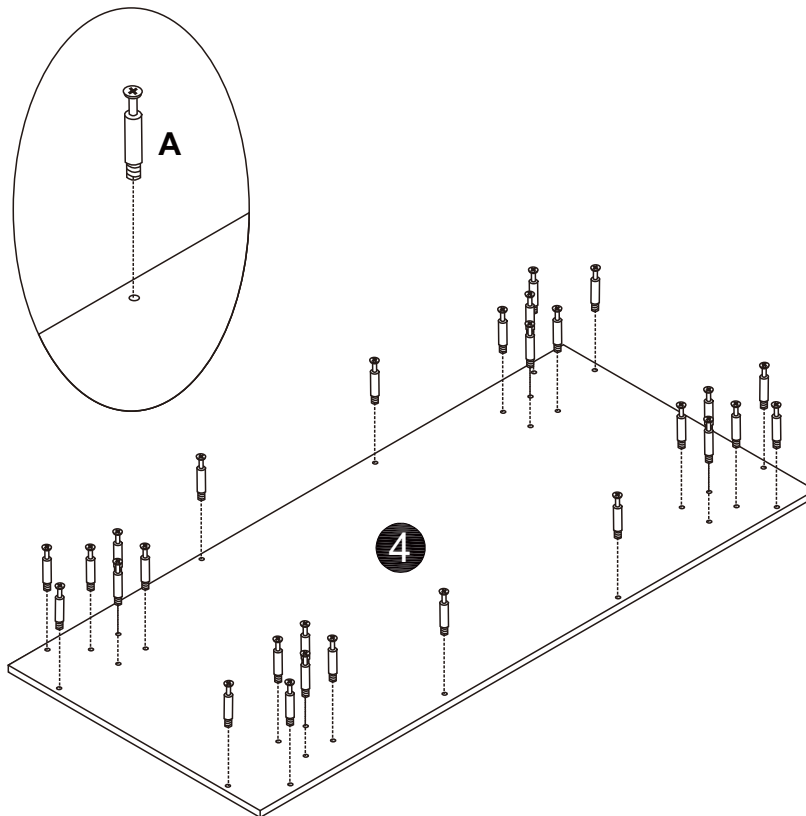

A

M6x40mm
28 pcs

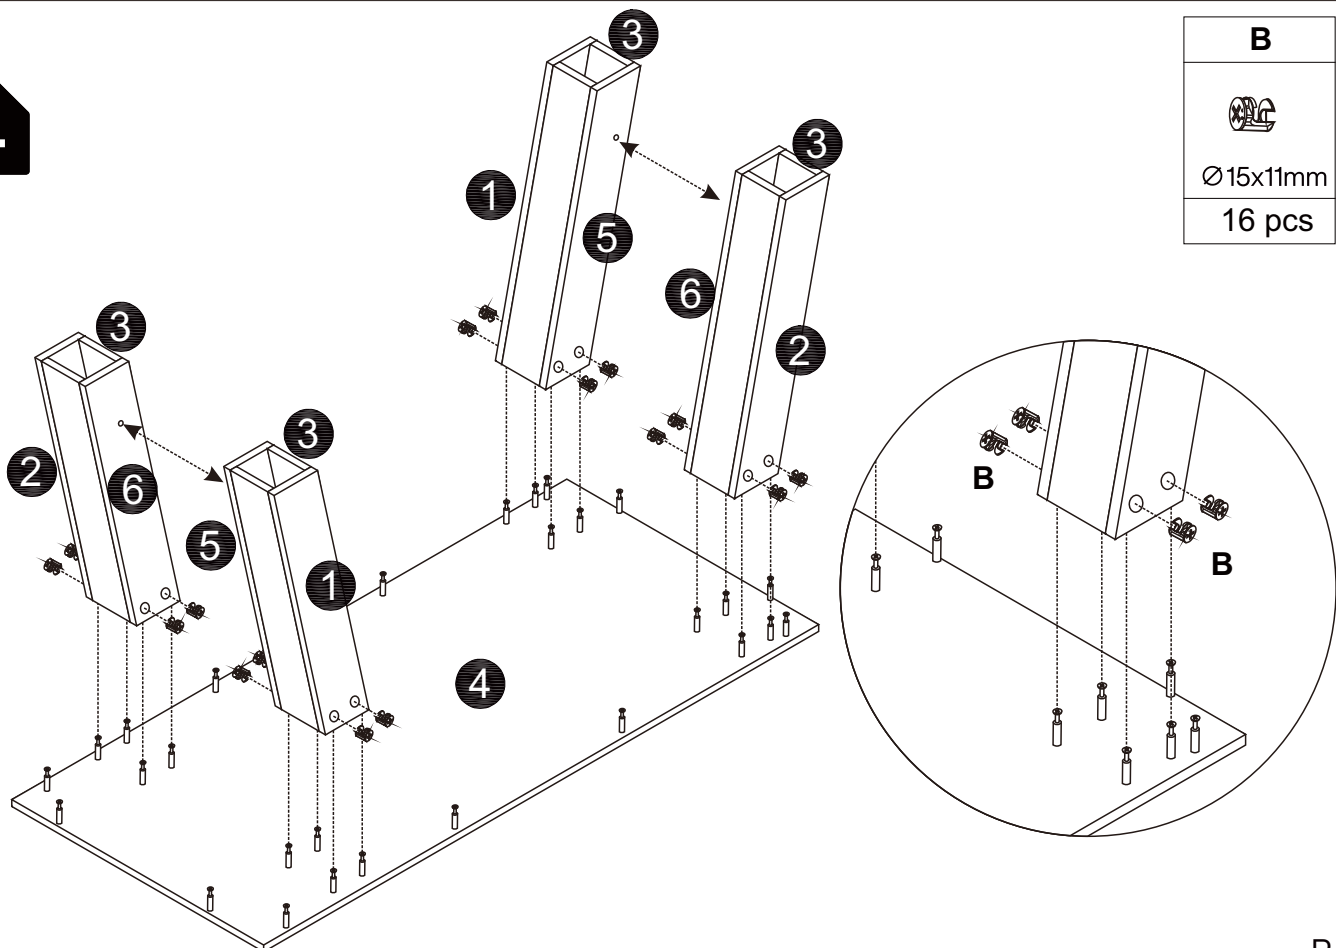4




B

Ø15x11mm
16 pcs

5

A


M6x40mm
4 pcs

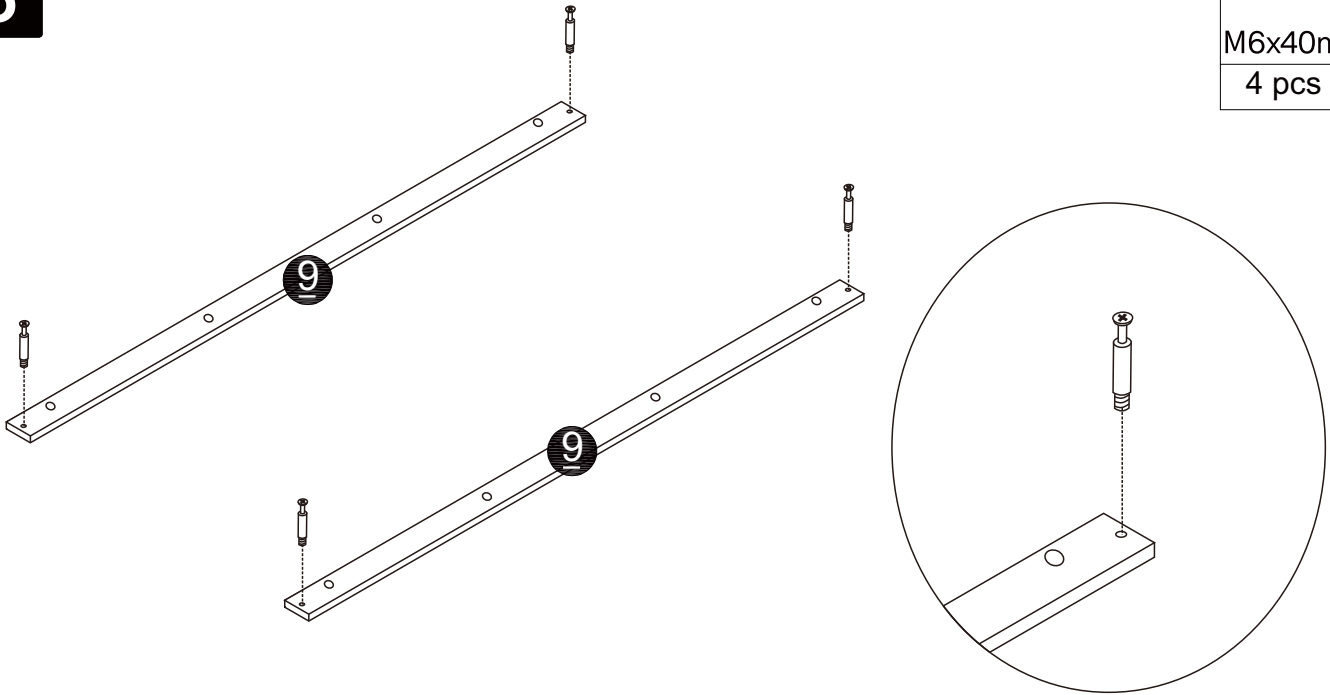



6

B

Ø15x11mm
2 pcs

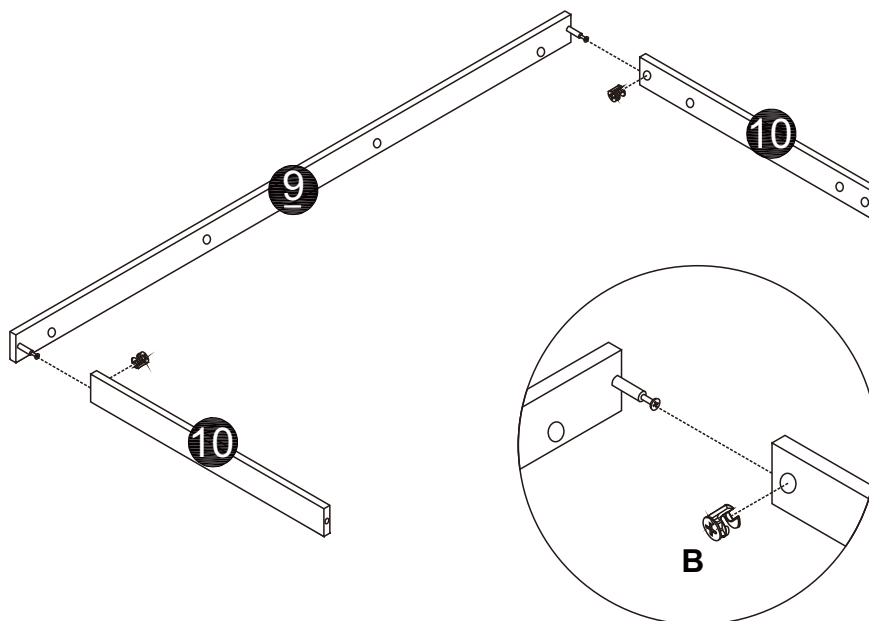



7

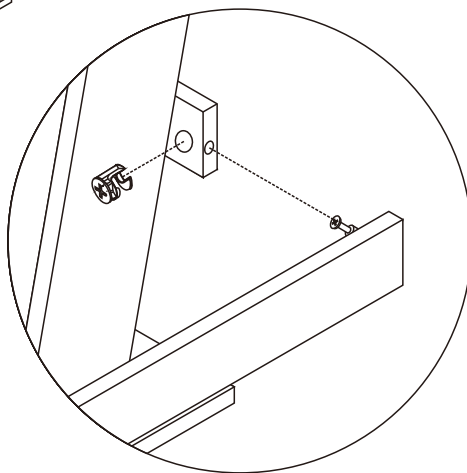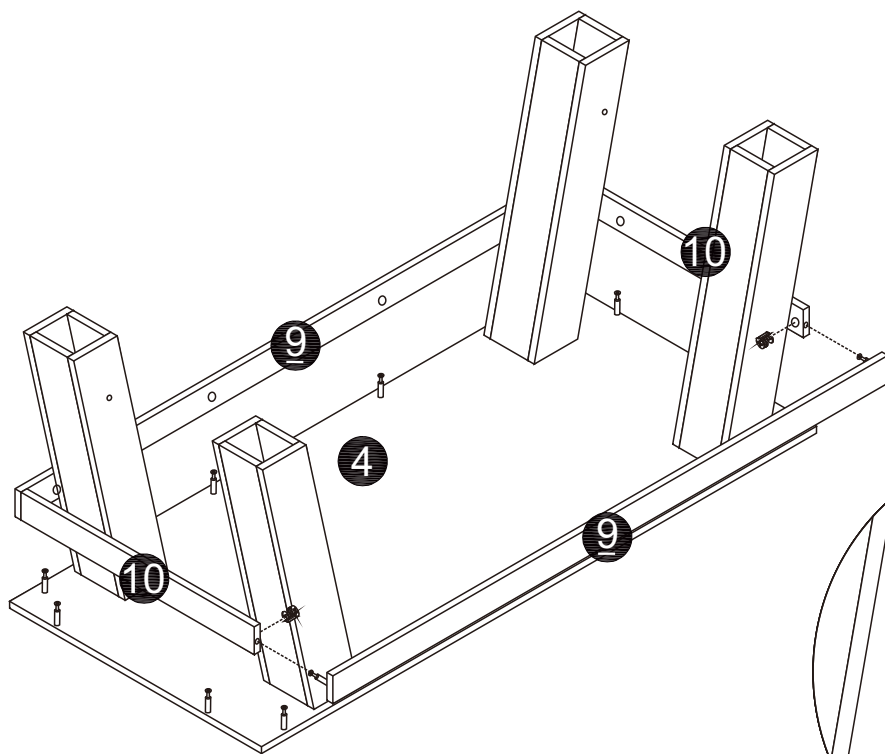

B

Ø15x11mm
2 pcs


8

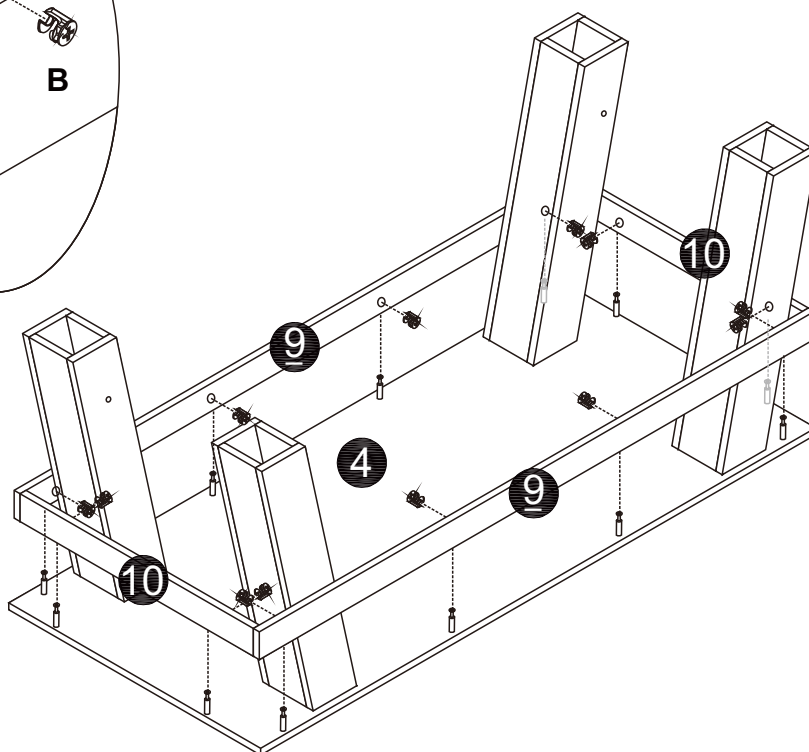
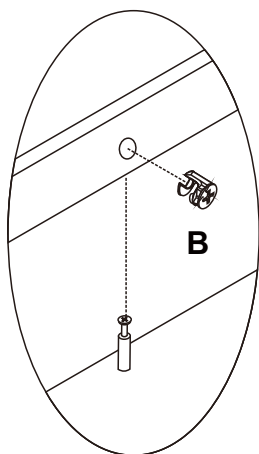


B

Ø15x11mm
12 pcs

9


A	B
	
M6x40mm	Ø15x11mm
40 pcs	40 pcs

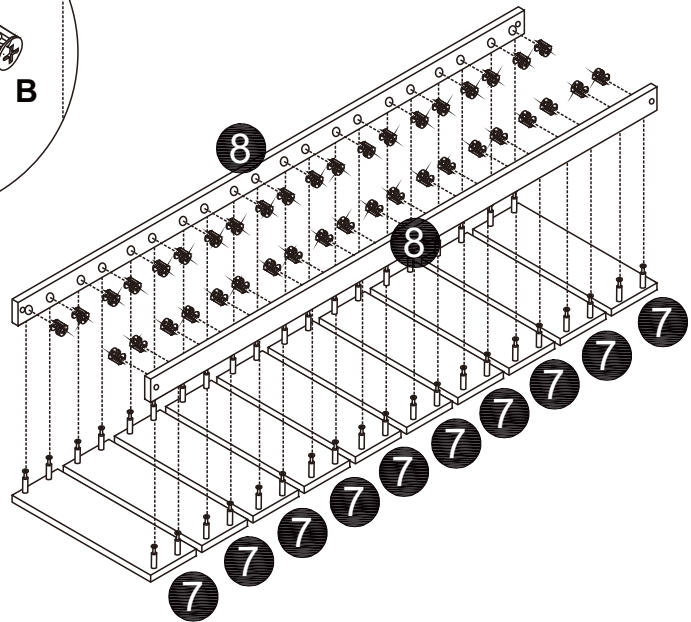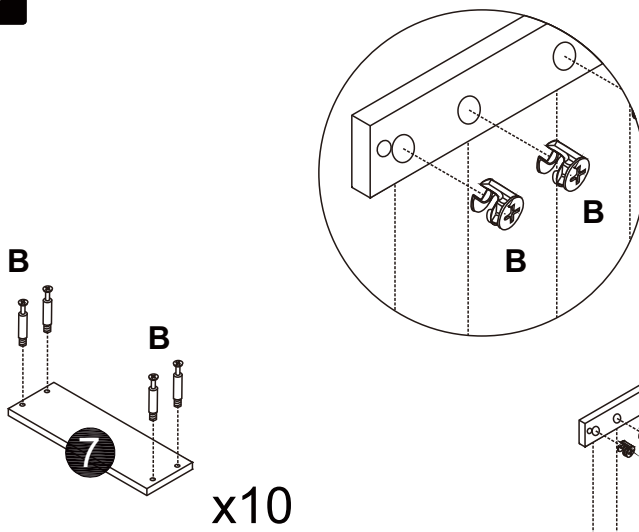


10

D

M6x25mm
4 pcs

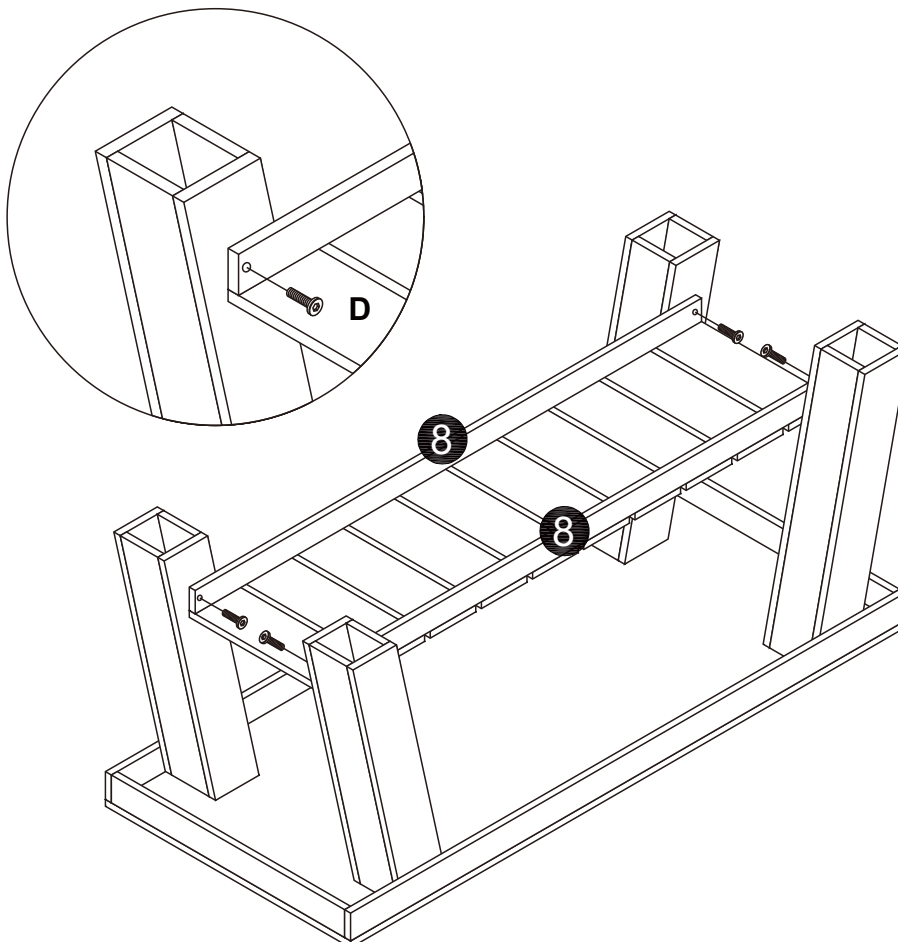


11

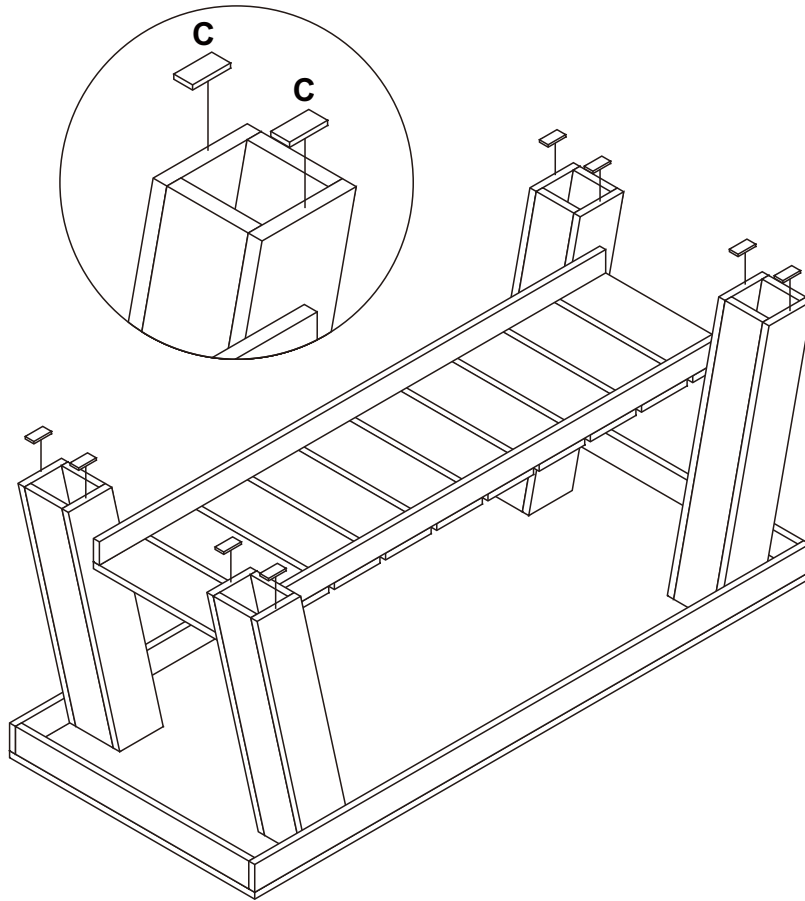

C

8 pcs

12

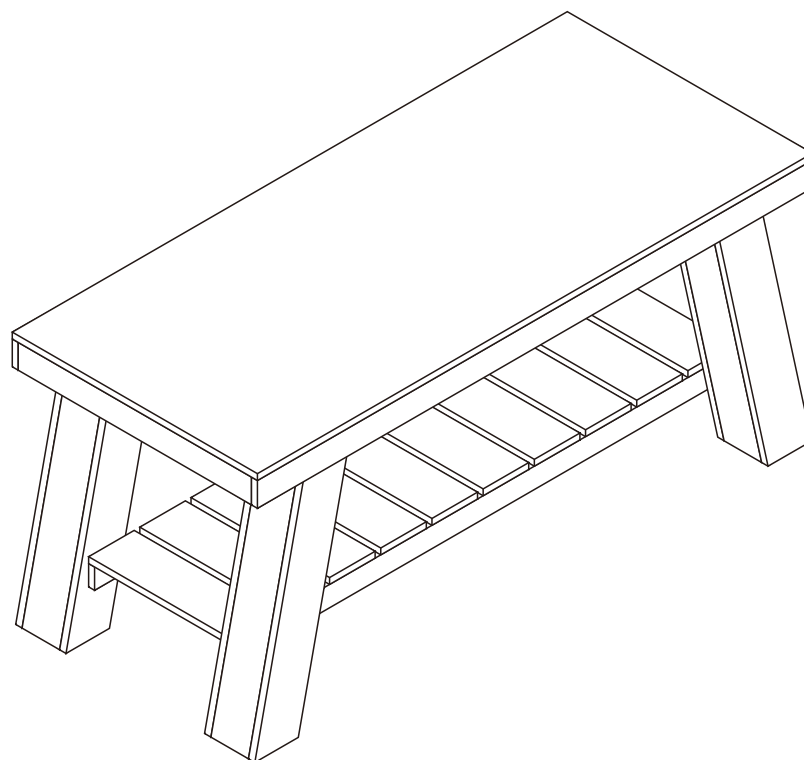

Thank you for your support!

