


Assembly Instructions

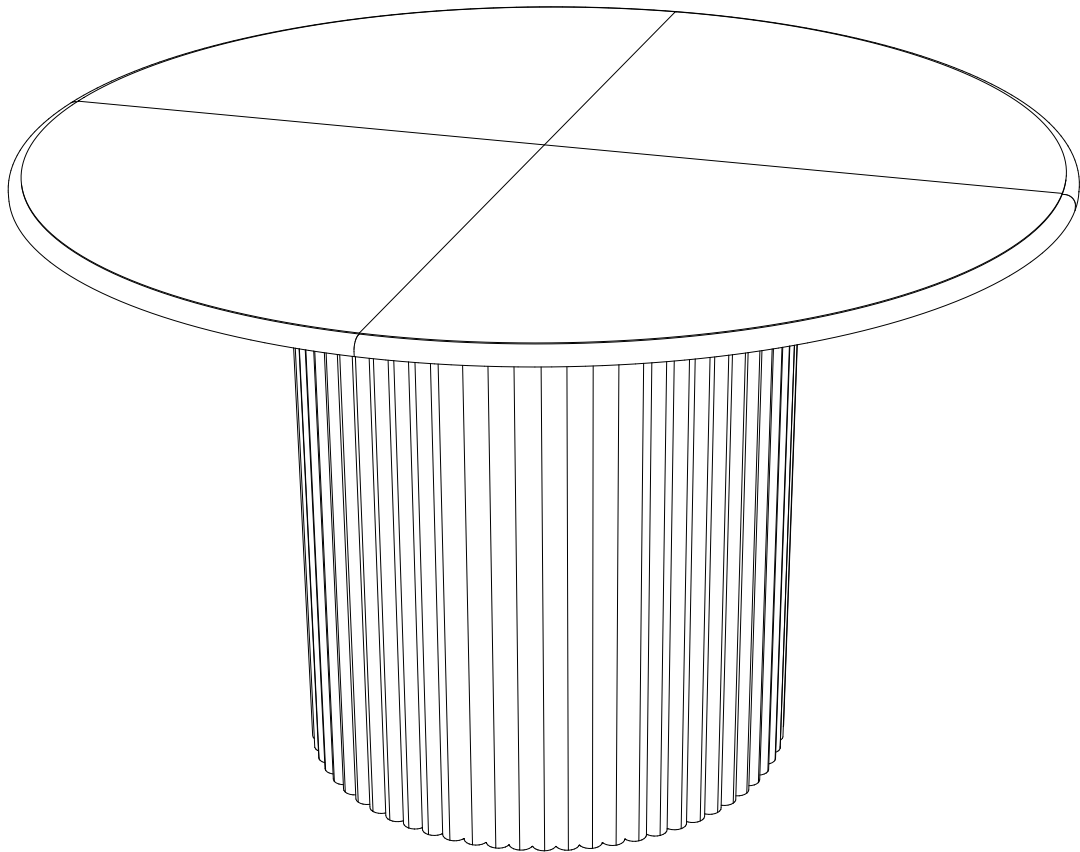


Round Dining Table

Model No.
HOGA-XK00817

Contact Us


We're here to help you.

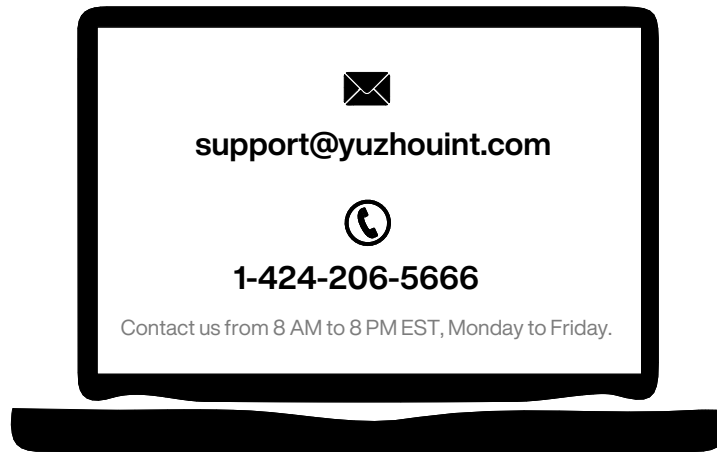



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

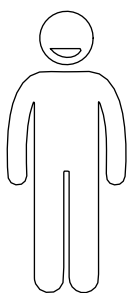


X2

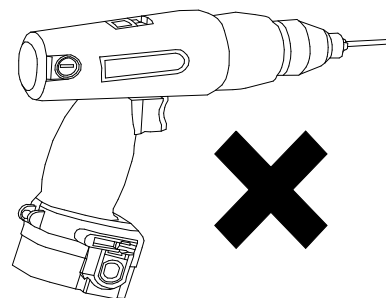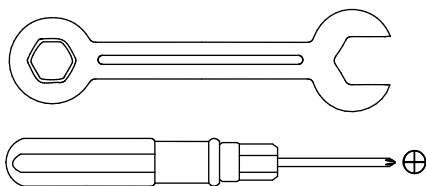



We recommend using hand tools for assembly.

If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

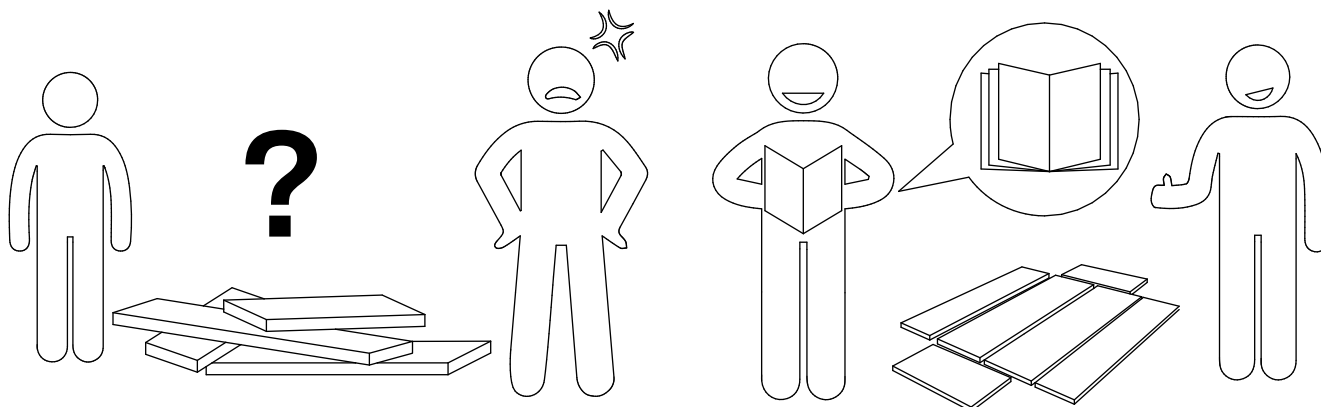


AVOID SCRATCHES




In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

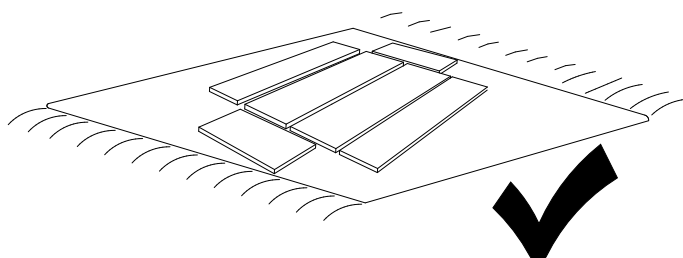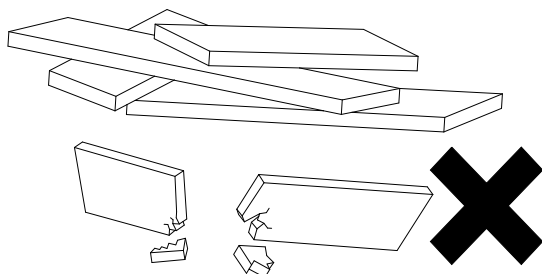

Caution

Do not sit or put pressure on any single side of the table.






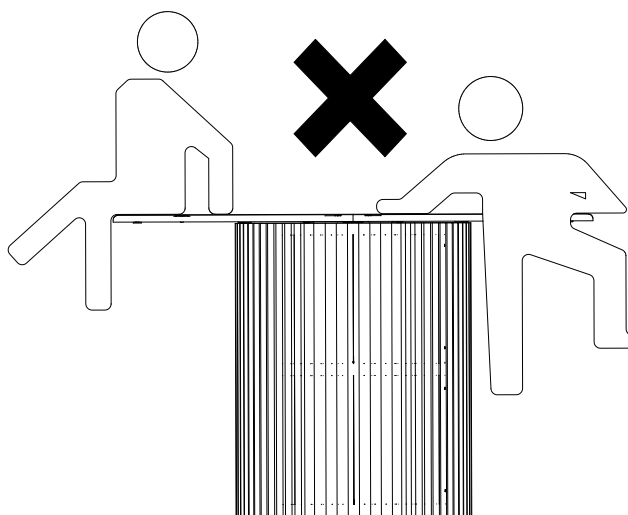


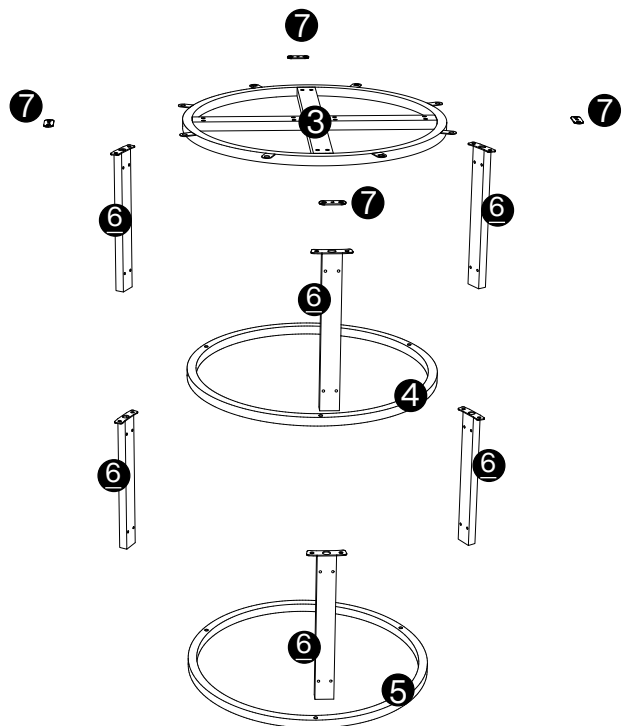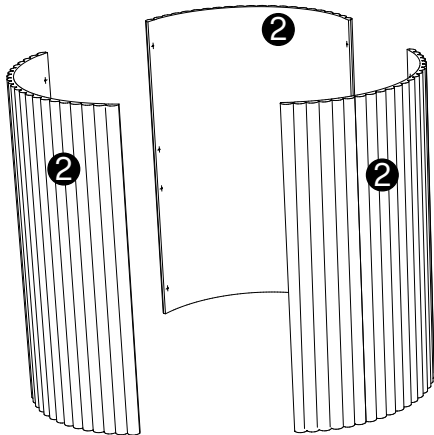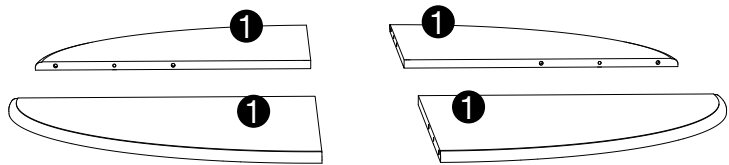








Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.



Parts List

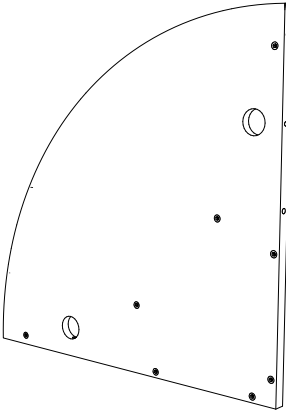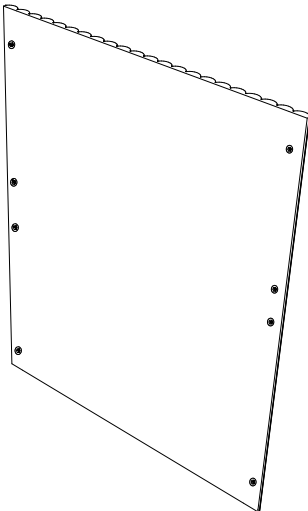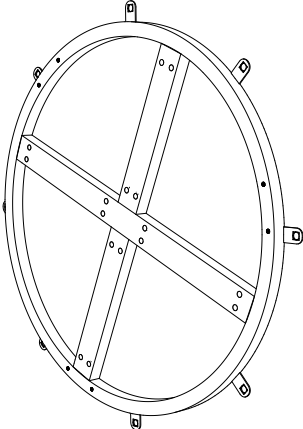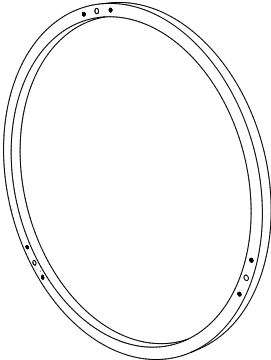
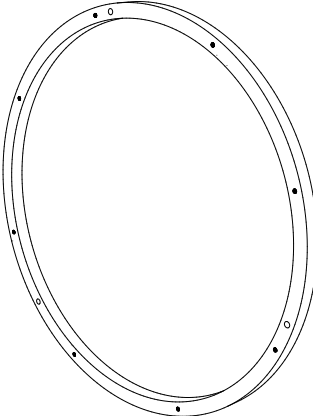
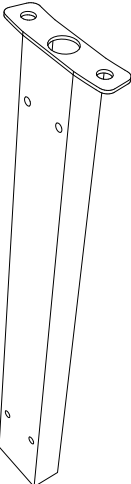
1  4 pcs	2  3 pcs	3  1 pc	4  1 pc
5  1 pc	6  6 pcs	7  4 pcs	


Hardware List

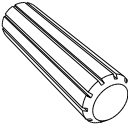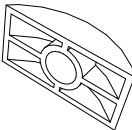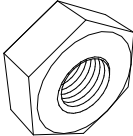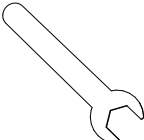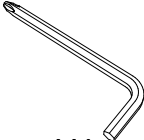A	B	C	D	E	F	G
						
M6x15mm	Ø15x12mm	Ø8x30mm		M6	M10	M6x100mm
8 pcs	29 pcs	9 pcs	9 pcs	9 pcs	2 pcs	4 pcs
I	J	K				
						
M4	M6x35mm	M6x30mm				
1 pc	6 pcs	40 pcs				


1


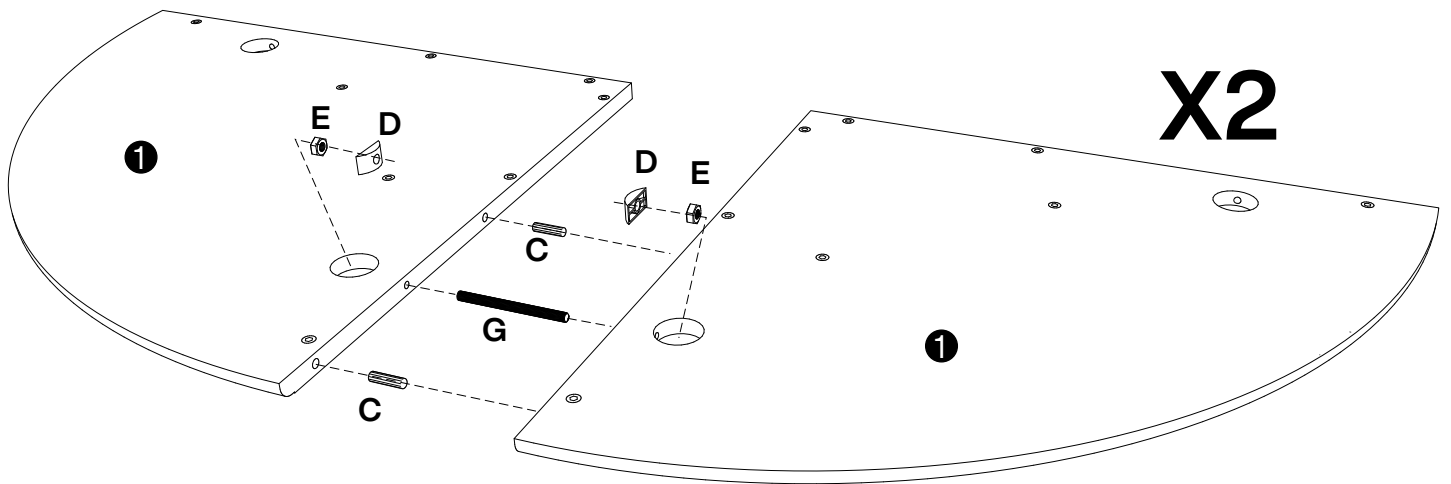
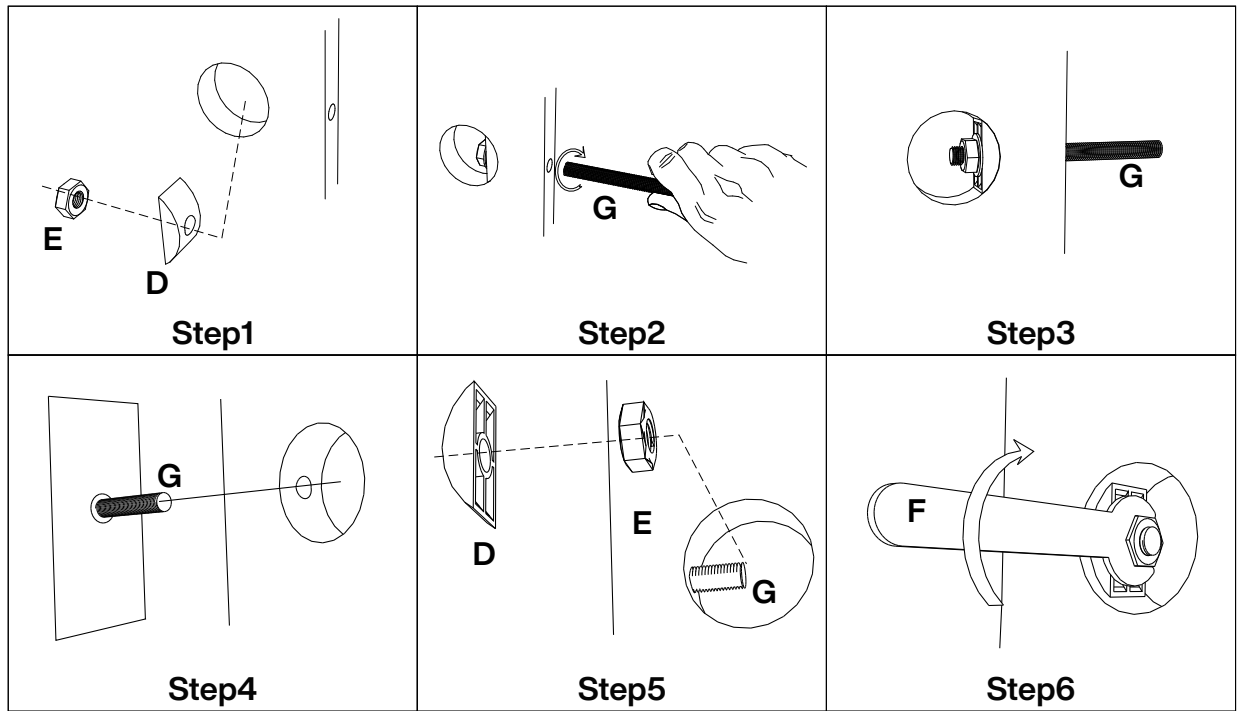


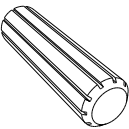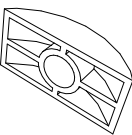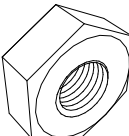C	D	E	G
			
Ø8x30mm		M6	M6x100mm
4 pcs	4 pcs	4 pcs	2 pcs

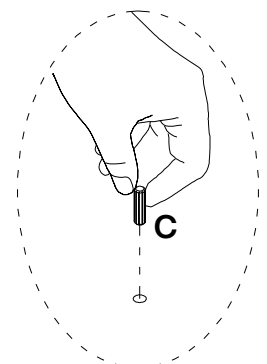


2

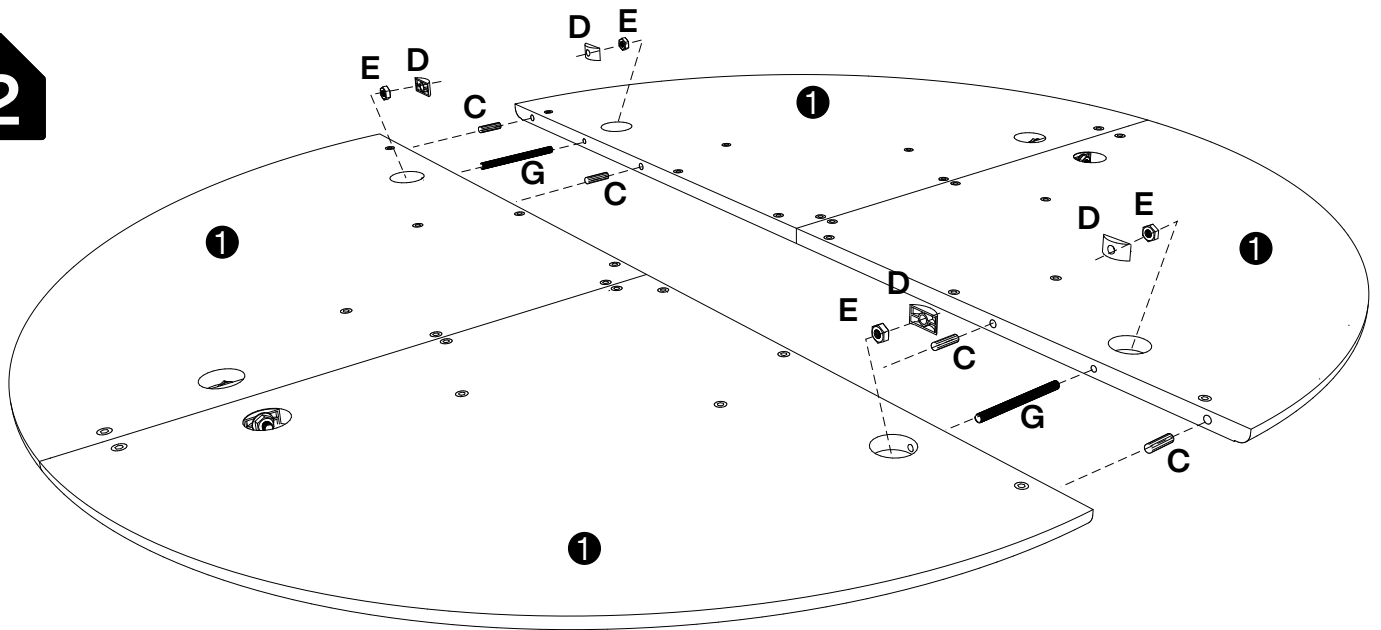

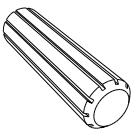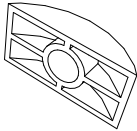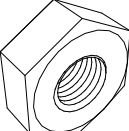
C	D	E	G
			
Ø8x30mm		M6	M6x100mm
4 pcs	4 pcs	4 pcs	2 pcs

3

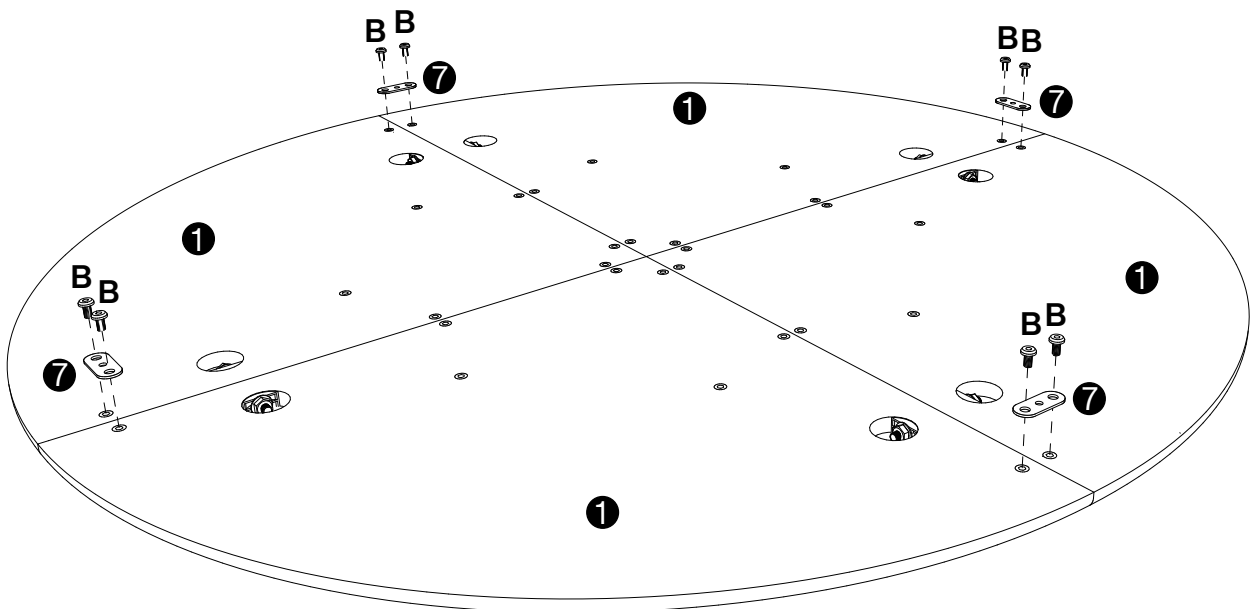


B

Ø15x12mm
8 pcs

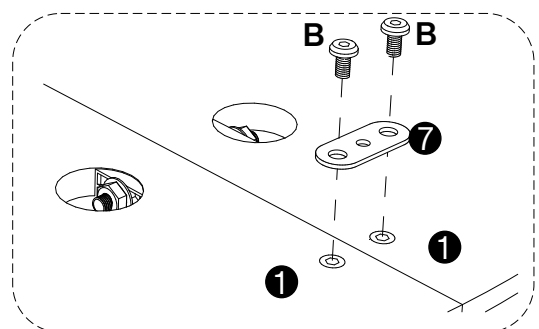


4

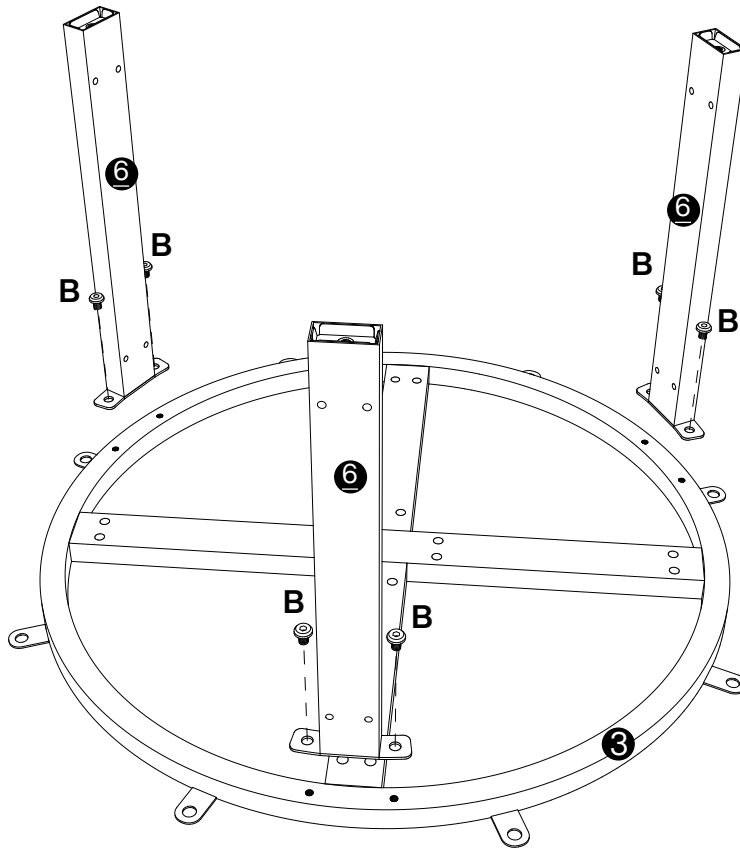


pre-drill
70%

70%


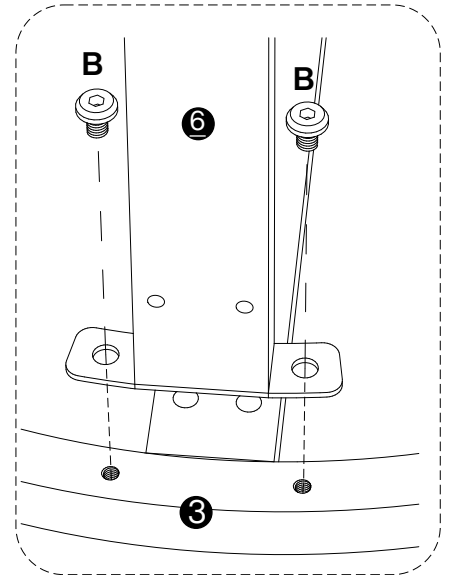


5

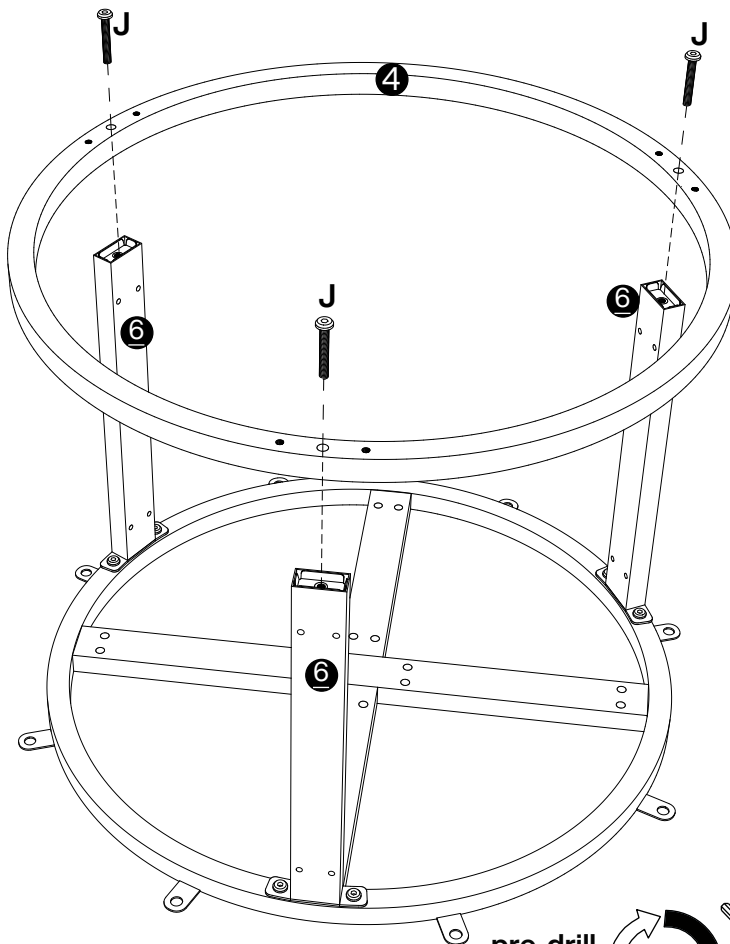


pre-drill
70%



70%

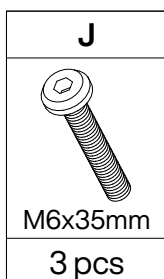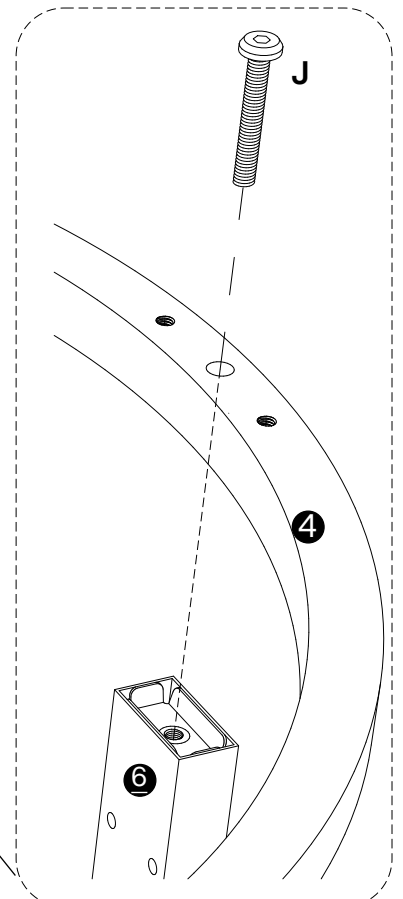


6

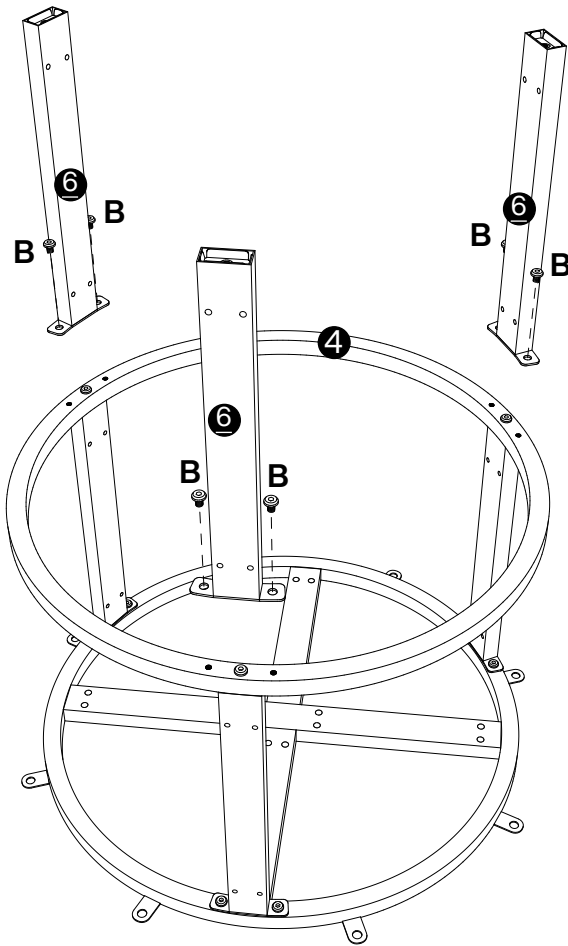




pre-drill
70%

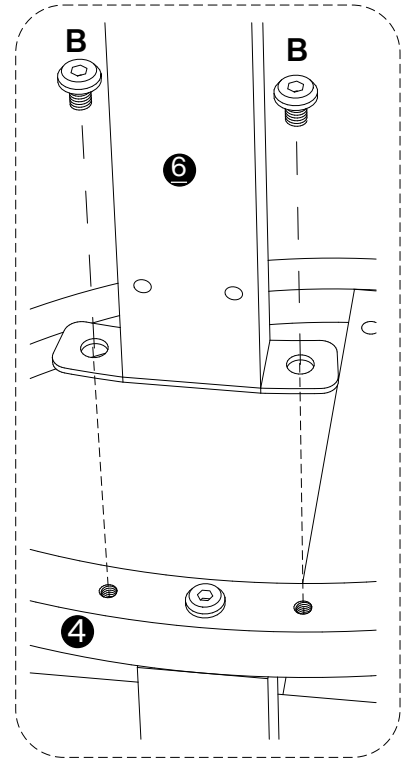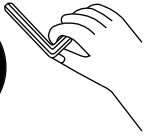




7

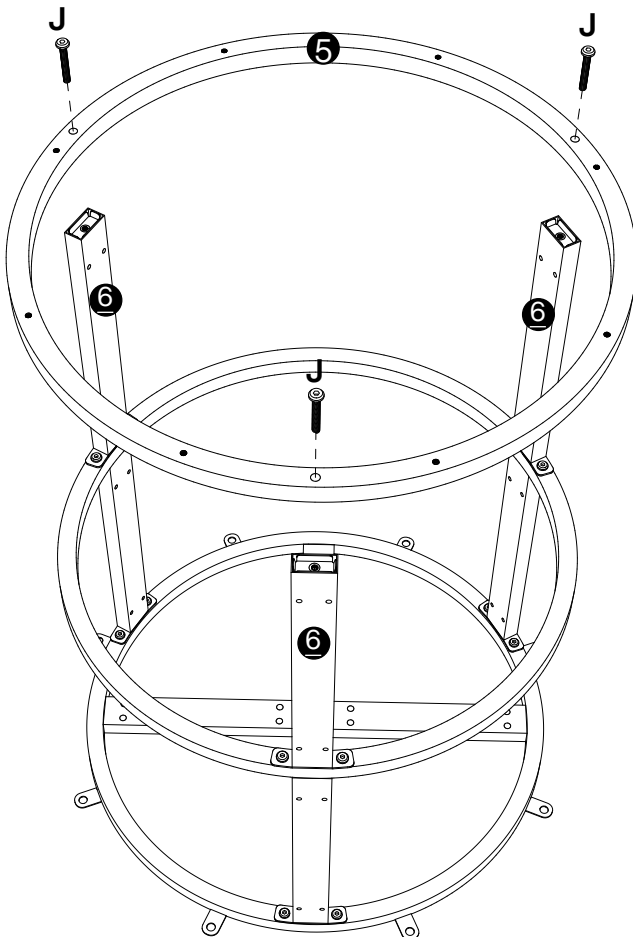




pre-drill
70%

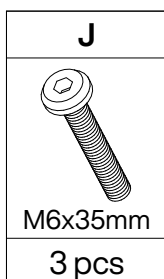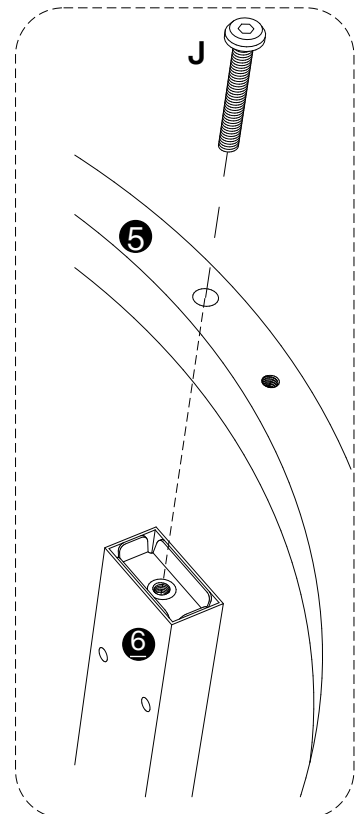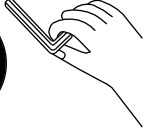



8

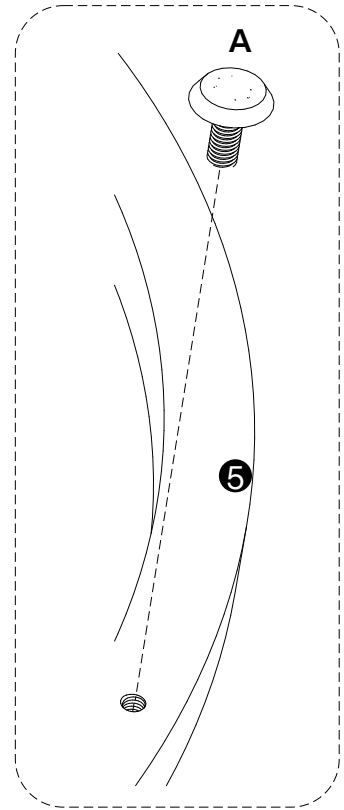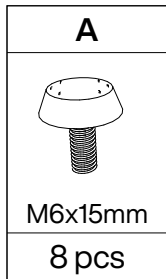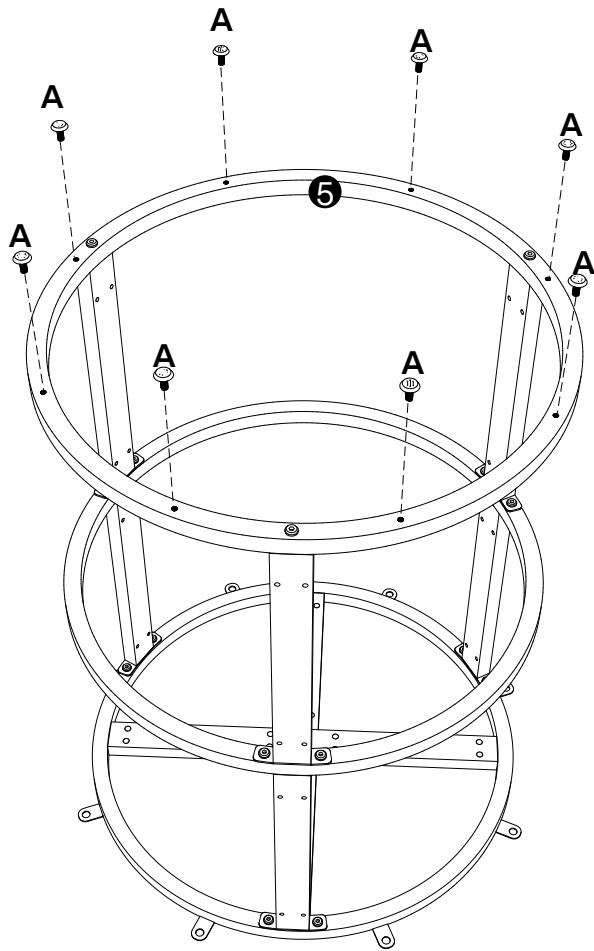


9

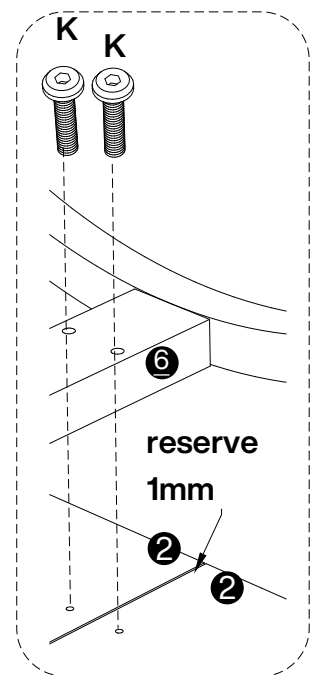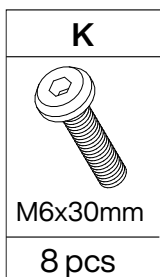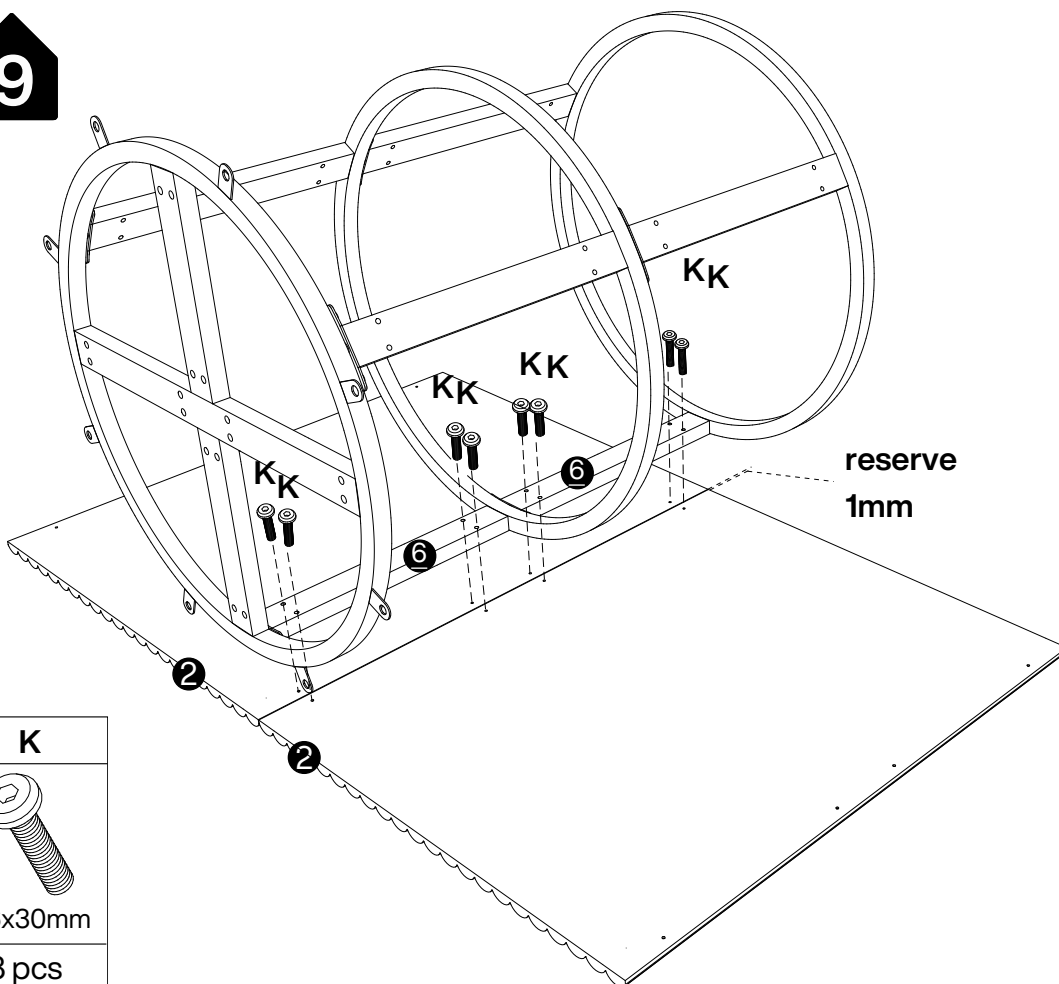


10

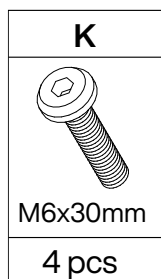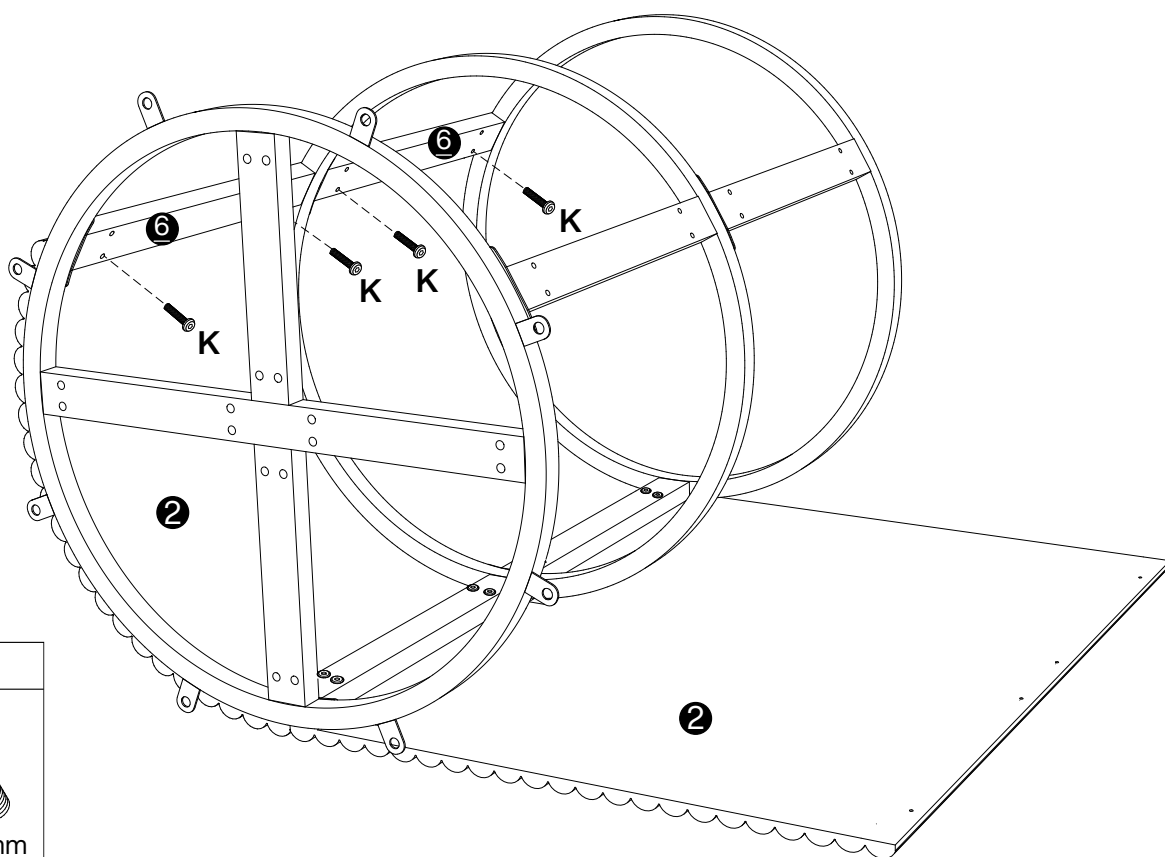



11

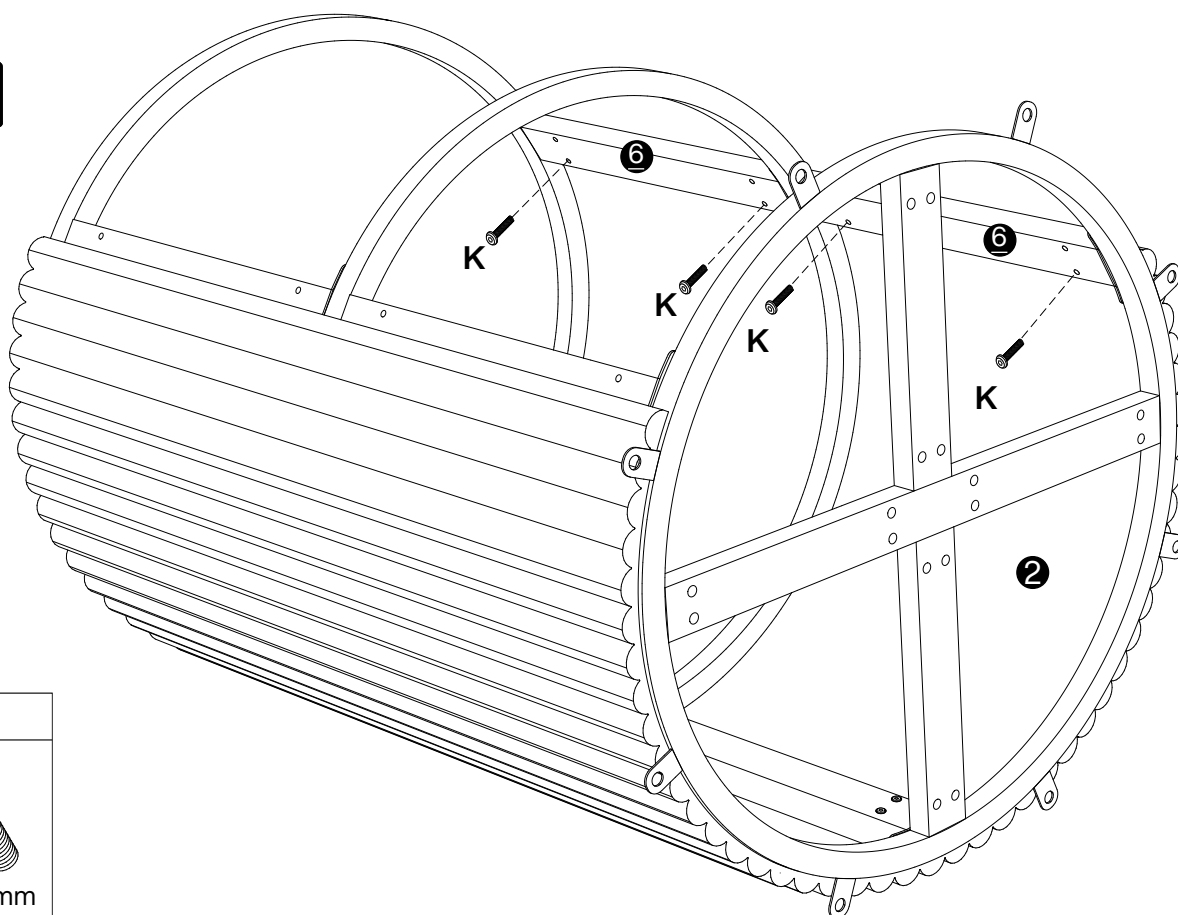



12

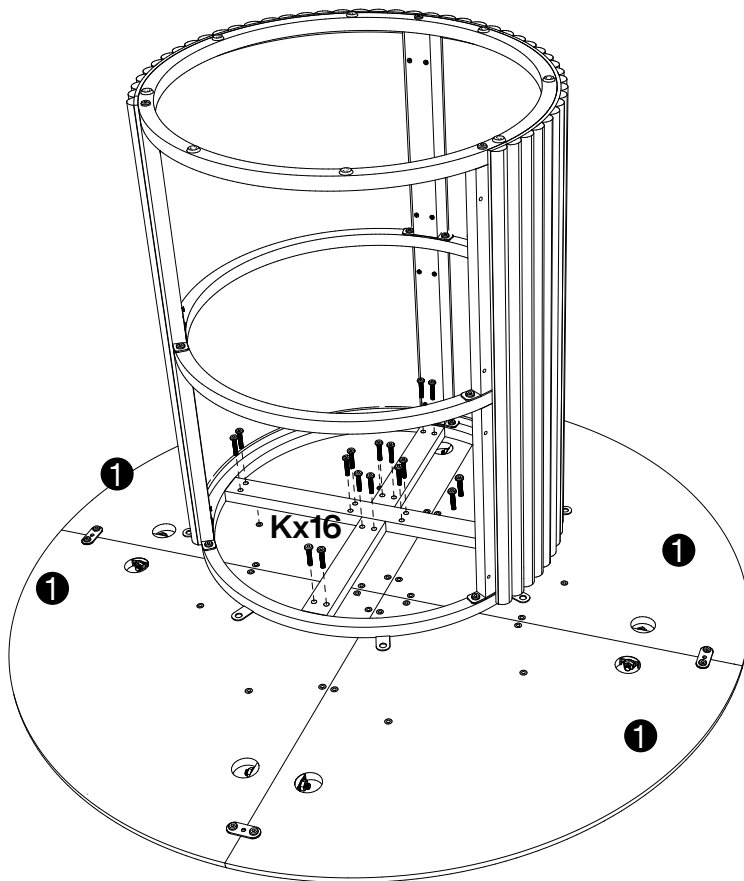

pre-drill
70%

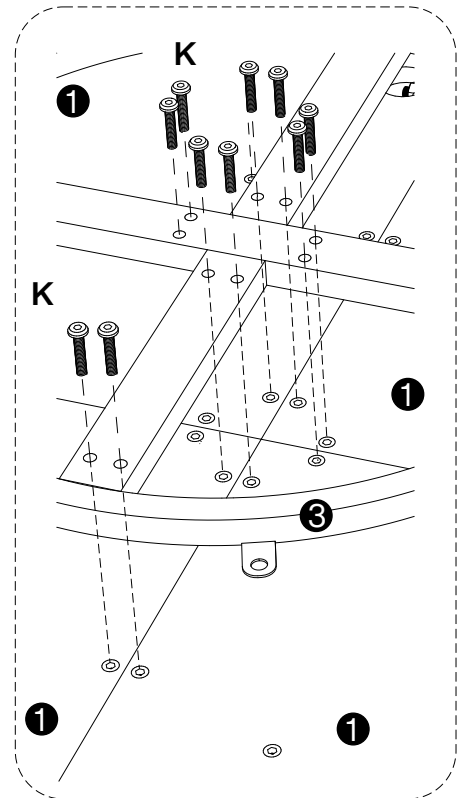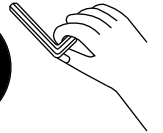



13

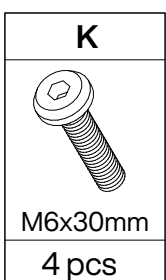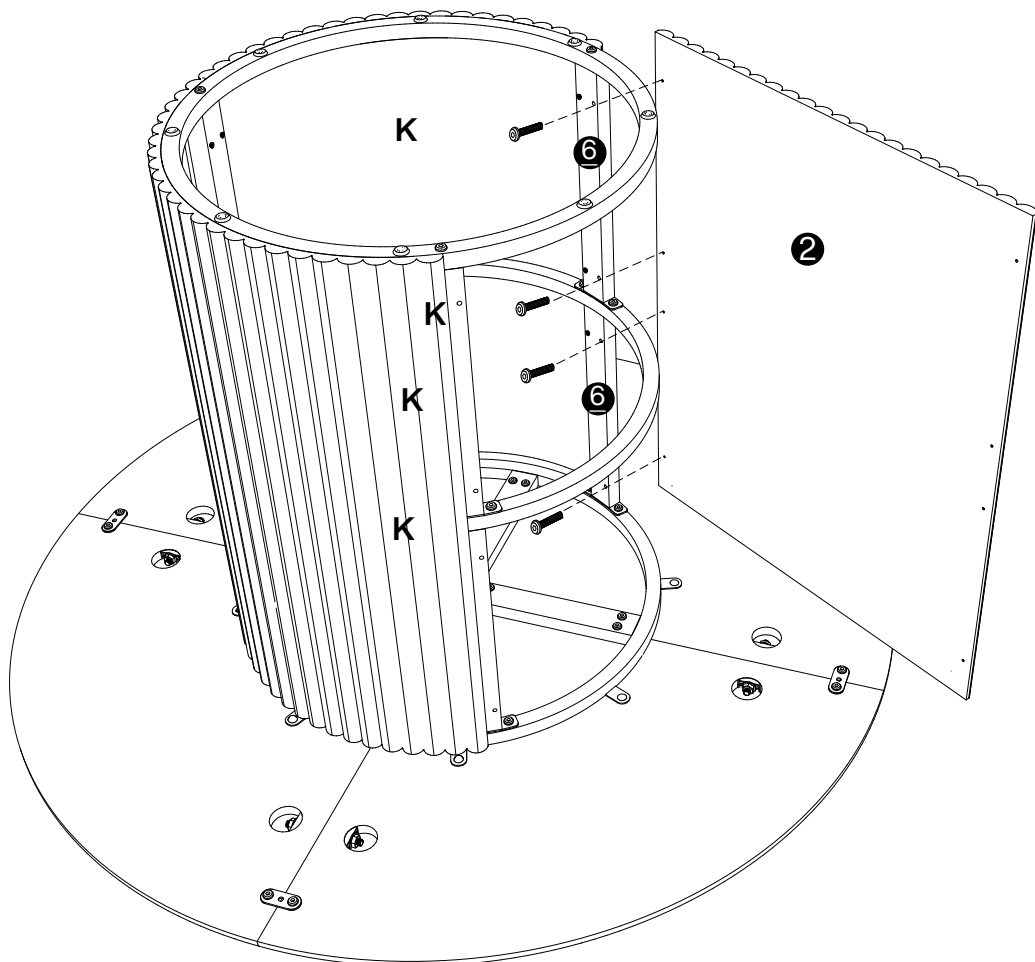



Note: Align the flexible panel until gaps are fully eliminated before tightening screws #K.

14

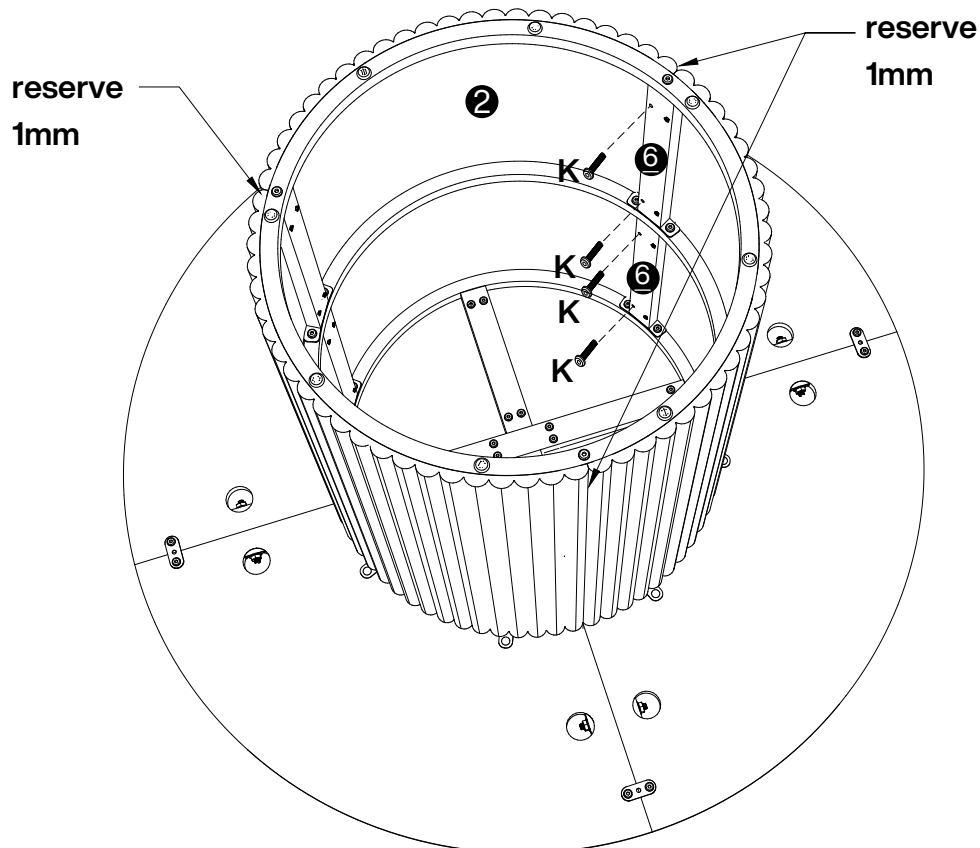

K

M6x30mm
4 pcs

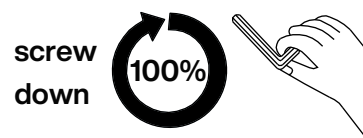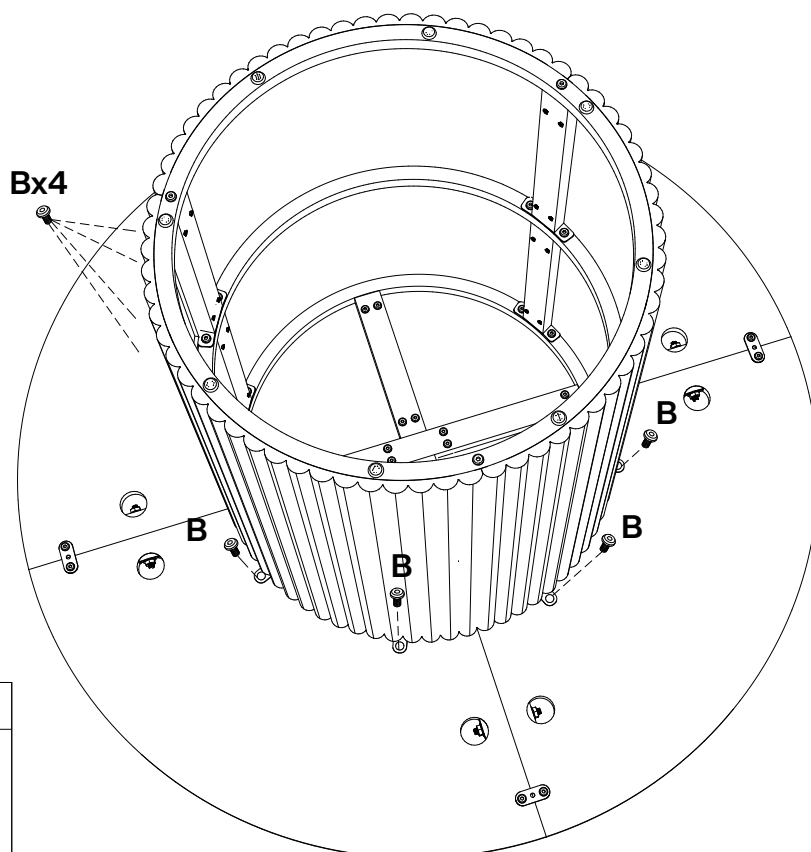
15




B

Ø15x12mm
8 pcs

⚠ Screw M6x12mm

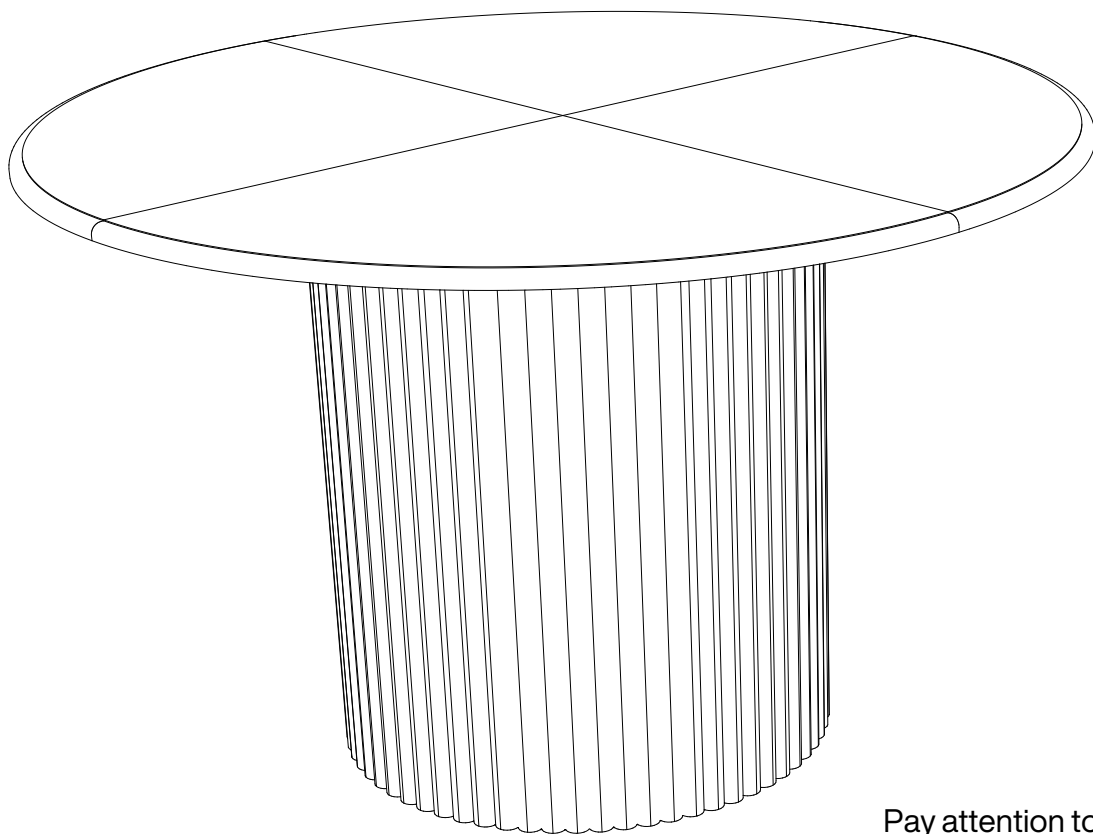

Pay attention to the hole position

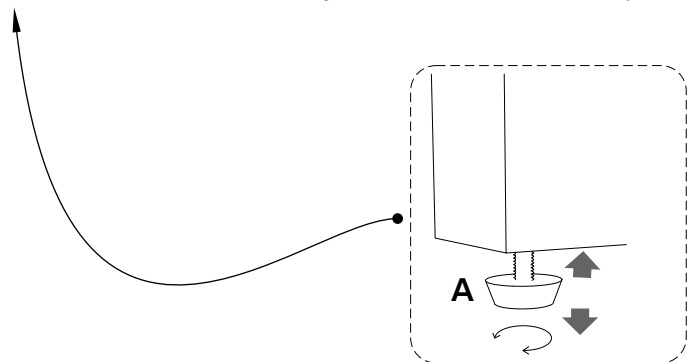

Thank you for your support!

