




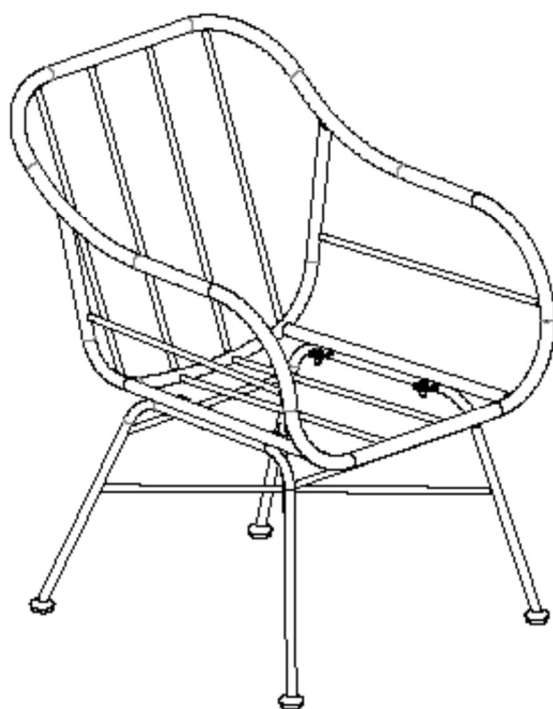



ASSEMBLING INSTRUCTION
MARGIET CHAIR (21690/21692)

A		1pc	C		4pcs
B		1pc	D	 M6*20	4pcs
			E		1pc

Note: first scwer all bolts in by hand, before tightening.



①

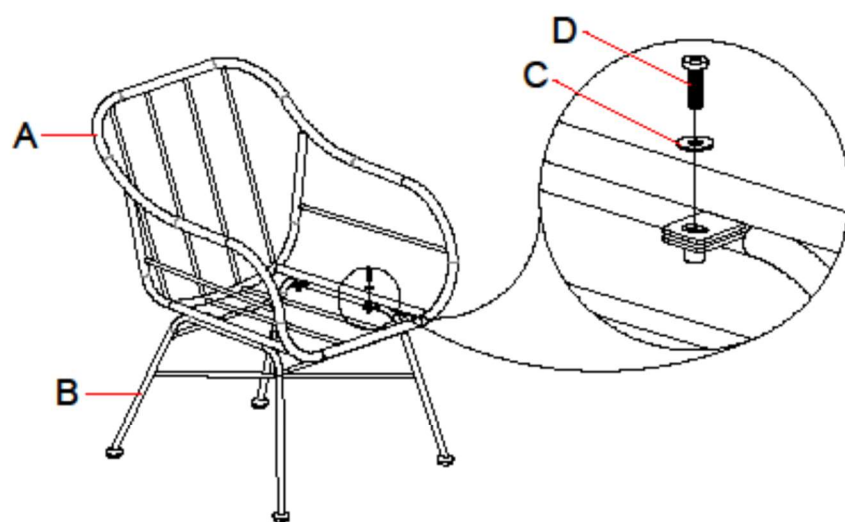

②

