

# Easy & Simple

## A



Fig 1

Slide Out "A"

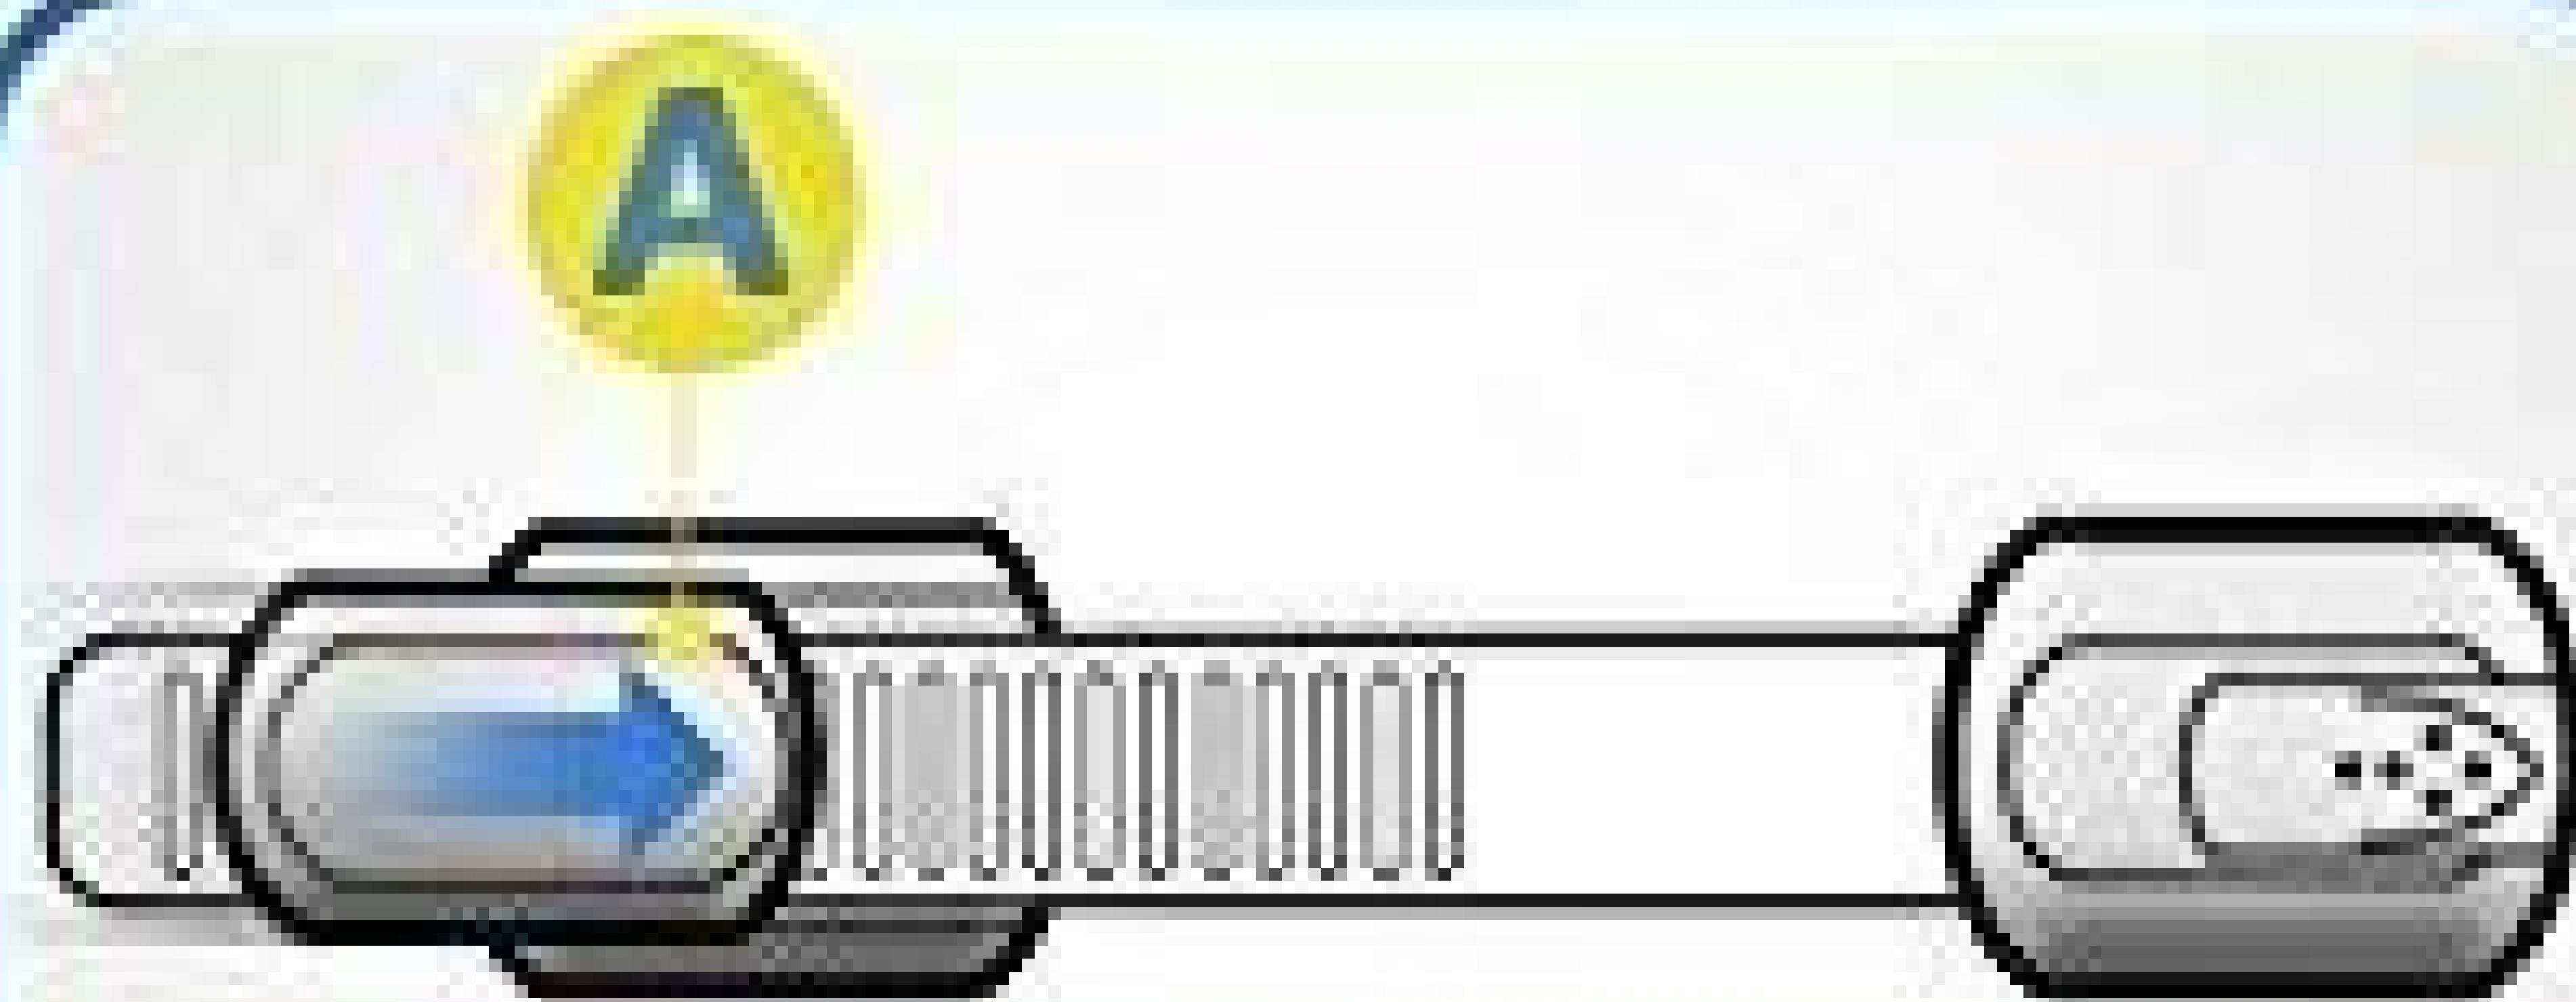


Fig 2

Adjust length as needed  
slide back in the lock

## B

Remove 3M adhesive  
on the back.

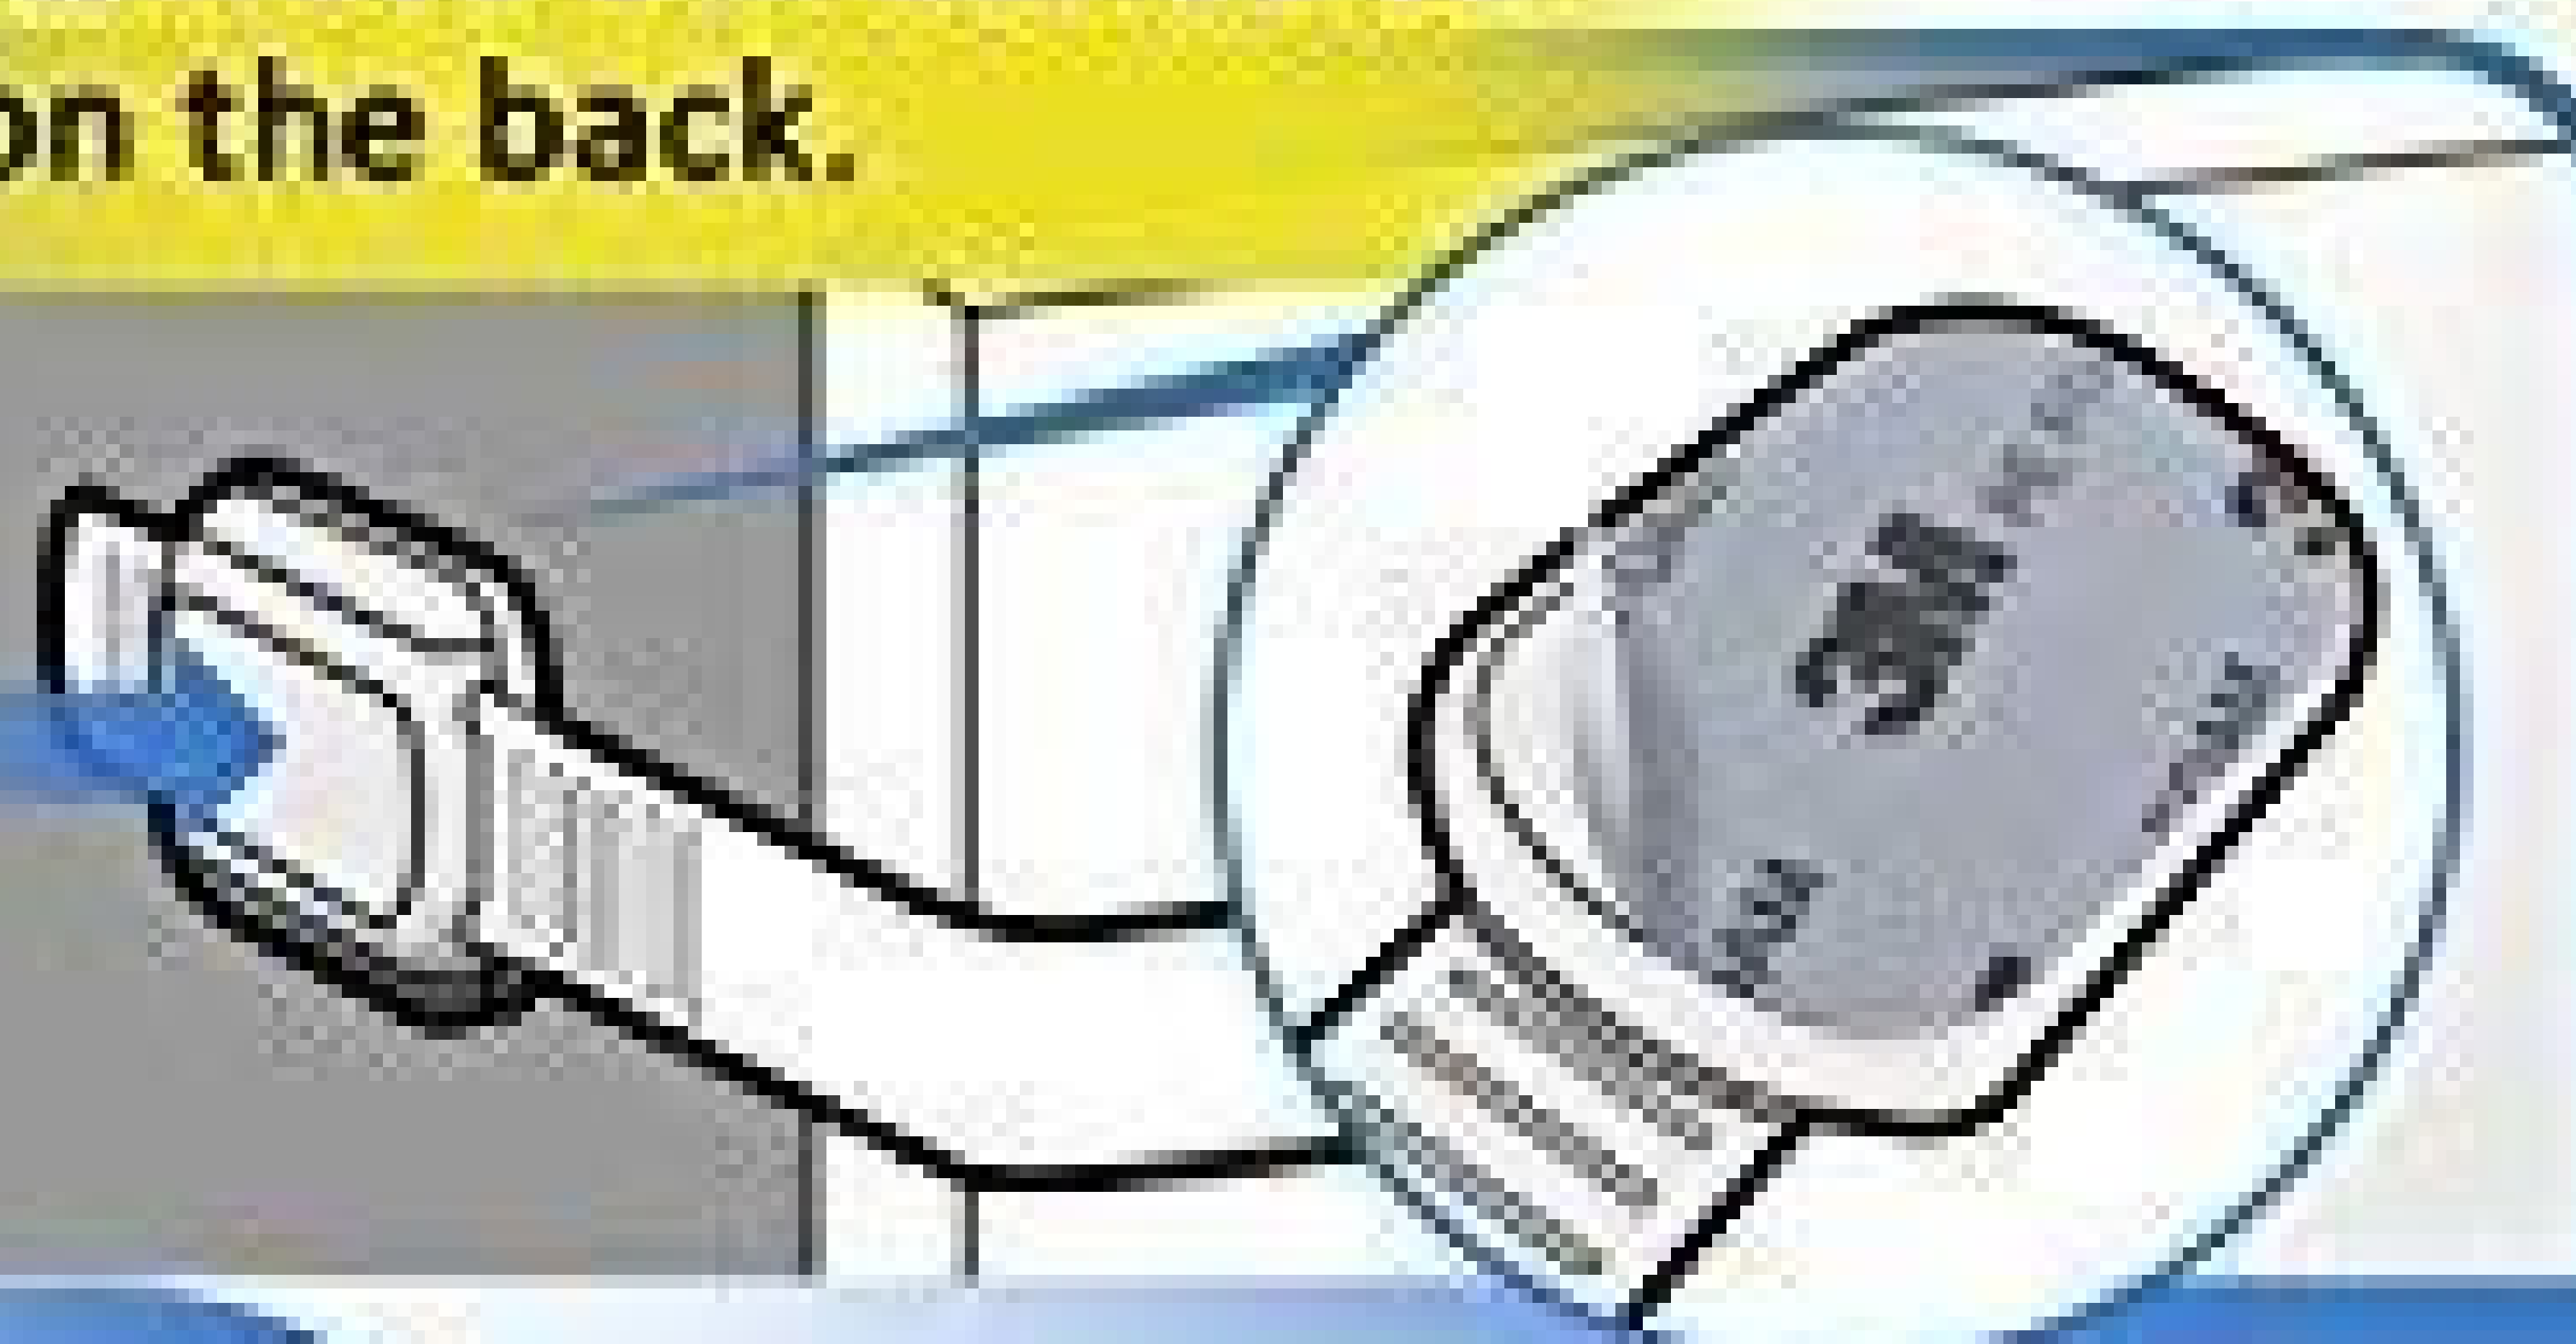


Fig 3

Press down firmly to  
install

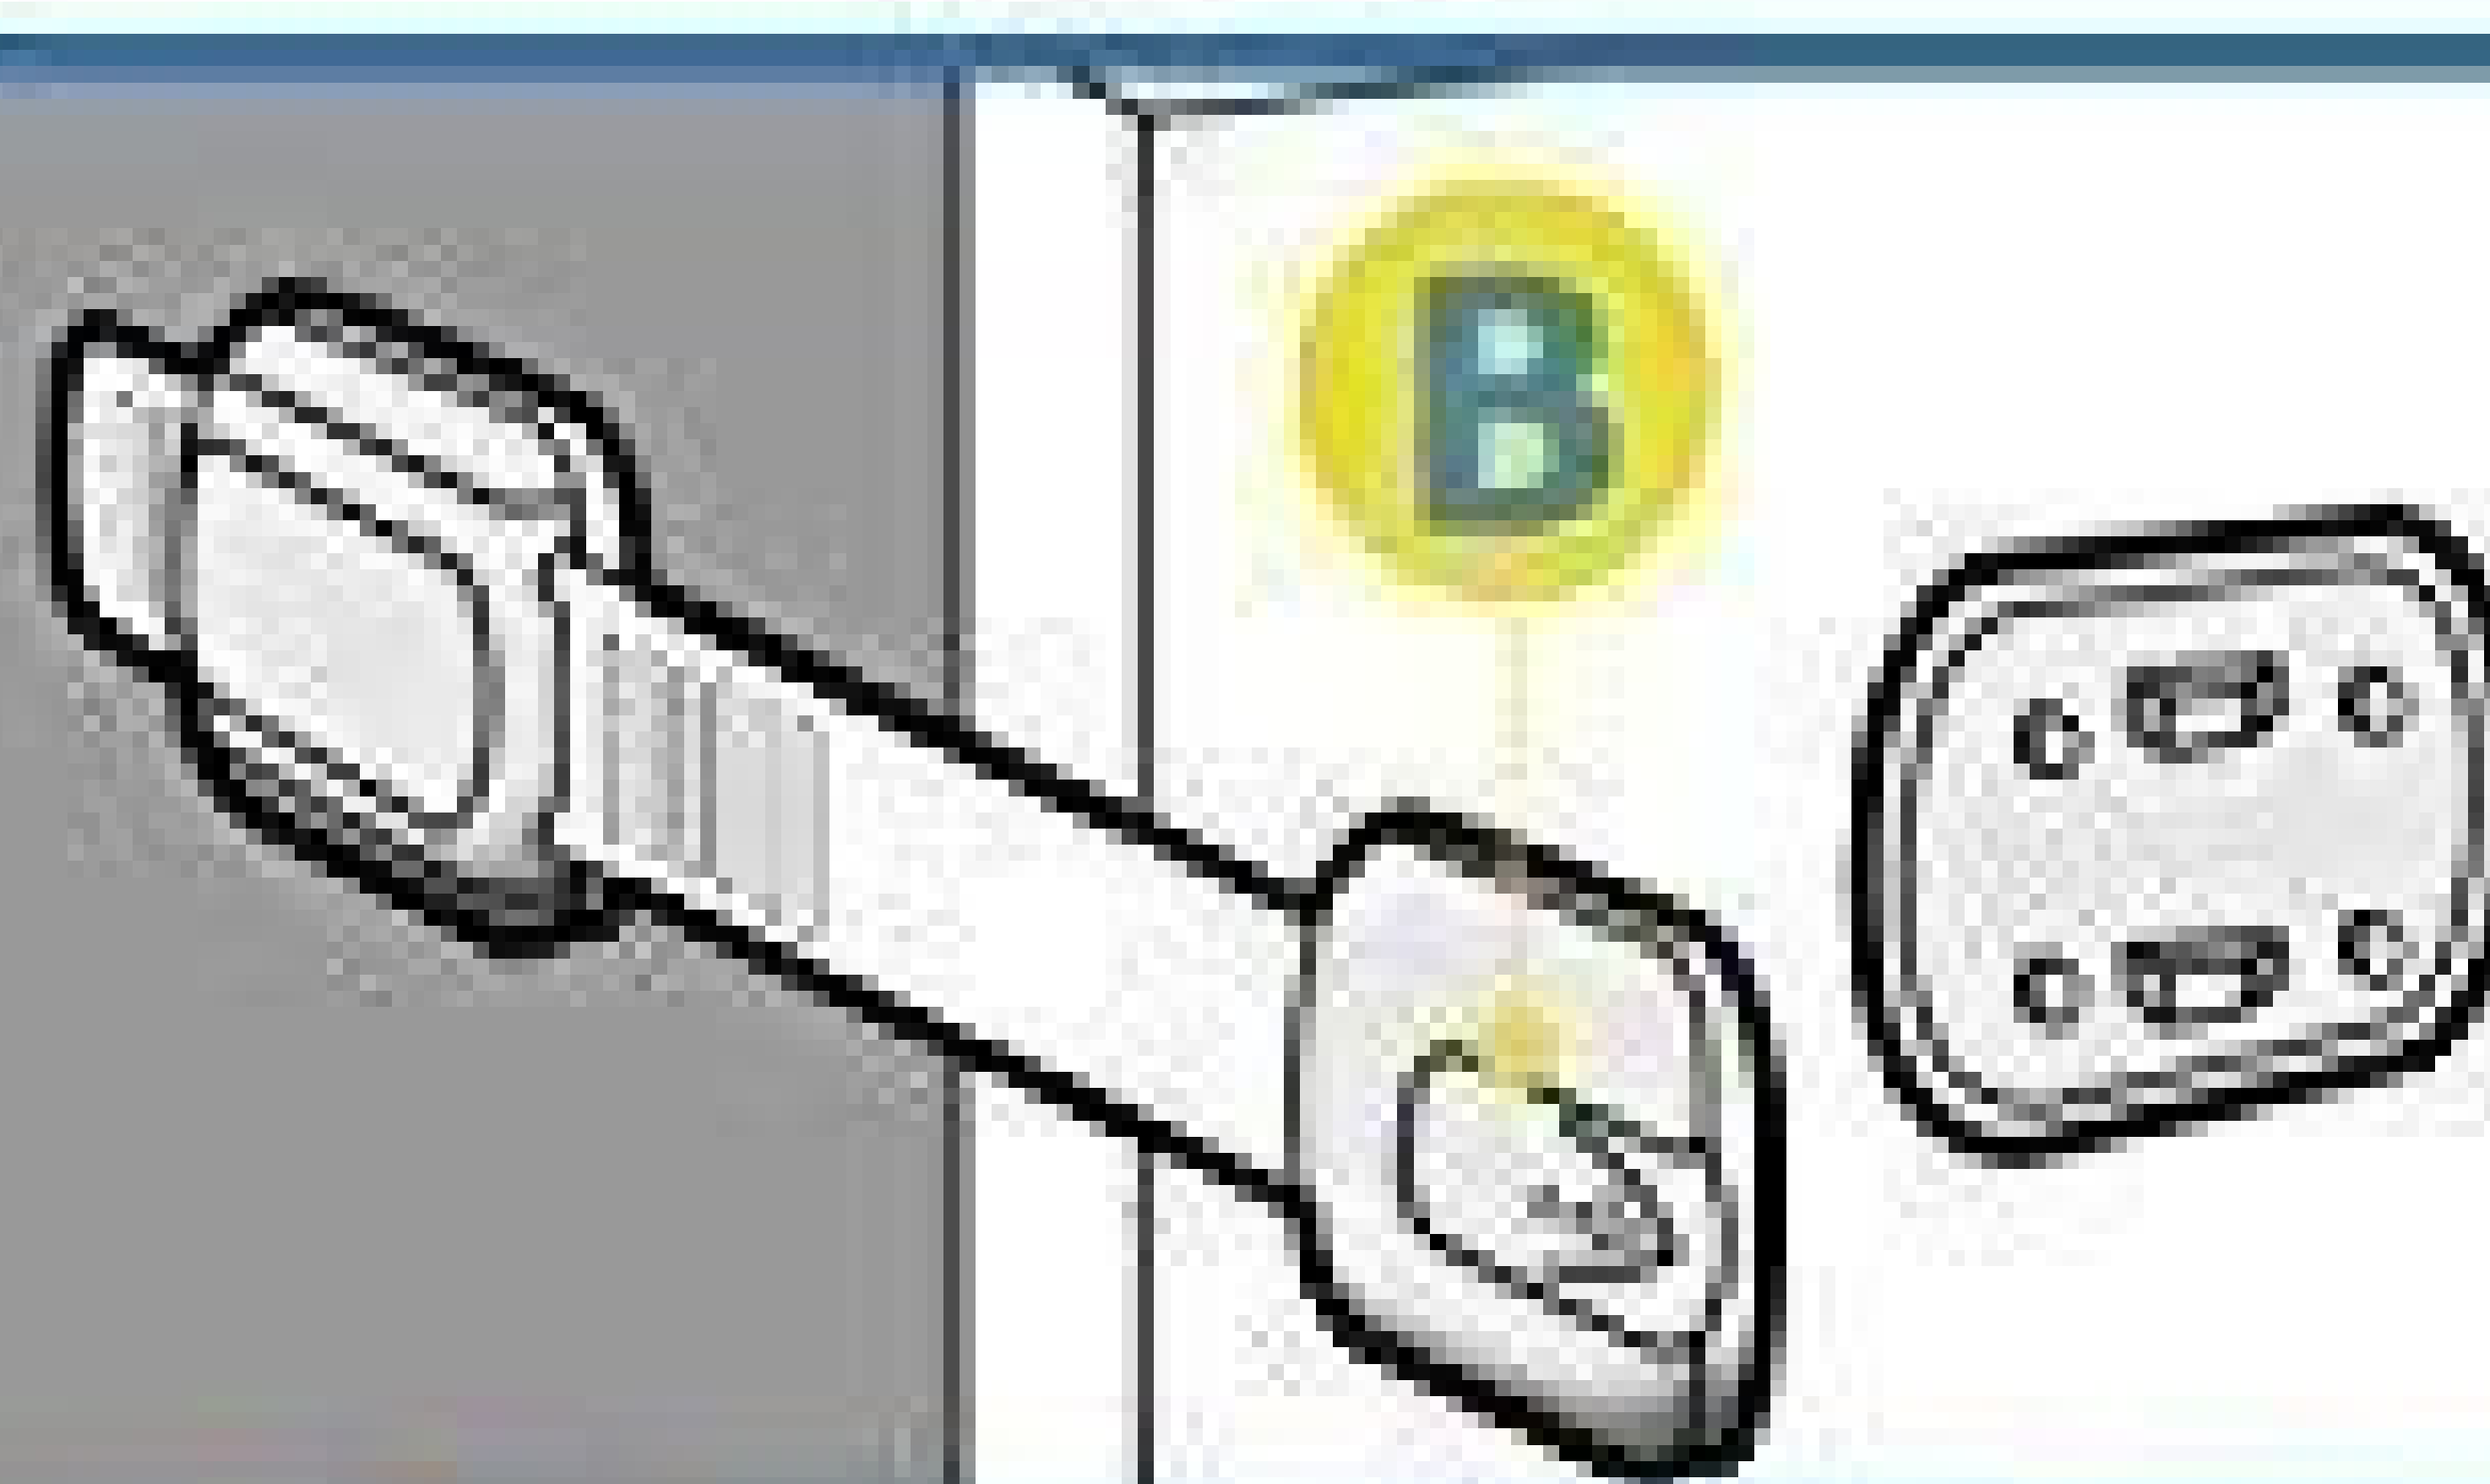


Fig 4

Slide "B" to open  
the Lock!