


58208EG

| NO. | Picture | Name | Qty |
|-----|---------|----------------|-----|
| A | | Seat cushion | 1 |
| B | | Back cushion | 1 |
| C | | Armrest right | 1 |
| D | | Armrest left | 1 |
| E | | Leg | 4 |
| F | | Leg | 1 |
| G | | PVC Bolt Cover | 27 |
| H | | M6X45MM Bolt | 11 |
| I | | Steel Washer | 27 |
| J | | M6X20MM Bolt | 16 |
| K | | Wrench | 1 |

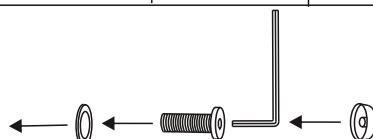

Let op: Bij het monteren van het meubel eerst alle schroeven half indraaien.
Pas als alle schroeven op de plek zitten alles vast draaien.

Note: When assembling the furniture, first screw all screws halfway.
When all the screws are in place, tighten everything.


Achtung! Um die Montage des Möbelstückes zu vereinfachen,
erst alle Schrauben handfest andrehen und am Ende erst alle Schrauben
fest anziehen.

Attention: Avec votre meuble, tous les visser par rapidement monter.
Ci tout sur son place, vous pouvez les monter.


Assemble instruction

DAYBED

STEP 1

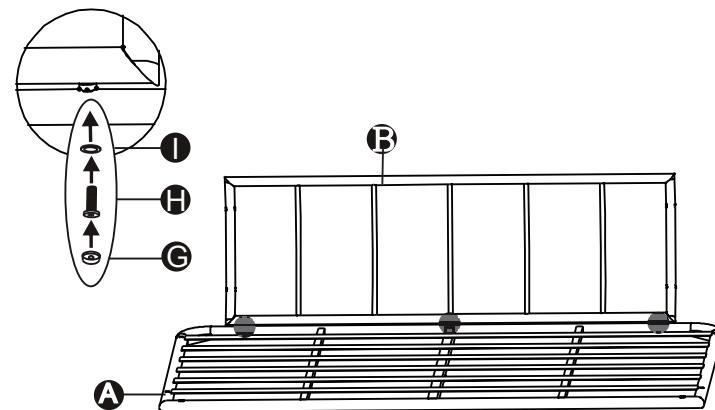

STEP 2

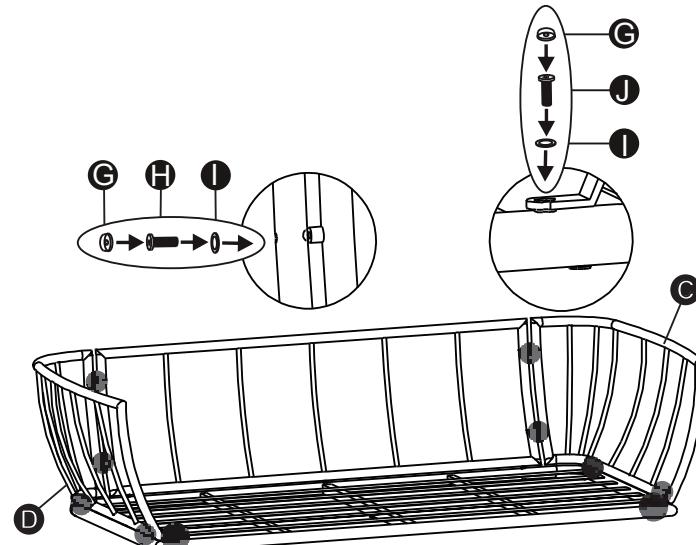

STEP 3

