









20 CUBE CABINET

12 DOORS


NO.	Qty	Length(mm)	Sketch
A	63	350x350	Squares 
B	12	350x350	Doors 
C	64		Connectors 
D	12		Magnets 
E	2		Hangers 
F	1		Hammer 

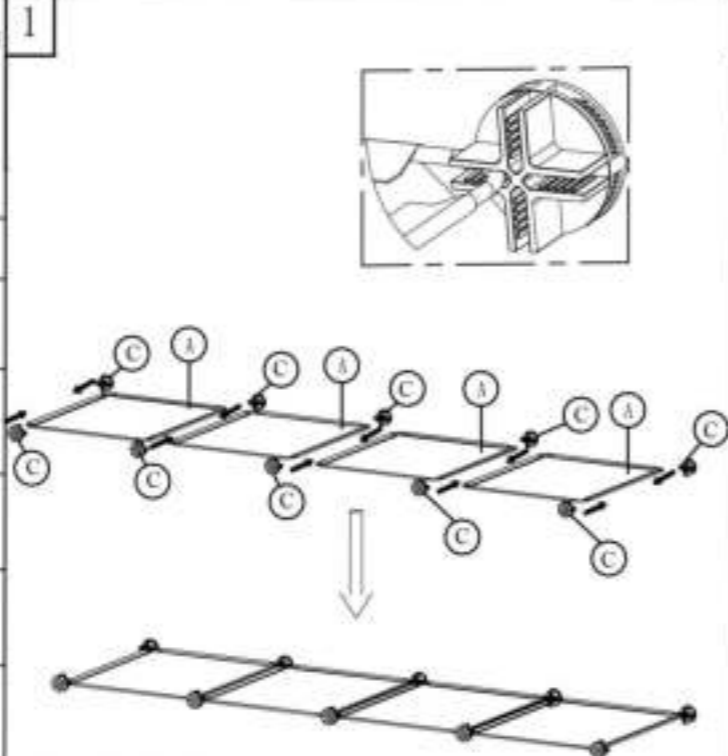

Install the base
Lay the base according to above picture, pls note connectors in the same direction.

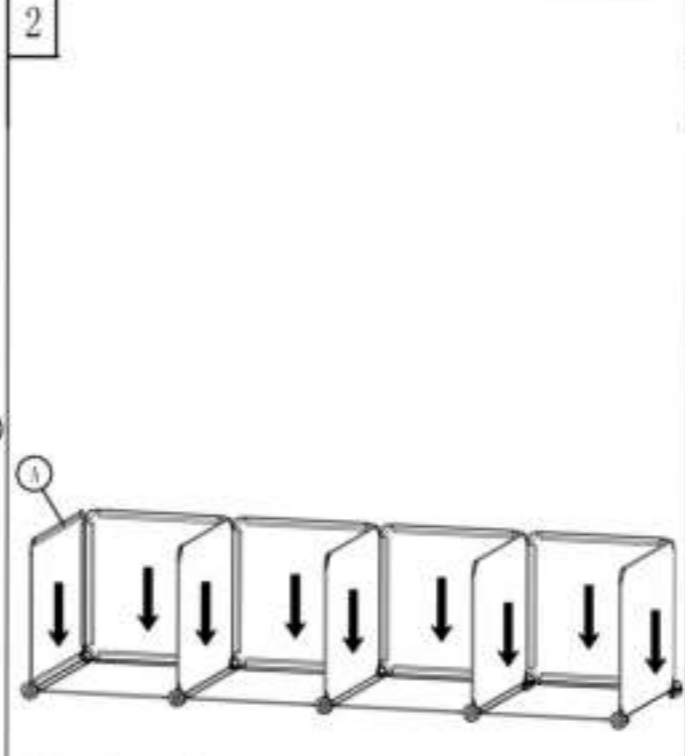


Install panels
Insert side panel and back panel according to arrow direction

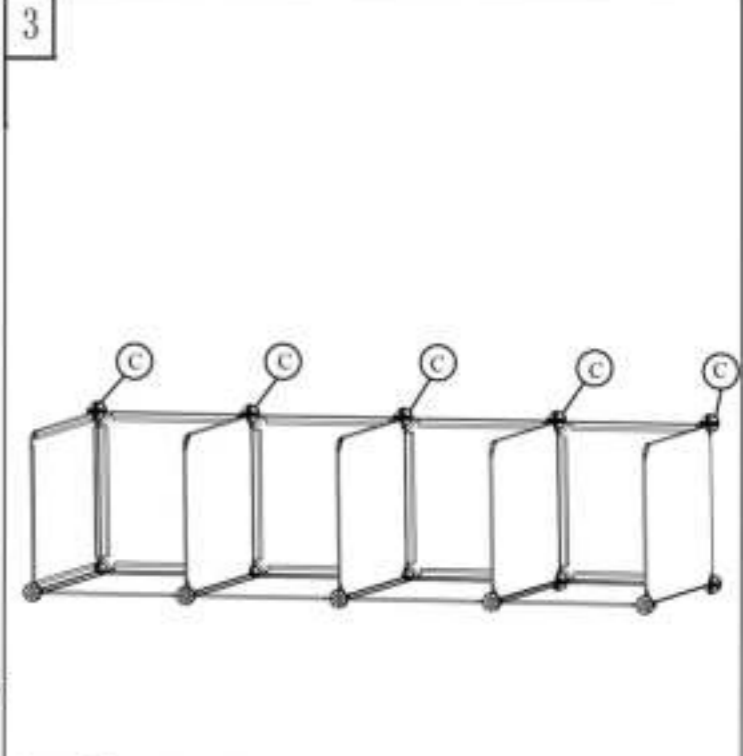


Install connectors
Insert back connectors according to above picture. Note all of connectors in same direction.


- Tips:**
1. Press each verticle panel after install to keep connectors insert panels firmly.
 2. Keep panel and connector tightly.
 3. Be laid flat.
 4. Keep upright and avoid collision.

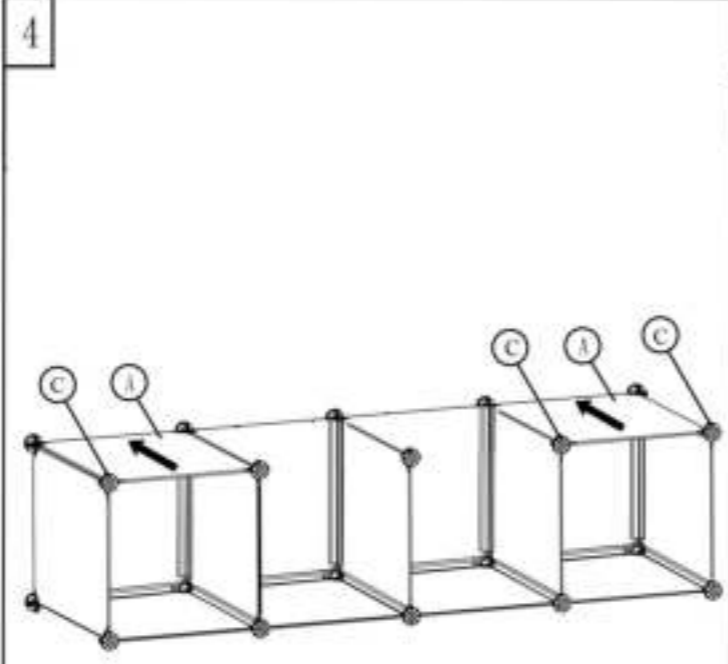

Install top panels
Insert panels according to above picture.

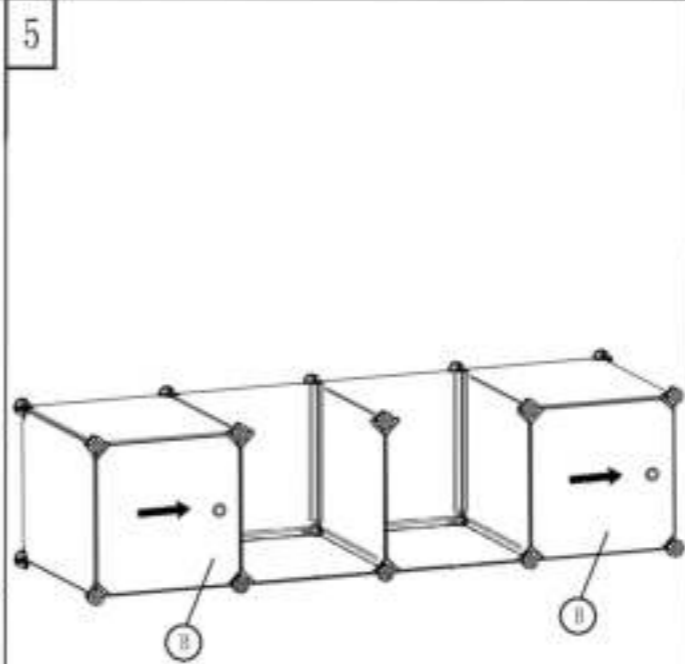

Install door panel
Insert steel frame of door into connector and keep the connector into storage cabinet

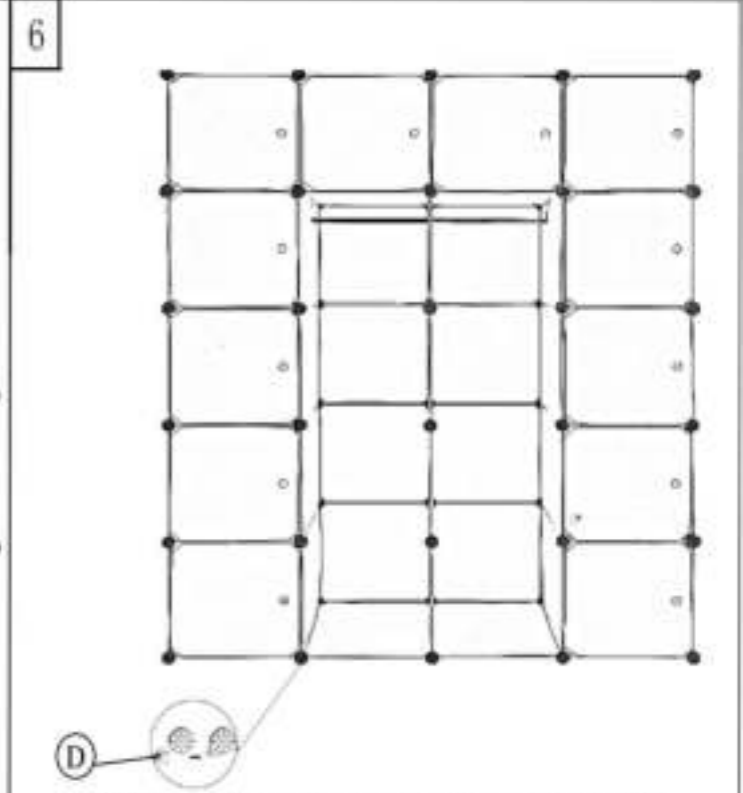

Repeat previous assemble way to spread the cubes until all cubes are assembled.

