## Assembly instruction | Metal base with cross



distributed by blatt













Included parts











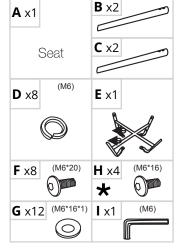



\* ATTENTION! For upholsterd shell use different parts

H -> 4x M6\*30 screws (a)



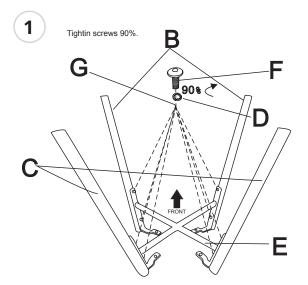

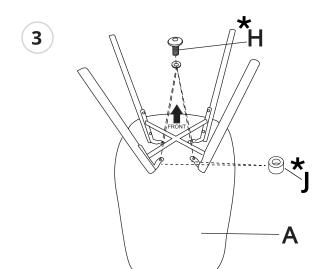

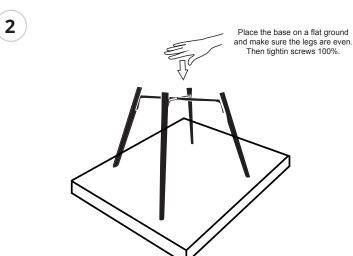





• We recommend that you re-tighten the screws after a while for optimum retention of your chair.