




## RECESSED IN A CUT-OUT HOLE INSTALLATION STEPS

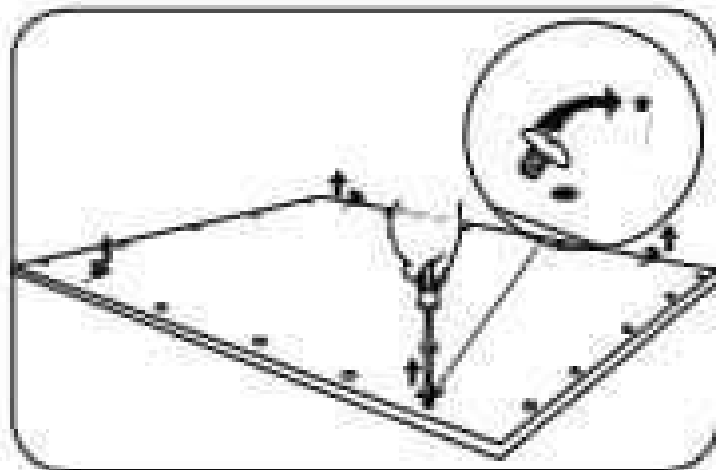


1 Unscrew the highlighted screws from the four corners of the Panel.

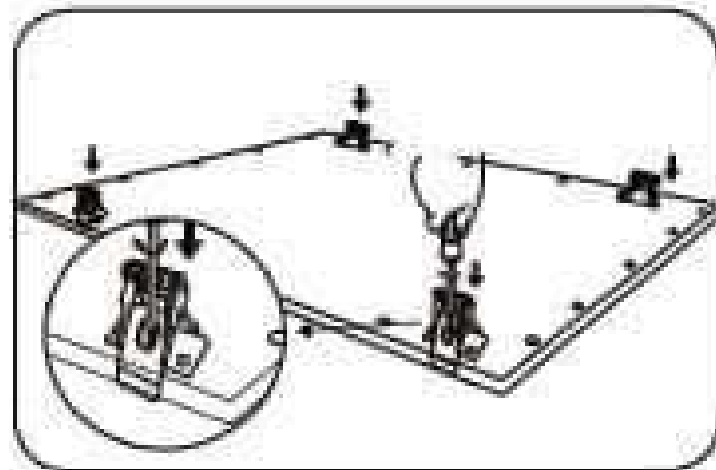


2 Place the springs in position and reinstall the four screws. The screws must be inserted through the center hole of the clip as illustrated above.

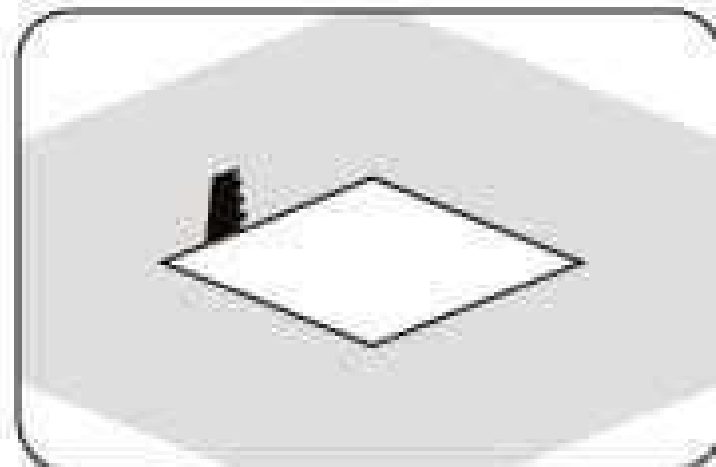

3 Cut a square hole in the ceiling 10mm smaller than the LED Panel.

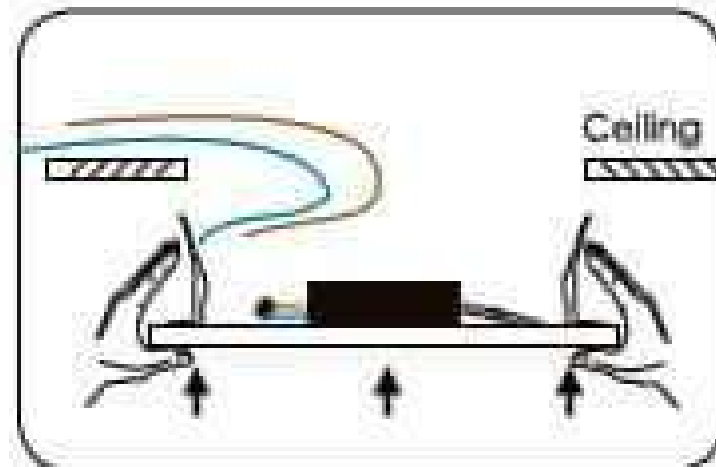

4 Connect the LED Driver to AC mains power. Push the Panel into the ceiling cavity with the springs raised.

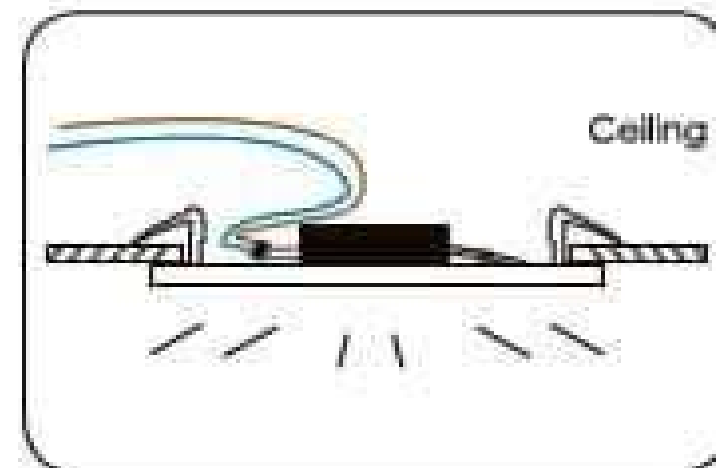

5 Complete installation.

## RECESSED IN A CUT-OUT HOLE EXTRA KITS

Accessories	2000	3000	4000	6000	8000	12000
		X 4				X 6