


# 16 CUBE CABINET


Qty	Length(mm)	Sketch
52	350x350	Squares
16	350x350	Doors
53		Connectors
16		Magnets 🔲
2		Hangers
1		Hammer <
	52 16 53 16	52 350x350 16 350x350 53

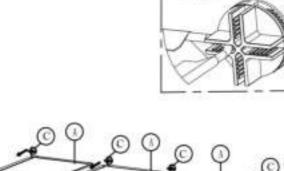

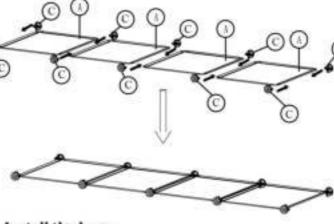




Lay the base according to above picture, pls note connectors in the same direction.

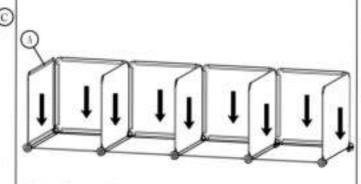

#### Install panels

Insert side panel and back panel according to arrow direction

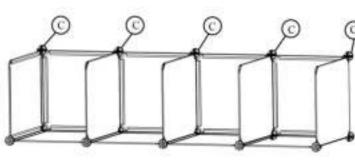


#### Install connectors

Insert back connectors according to above picture. Note all of connectors in same direction.


# Tips:

- Press each verticle panel after install to keep connectors insert panels firmly.
- 2. Keep panel and connector tightly.
- 3. Be laid flat.
- 4. Keep upright and avoid collision.

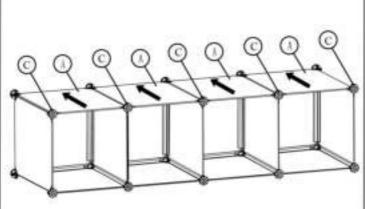


## Install top panels

Insert panels according to above picture.

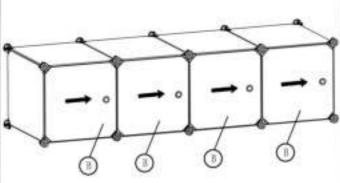

### Install door panel

Insert steel frame of door into connector and keep the connector into storage cabinet

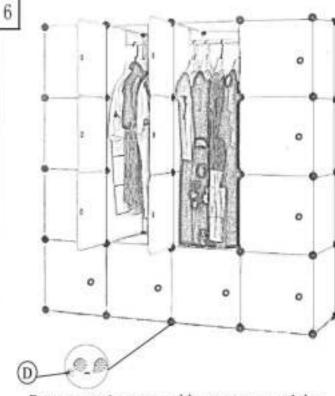

Repeat previous assemble way to spread the cubes until all cubes are assembled.

