

## How to Install

Step 1



Wipe the surface clean

Step 2



Tear off the protective film and affix it one position

Step 3



Paste one sticker on the wall and another on desired item

Step 4



Wait 8 hours it will paste more firmly

# Socket retainer


Both horizontal and vertical posts



Power strip/router

Good helper for home/office

# 1 Pair

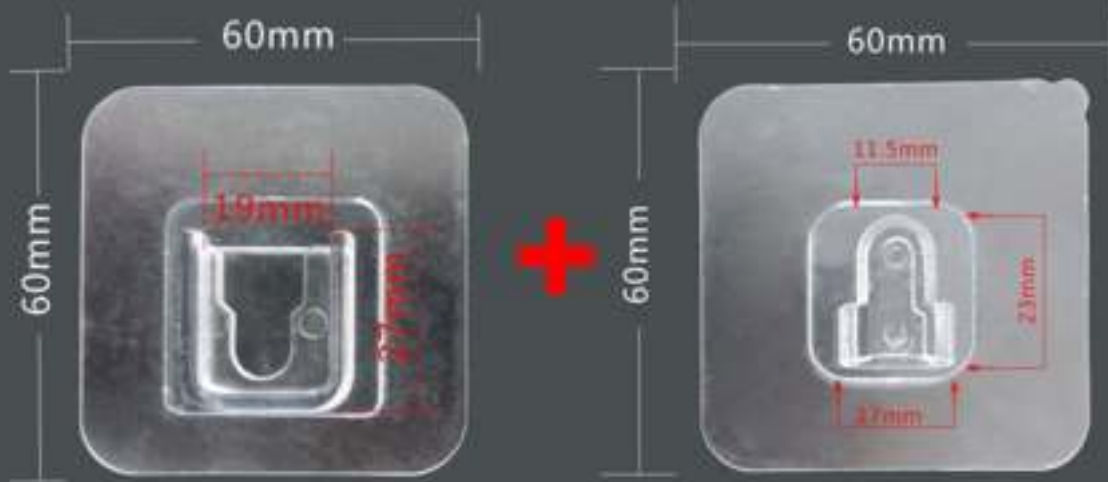

**Female button**

**Buckle**