

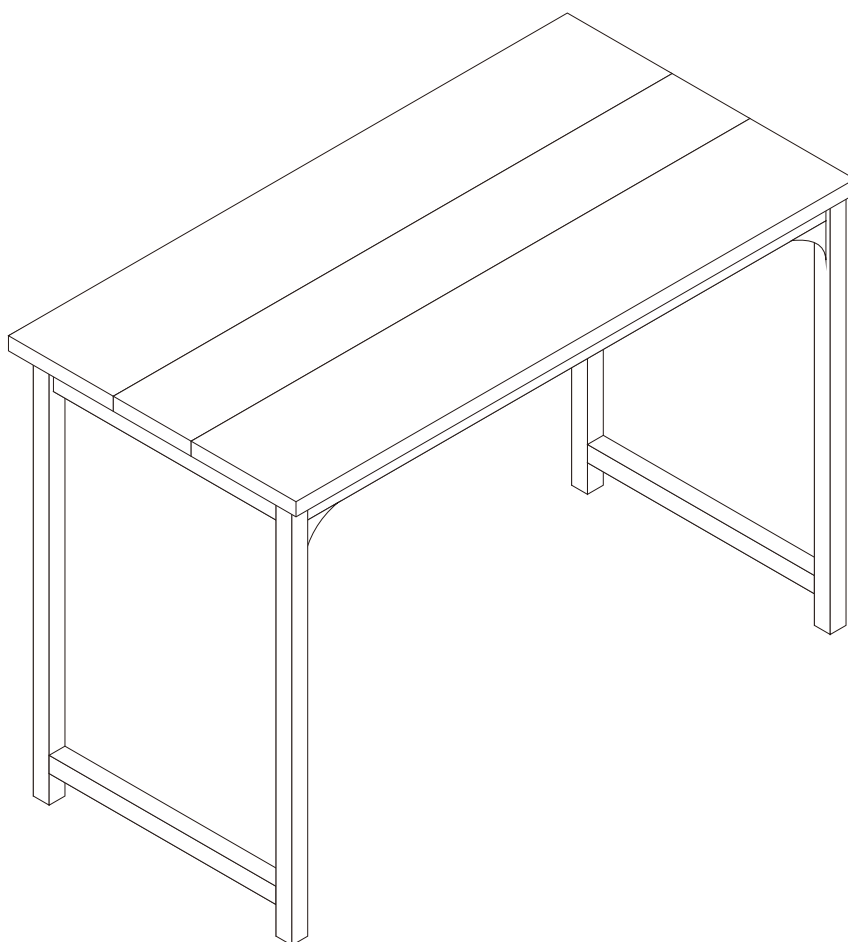
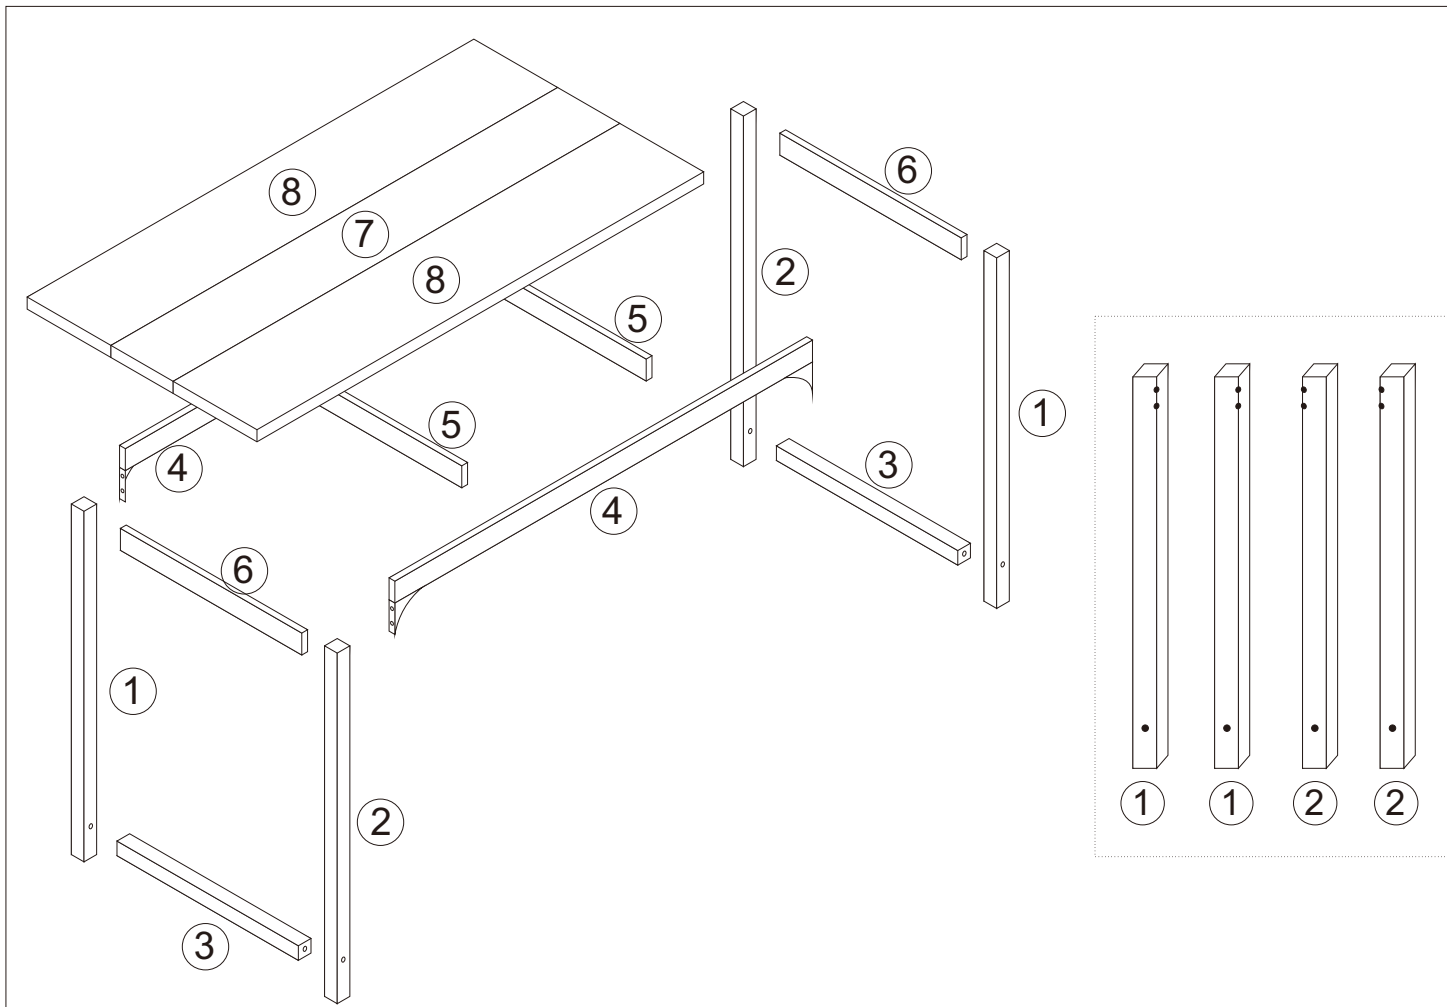
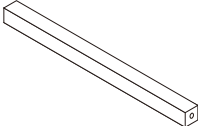
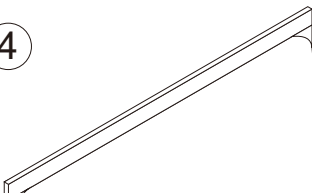
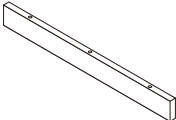
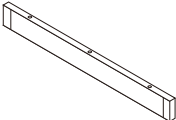
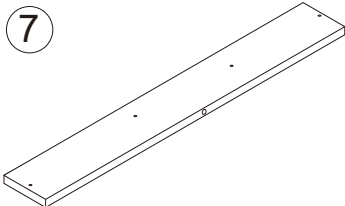


Installation instructions

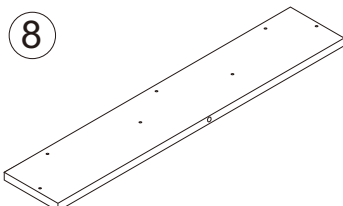


Tribesigns



①  72x5x5cm x2	②  72x5x5cm x2	③  68x5x5cm x2	④  165x5x2.5cm x2	
⑤  72x5x2.5cm x2	⑥  68x5x2.5cm x2	⑦  180x20cm x1	⑧  180x30cm x2	
A  8x70mm x4	B  8x40mm x12	C  x4	D  x4	E  8x20mm x8
F  x2	G  6x60mm x18	H  x1	J  x1	

01

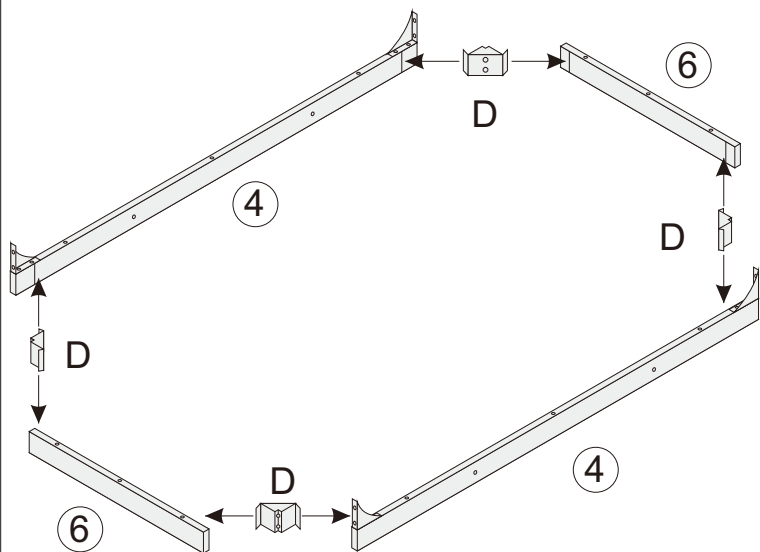


D



x4

02

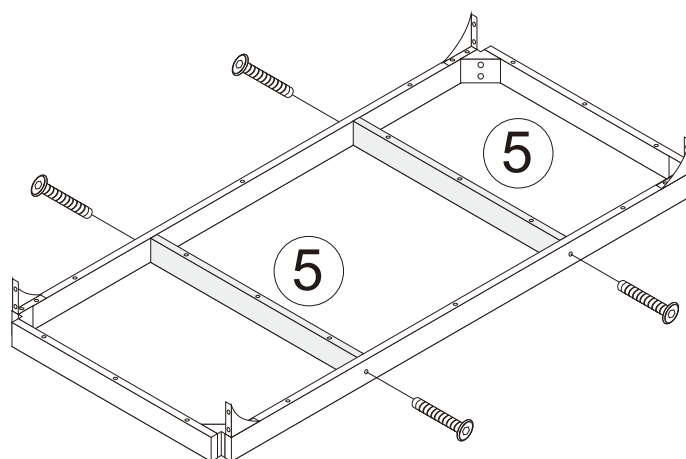

B




8x40mm

x4

Friendly Tips: DO NOT fully tighten all screws until assembly is completed.

03

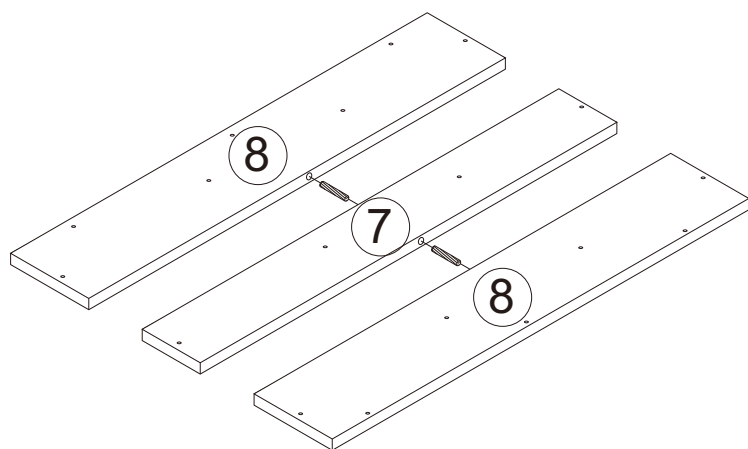


F



x2

04

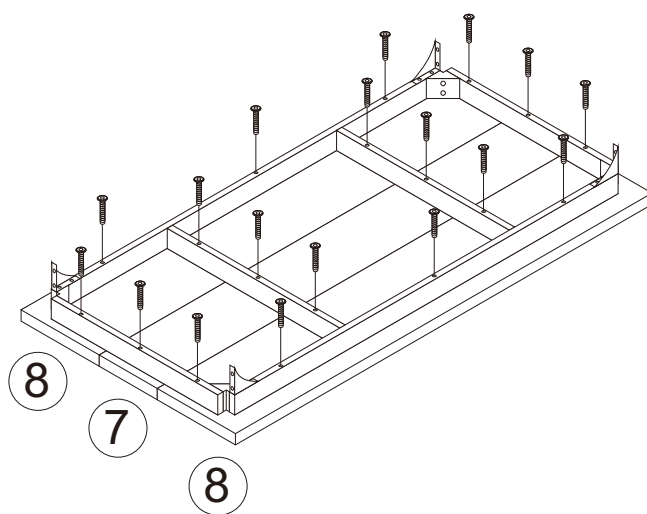

G




6x60mm

x18

05


Pay attention to the direction of the hole

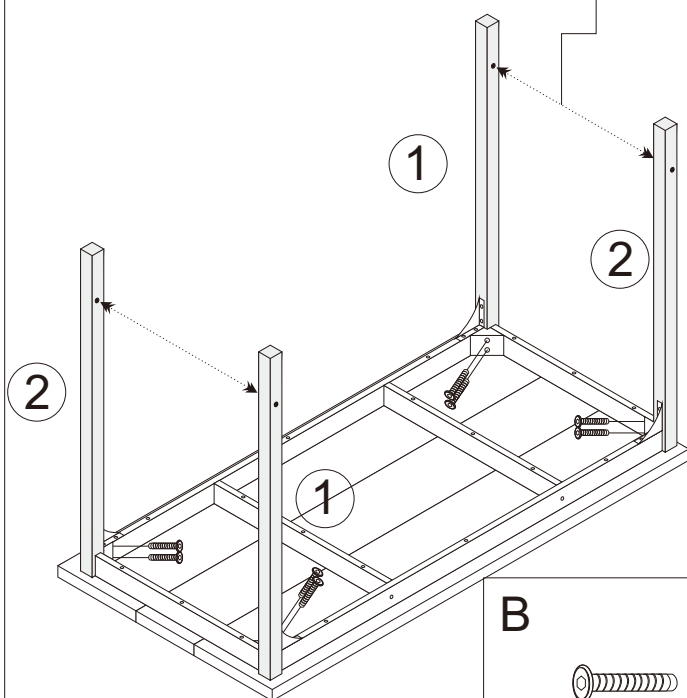

B




x8

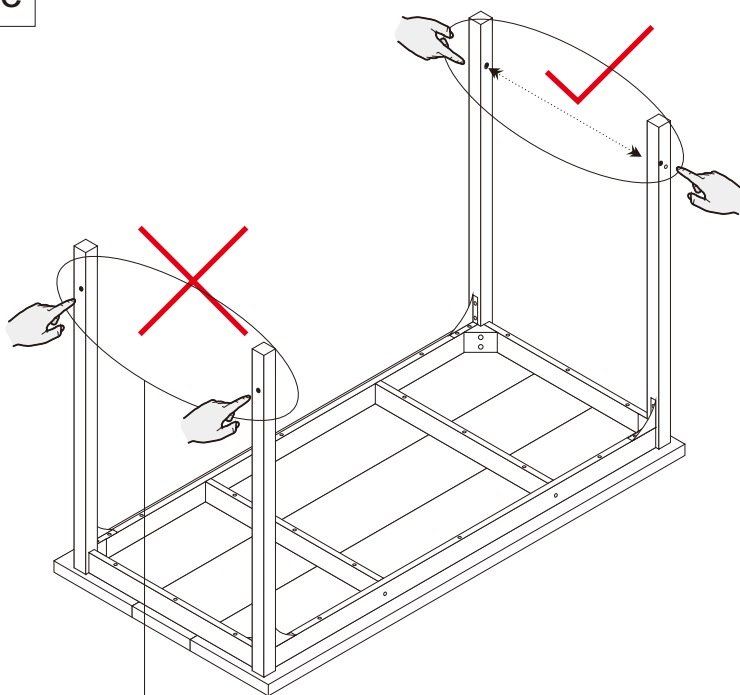

If this happens, just switch the two steel legs left and right to install it.

06

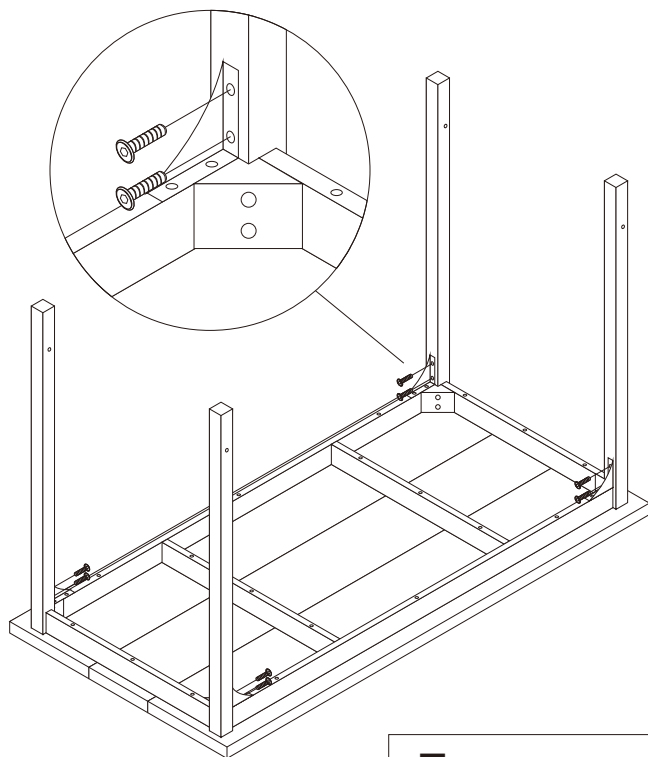


E



8x20mm

x8

07

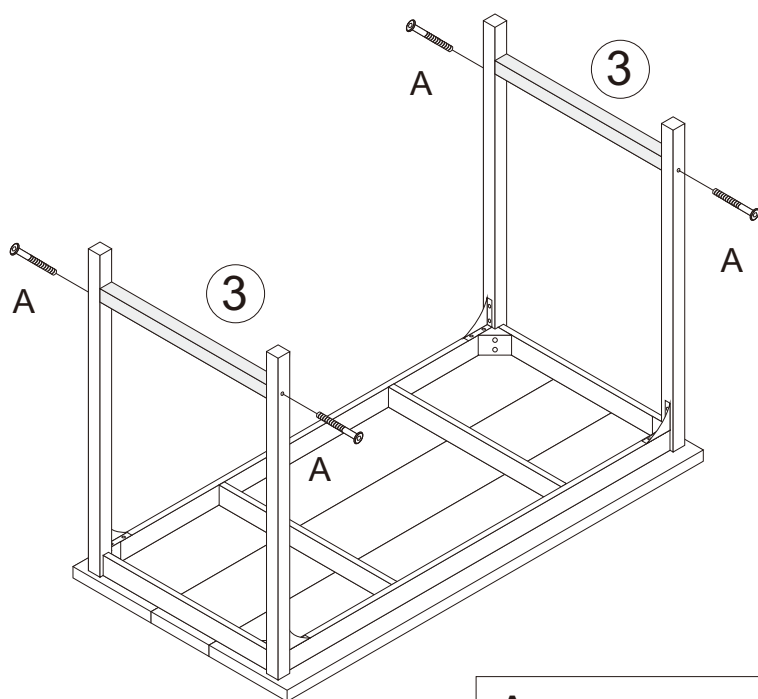



A



8x70mm

x4

08

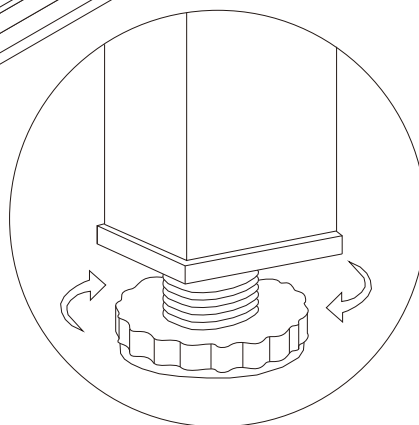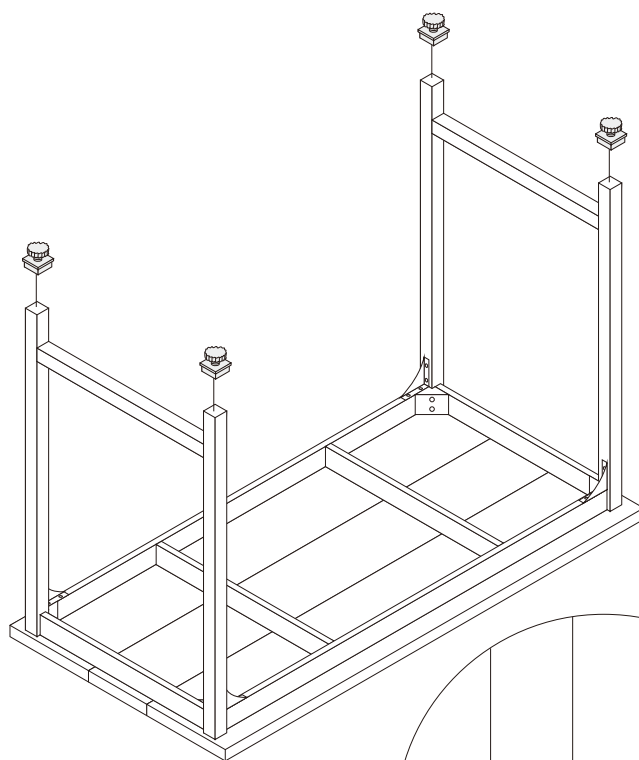

C



x4

09

