

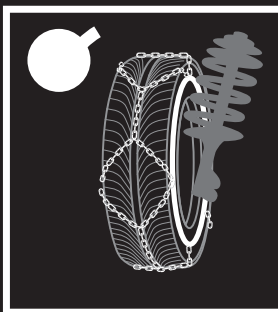
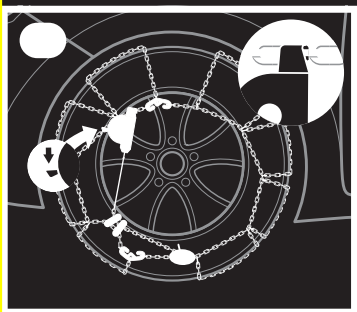
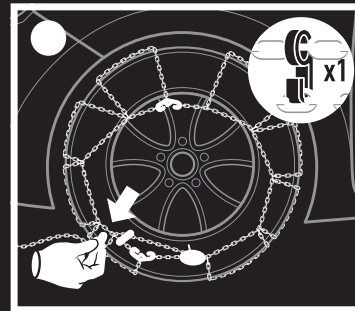
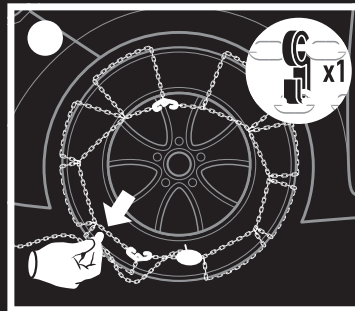
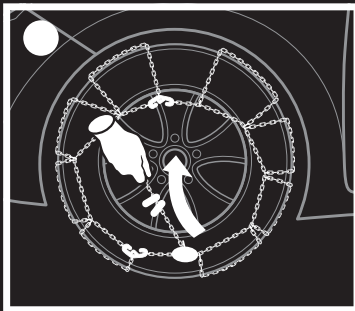
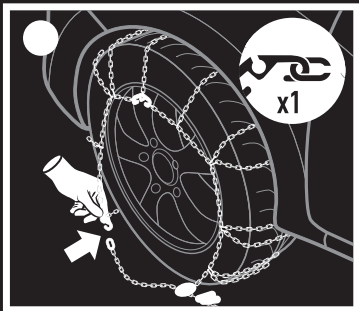
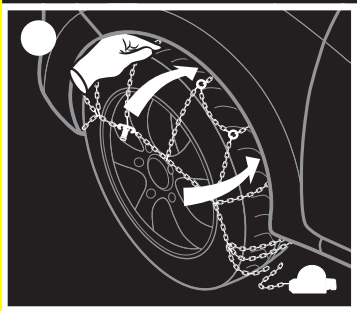
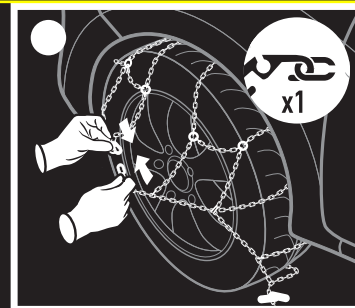
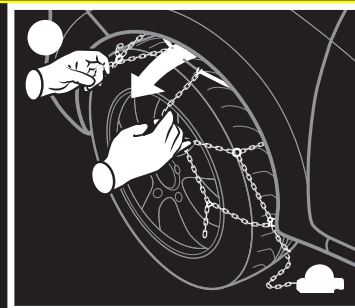
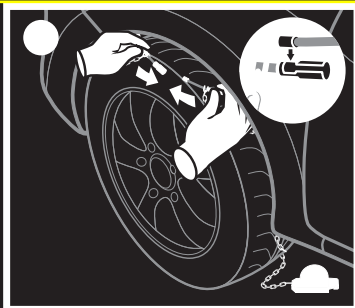


Montage - Mounting
Montaje - Montaggio

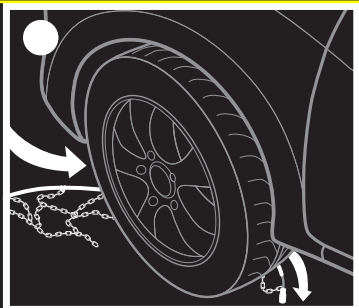



SNÖPRO EVO

www.proakcess.com



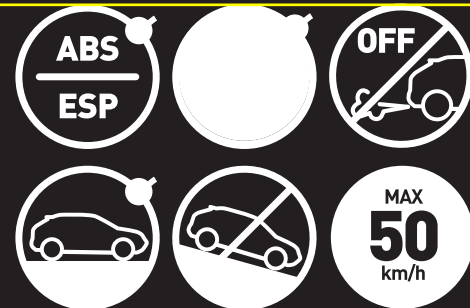


F-DEMELER AVANT MONTAGE
UK-UNRAVEL BEFORE MOUNTING
DE-ENTWIRREN VOR DER MONTAGE
IT-SVELARE PRIMA DEL MONTAGGIO


Démontage
Dismounting
Desmontaje
Smontaggio

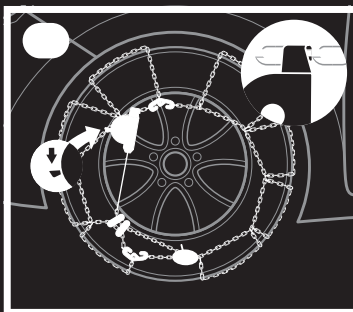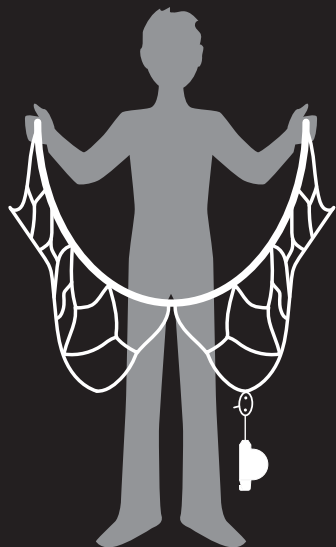

8-7-6-5-4-3

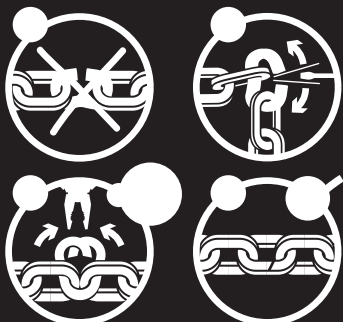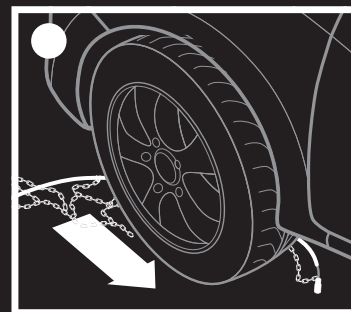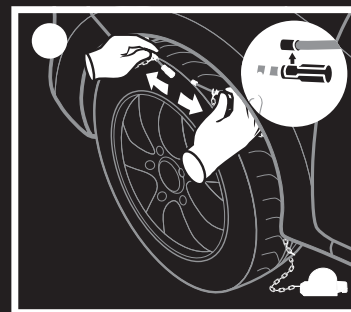

F-APRES UTILISATION
UK-AFTER USE
DE-NACH DEM GEBRAUCH
IT-DOPO L'USO

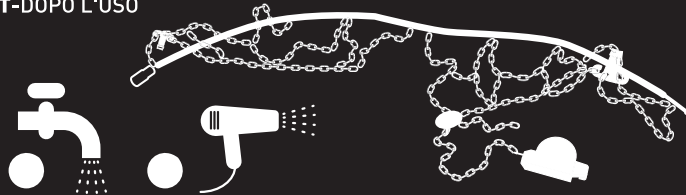

F-POUR EMBALLER
UK-TWIST TO PACK
DE-TWIST PACKEN
IT-PER IMBALLARE

