


## \_ 5S LINE



### Funções da porta | Door drilling

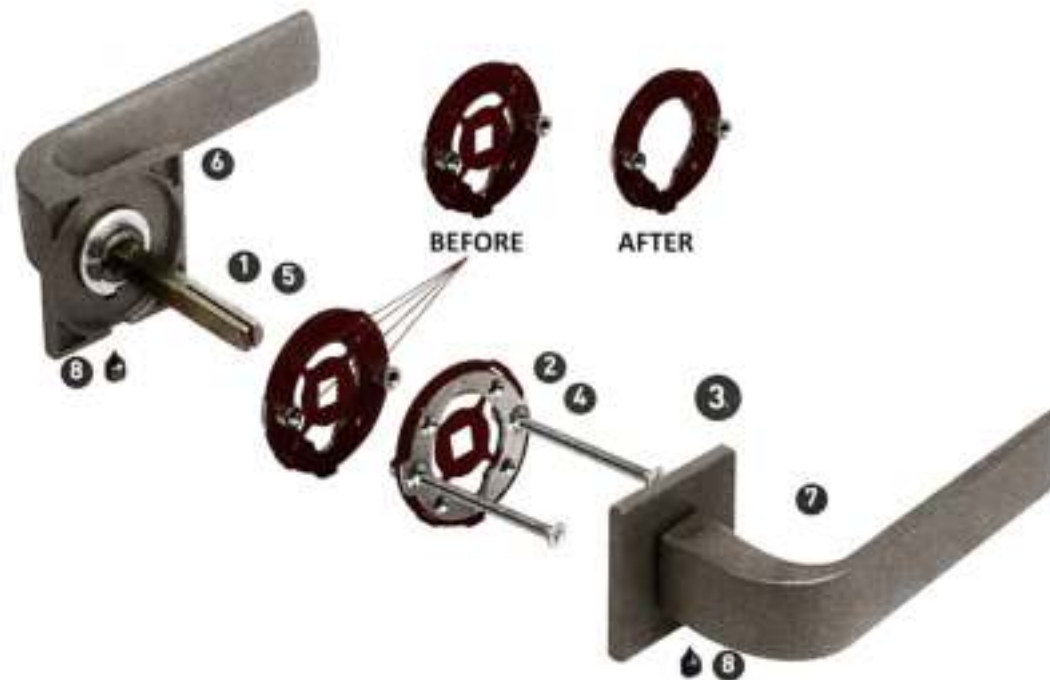

NOTA: Existe opção sem postes.

NOTE: With or without embedded fittings in the door.

- 1 Set the 8mm square spindle according (fig. 1A)
- 2 Set the adapter with through holes
- 3 Set the adapter with thread
- 4 Adjust and screw the two M4 screws (fig. 2A)
- 5 Break and remove inside parts in both plastic adapters
- Break and remove the inside parts in both plastic adapters (fig. 3A)**
- 6 / 7 Apply handle with the plate bottom up, adjust and press against the door until you hear "CLICK"
- 8 Screw the M6 threaded pins into the square spindle