



ASSEMBLY INSTRUCTIONS

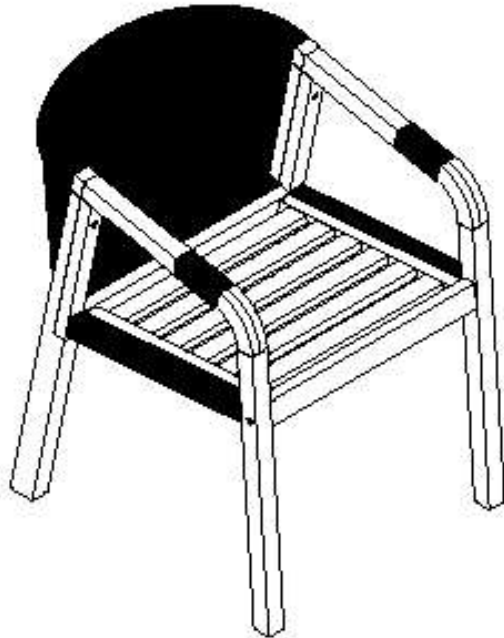


Components:

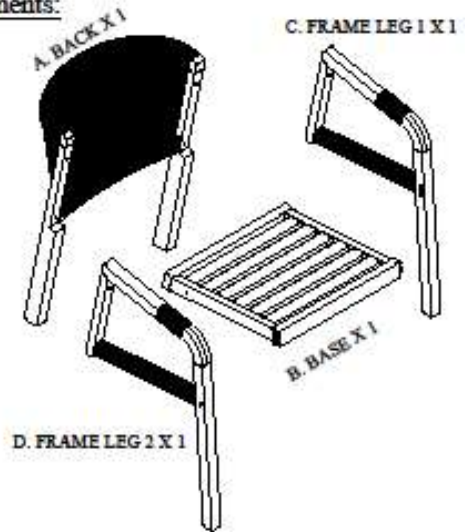


- | | |
|--|---|
| <p>① SCREW M6 x 70mm = 4pcs</p> <p>② BOLT M6 x 35mm = 2pcs</p> | <p>③ SCREW M6 x 50mm = 2pcs</p> <p>④ ALLEN KEY 4 = 2pcs</p> |
|--|---|

Step 1:

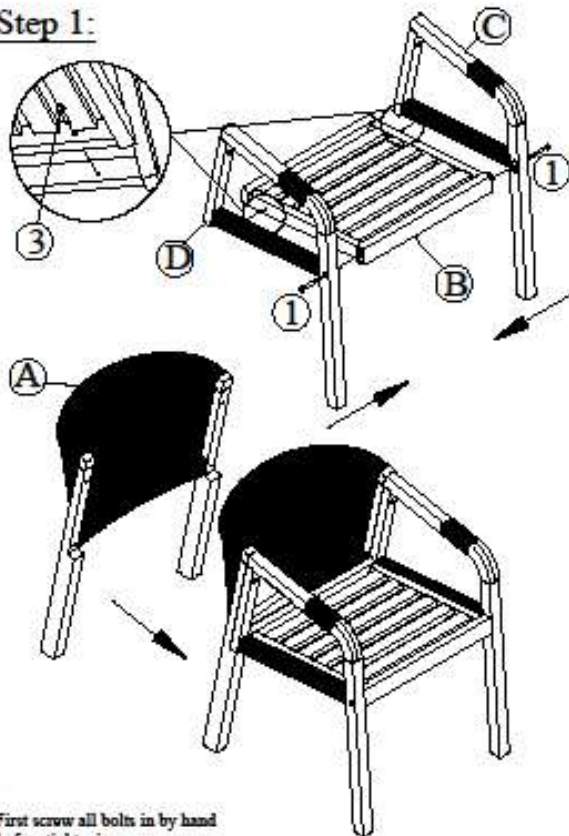

First screw all bolts in by hand before tightening

Step 2:

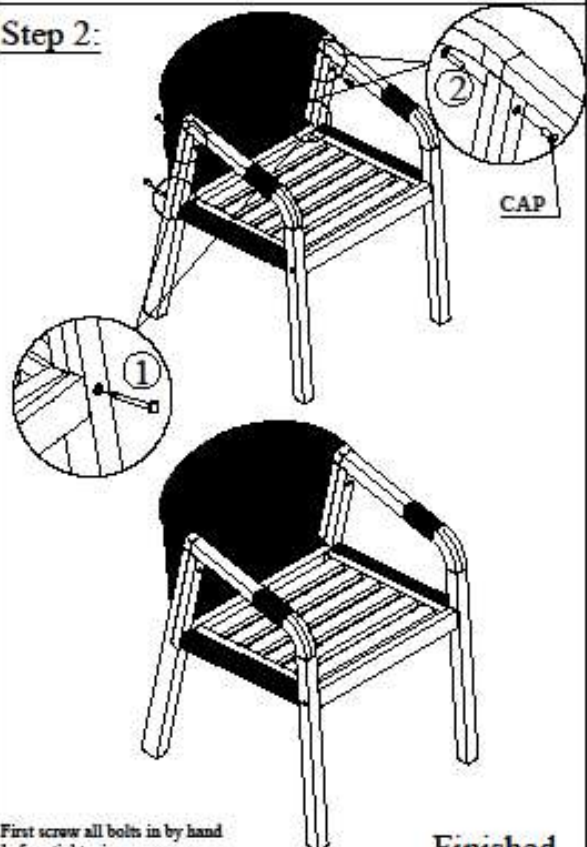

First screw all bolts in by hand before tightening

Finished