

Installation




1 Test Board Thickness

- 3 inch : suit for 10–16mm
- 4 inch : suit for 16–20mm
- 4 inch soft close : 20–24mm
- 170° : suit for: 14–40mm

2 Close Direction

Use power in the opposite direction

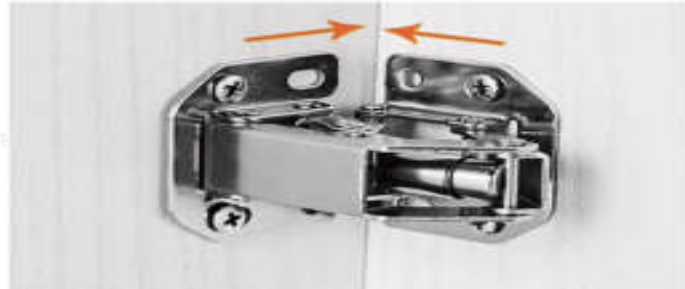

3 Position

- Do as the left photo
- Put the hinge on the door

4 Adjust

Do not finish tighten the screws
Because when you find the position is deviated,you still can adjust the screws on left or right.

You can adjust the hinge position



5 Finish

Install all screws , try to open and close it is finish.