


CURVED SHOWER CURTAIN ROD

90 x 90 CM

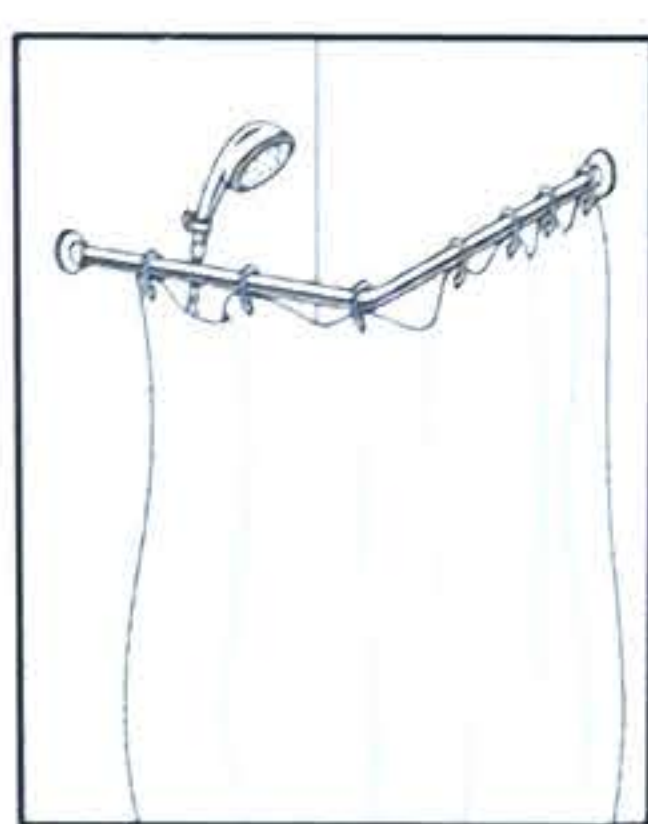

CHOOSE THE ONE SUITABLE FOR REQUIREMENT IN BATHROOM TO PREVENT WATER FROM SPLASHING OUT AND MAINTAIN THE BATHROOM DRY.



INSTALLED INSTRUCTION



1. MARK POSITION FOR SCREW HOLE



2. DRILL HOLES FOR 5mm DIAMETER



3. INSERT PLUGS AND MOUNT ARTICLE ON THE WALL USING ENCLOSED SCREWS



4. PUT THE ROUND BRACKET ON WALL AND SCREW IT BY TOOL



5. INSERT THE END OF ALUMINUM POLE TO THE FIXED ROUND BRACKET ON WALL PUT BACK THE COVER ON ROUND BRACKET

