

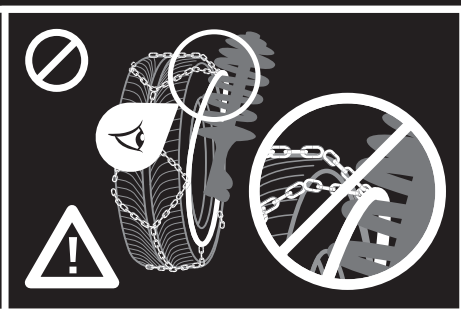
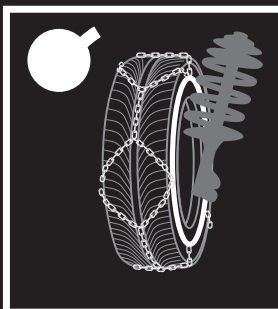
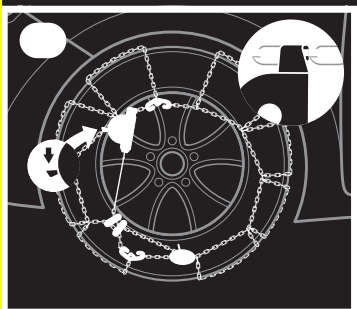
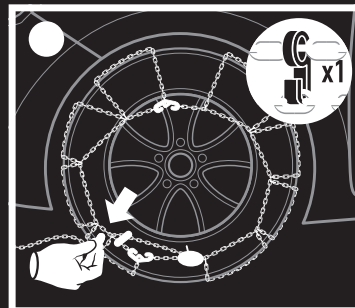
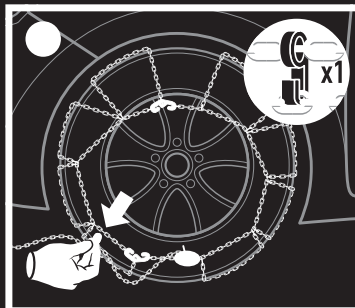
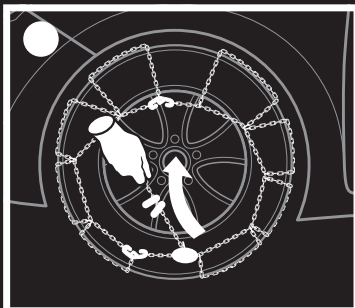
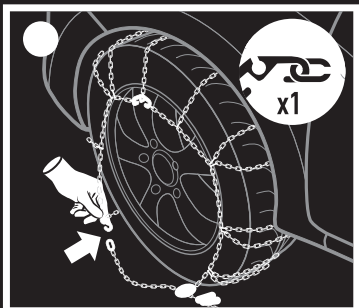
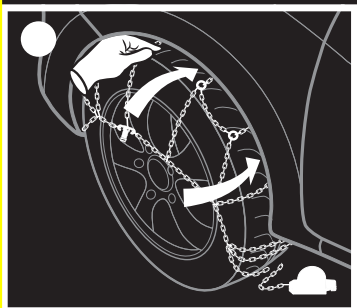
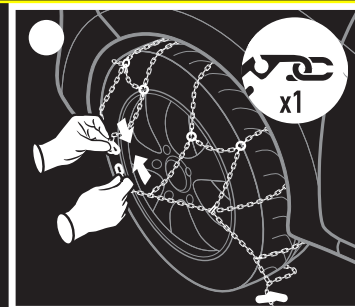
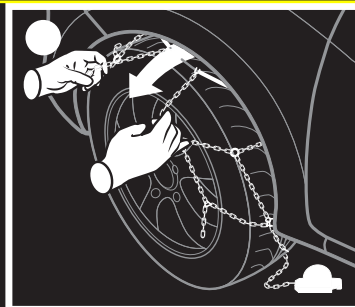
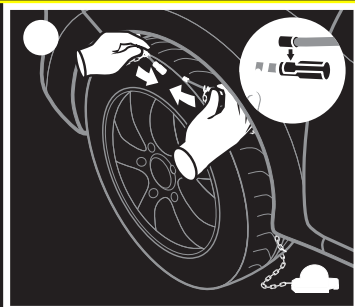


Montage - Mounting  
Montaje - Montaggio

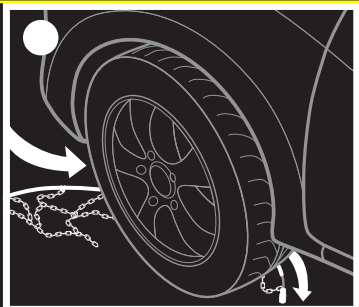



# SNÖPRO EVO

[www.proakcess.com](http://www.proakcess.com)



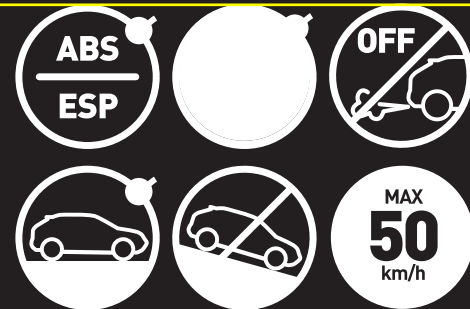


**F-DEMELER AVANT MONTAGE**  
**UK-UNRAVEL BEFORE MOUNTING**  
**DE-ENTWIRREN VOR DER MONTAGE**  
**IT-SVELARE PRIMA DEL MONTAGGIO**


**Démontage**  
**Dismounting**  
**Desmontaje**  
**Smontaggio**

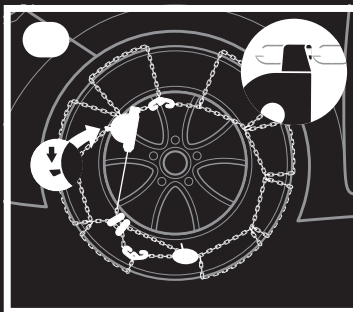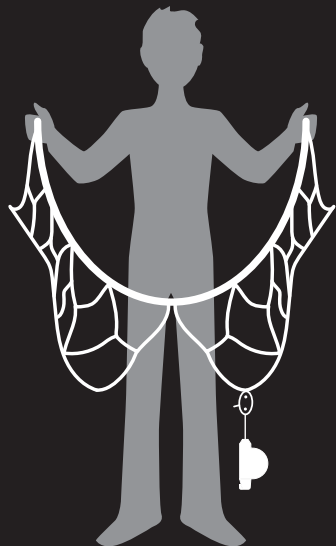

8-7-6-5-4-3

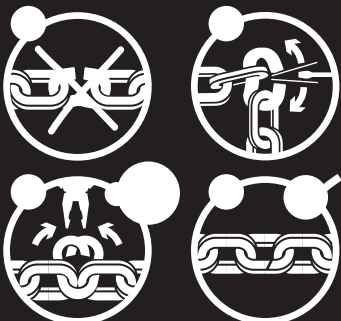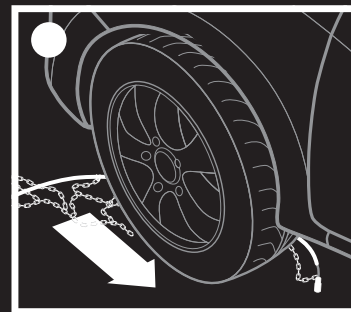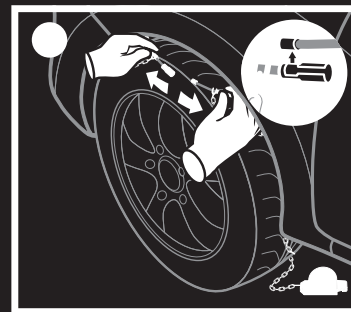

**F-APRES UTILISATION**  
**UK-AFTER USE**  
**DE-NACH DEM GEBRAUCH**  
**IT-DOPO L'USO**

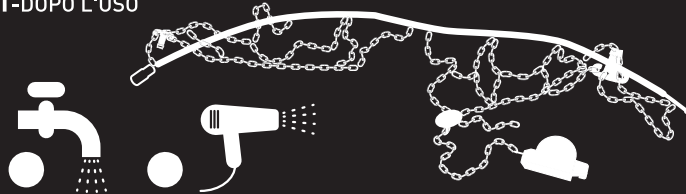

**F-POUR EMBALLER**  
**UK-TWIST TO PACK**  
**DE-TWIST PACKEN**  
**IT-PER IMBALLARE**

