


Installation instructions



Step1

Clean the wall and make sure the wall is dry and smooth.

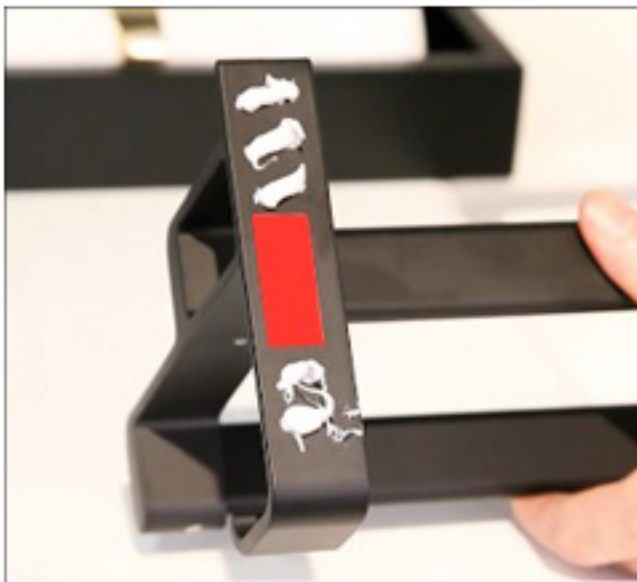

Step2

Apply glue on the back of the product (put sufficient amount with some space in between).

And tear off the red sheet of the double tape.



Step3

Press the rack with the back against the wall. Use the aluminum stickers to hold the rack tightly against the wall until the glue is dried.



Step4

Wait 72 hours for the glue to dry.



Step5

After 72 hours, you can remove the aluminum stickers and check if the rack is set firmly to the wall.



Step6

Done! The product can be used normally.

(if the sticker is removed and glued still to the product, please use this sticker to repeatedly paste twice to remove the residual glue on the product)