


# 14x21cm

## Installation Instructions

### Tools Needed:


You will need a Phillips screwdriver and a drill to install using the masonry wall anchor (A). A 6mm drill bit is recommended.

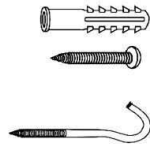


**A x 3**  
Masonry Wall Anchor

**B x 2**  
Wall Screw


**C x 1**  
Line Hook

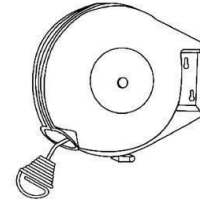


## Directions

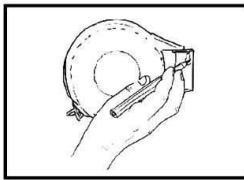


**1** Mark the appropriate placement for screwing the clothesline.

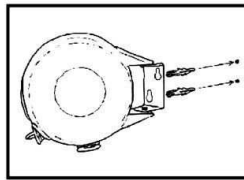


**2** Make hole on the markings to insert the two rubber anchors

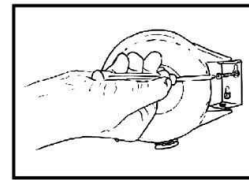


**3** Use a Phillips screwdriver and the included screws to fasten the clothesline into the wall.

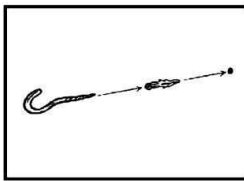

**4** On the opposite wall from the base of the clothesline, make a hole then insert a rubber anchor followed by the hook.

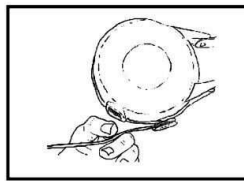

**5** Pull the line towards the hook, then wrap it around the tab at the bottom of the base to tighten the line

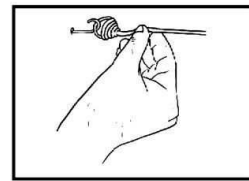

**6** Attach the line to the hook and make sure line is tight before hanging clothes.