




No tools required

No screw and drill required , no harm to wall surface

Installation by adhesive trips: application for hard , flat , smooth surfaces without dust, dry ,ash .

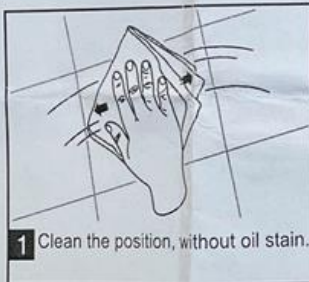

**1** Clean the position, without oil stain.



**2** Peel off the protected mask and keep it clean.



**3** Press the base against the surface by your max strength, make sure it is firm.

#### Cautions

1. Mount on the "multifunction components (Y)" on the bedplate before sticking it, avoid it can not take off after installation.
2. Put your articles after a 2 hours test to sure it is firm installation, articles should below 3 kilograms.
3. Not recommended for valuable and friable articles.(such as the clock, camera, glasses, jewel, etc.)
4. Not recommended for rough surfaces, the performance will be fade if overload, incorrect installation. please minds safety during installation.