


PROFESSIONAL CORD PET CLIPPER

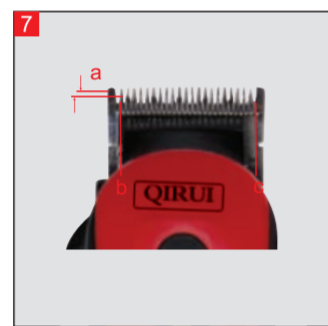

Cleaning and care




- Do not immerse the equipment in water!
- After each use, remove cut hairs from the cutting set using the cleaning brush.
- Only wipe the equipment with a soft or slightly damp cloth.
- Never use solvents or scouring agents!
- The cutting set can be cleaned with hygienic spray.
- Do not use any other cleaning agents.
- For long-lasting good cutting performance, it is important to oil the cutting set frequently (Fig.5). Only use attached cutting-set oil.
- Cutting set oil and hygienic spray are available from your dealer or our Service Centre.
- If the cutting performance deteriorates after long use despite regular cleaning and oiling, the cutting set should be replaced.
- Use the blade guard when the equipment is not in use.
- Always store the equipment with the blade guard in place.

Changing the clipping comb and clipping blade

- Switch off the equipment using the on/off switch (Fig.1b).
- Disconnect from the mains.
- Undo both screws on the cutting set, remove the clipping comb and clipping blade (Fig.6).
- When assembling, the clipping comb and clipping blade should be aligned as follows (Fig.7).
 - Raise cutting-length adjustment lever-shortest cutting length (Fig.3a).
 - The distance between the front edge of the clipping comb and the front edge of the clipping blade should be between 0.8 mm and 1.6mm (Fig.7a).
 - The clipping comb and clipping knife should be parallel to each other.
 - The first tooth of the clipping blade(from the left) must cover the first tooth of the clipping comb or be located slightly to the left of this (Fig.7b).
 - The outermost tooth of the clipping blade (on the right) must touch the outermost large tooth of the clipping comb (on the right) (Fig.7c).
- Tighten both screws (Fig.6).

If you reside within the EU and your unit is marked with the following symbol do not discard in trash. This product is to be returned to the appropriate municipal waste collection facility for recycling and recovery.

PROFESSIONAL CORD PET CLIPPER

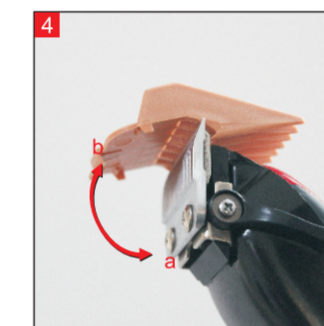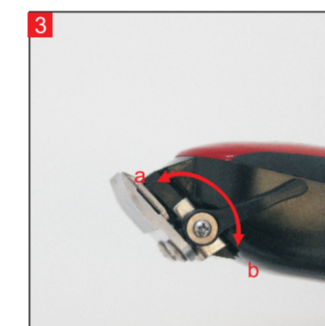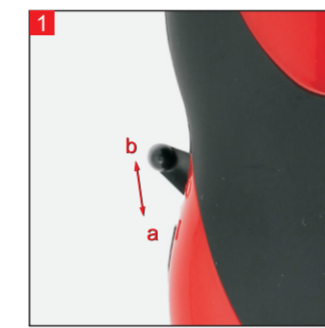

Using for the first time

- Oil the cutting set (Fig.5).
- Connect to the mains.
- Switch the equipment on using the on/off switch (Fig. 1a) and, after use, switch it off again (Fig.1b).

Note

The audible click that can sometimes be heard when switching the equipment on is a result of the drive unit switching on. This is completely normal. A slight warming of the equipment and vibrations during use are also completely normal.

Setting the power

The blade track is set at the optimum setting ex-factory. However, the blade track can change as a result of voltage fluctuations. In the event of undervoltage, the blade track can shorten and, in the event of overvoltage, it can lengthen. If necessary, by changing the setting of the adjusting screw, you can set this blade track yourself. To do so, use a screwdriver or a thin coin.

- Using the on/off switch, switch the equipment on (Fig. 1a).
- Turn the adjusting screw clockwise until you hear a loud noise (Fig.2b).
- Then turn the adjusting screw anti-clockwise until the loud noise stops (Fig.2a).

Cutting-length adjustment

With the adjustment lever at the side, the cutting length can be steplessly adjusted, even during operation.

- Lift the adjustment lever upwards-minimum cutting length (Fig.3a).
- Lower the adjustment lever-maximum cutting length (Fig.3b).

Cutting with attachment combs(depending on model)

Depending on the desired haircut, the equipment can be operated with or without attachment comb. To this end, the cutting-length adjustment lever has to be raised (Fig.3a). Depending on the model, attachment combs#1 (3mm),#2 (6mm),#3 (10mm) or#4 (13mm) are included in the scope of supply. Attachment combs# (16mm), #6 (19mm), #7 (22mm) and #8 (25mm) are available as optional accessories.

Attaching/removing the attachment comb

- Place the attachment comb onto the cutting edge of the cutting set and press it down onto the cutting set in the direction of the housing until it clicks into position(Fig.4a).
- The attachment comb can be easily removed by lifting the hook in the direction of the arrow (Fig.4b).



QIRUI® USER MANUAL PROFESSIONAL CORD PET CLIPPER



PROFESSIONAL CORD PET CLIPPER



Description of parts

- A Cutting set
- B ON/OFF Switch
- C Power Cord
- D Adjustable screw
- E Attached combs
- F Long comb
- G Oil
- H Cleaning brush
- I Scissors
- J Key ring

Important information

For your own protection, the following information must be observed when using electrical equipment (read all the instructions before using the equipment):

- Only connect the device to AC.
- Only connect the equipment to an alternating voltage. Note the rated voltage.
- Never touch electrical equipment that has fallen into water.
- Disconnect from the mains immediately.
- Never use electrical equipment in the bath or shower.
- Always position or store electrical equipment where it cannot fall into water (e.g. wash basin). Prevent electrical equipment from into contact with water and other liquids.
- Only use the equipment in dry rooms.
- Always disconnect from the mains immediately after use.
- Disconnect from the mains before cleaning the equipment.
- Never leave the equipment unsupervised if children or disabled people are nearby.
- Only use the equipment for the proper use as described in the operating instructions.
- Only use accessories recommended by the manufacturer.
- Never use the equipment if the mains cable is damaged. Furthermore, do not use the equipment if it is not working correctly, if it is damaged or if it has fallen into water. In these cases, send the equipment to our Service Centre for inspection and repair.
- Do not hold the equipment by the mains cable when carrying it and do not use the cable as a handle.
- Keep the mains cable away from hot surfaces.
- Make sure that the mains cable is not twisted or kinked when stored.
- Never insert or allow any objects to fall into the openings of the equipment.
- Never use the equipment where aerosol(spray) products are being used or where oxygen is released.
- To protect against injuries, never use the equipment if the cutting set is damaged.
- The equipment is safety-insulated and radio-screened.