



SCOOTER

FOLDABLE

RDD AFOLDST05

PRODUCT SPECIFICATIONS

PRODUCT NAME:

Foldable Scooter

PRODUCT CODE: RDD AFOLDST05BU BLACK

EANCODE 8718657553108

SPECIFICATIONS

Age:	8+
Weight limit:	100 kg
Handlebar height:	adjustable 77-100 cm
Bearings:	ABEC-9
Wheels:	200 mm
Foldable:	Yes

PACKAGE CONTENT

Foldable Scooter

Manual

RiDD & RiDE

Congratulations! You're the proud owner of a RiDD Foldable Scooter. Before you hit the road for the unique driving experience offered by your new Foldable Scooter, please read the attached instructions carefully.

The RiDD Foldable Scooter will let you experience a new fun way of movement, so enjoy your RiDD & Ride! From now on you're part of the RiDD community, don't forget to share your experience with your RiDD with friends, family and on social media!

TO (UN)FOLD THE RIDD FOLDABLE SCOOTER

1. Open clamp (see picture A)
2. Pull the plastic lever upwards to unlock the syteem (see picture B)
3. When the scooter is completely open, release the plastic lever to lock the system, the turn the screw clockwise until is tight enoug to close the buckle (see picture C)
4. When folding the scooter, ensure that the frontwheel is at 180° angle to the scooter. If this isn't done, it won't close properly. Keep fingers away from all moveable parts on the scooter as fingers could get trapped.
5. Alignment screws: the screw on the clamp that adjusts the height of the handle bars mustn't be taken out. This screw is to align the handle bards on the front wheel. If you lose this screw, don't use until the screw has been replaced.




ADJUSTABLE T-BAR

1. To adjust the T-bar, release the quick lock and press the spring button, then adjust the handle bar to the height. The button must then pop into the fixation hole. Tighten the quick lock to secure the handle bar (see picture E)
2. After use, simply loosen the quick lock, press the spring button and push down the handle bar. Tighten the quick lock to secure the handle bar (see picture F)

CAUTION! PLEASE REGULARLY CHECK ALL FIXINGS INCLUDING WHEELS
ARE TIGHTENED DURING USE.

Never ride the scooter without tightening the folding mechanism
Check all clamping for tightness and foot brake prior to riding

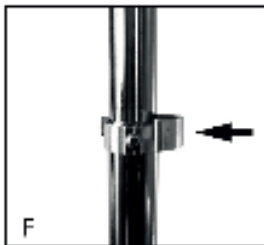

WARRANTY

WARRANTY RESTRICTION

The RiDD Foldable Scooter is supplied with a warranty of 12 months for material and workmanship faults. During this period of warranty it is up to your dealer to decide whether the product is covered by the warranty and should be repaired or replaced. The warranty does not cover damage caused by improper use such as incorrect installations on the model, careless use such as running against curbs, etc. or normal weather.

WARRANTY

We can only accept warranty claims if you can hand us your receipt (copy). Keep your receipt in a safe place. If you make a claim under the warranty, your dealer will decide whether the Foldable Scooter will be repaired or replaced with a new model.

- Retailer's name
- Original date of purchase
- SKU number of your RiDD product purchased
- Failure to supply a bill of sale with all of the required information will result in denial of warranty repair or replacement.

We assume that you will handle your RiDD Foldable Scooter in a responsible and safe manner. The use of the RiDD Foldable Scooter is entirely at your own risk. To minimize the risk of injury, you must read and follow all instructions, warnings and safety precautions carefully in this user manual, so that you will be able to use the RiDD Foldable Scooter safely. The legal representative of RiDD cannot be held responsible for any physical injury and wounds to you or others. You should therefore protect yourself well by wearing high-quality protective clothing while using the product, such as a safety helmet, knee and elbow pads, gloves and sturdy shoes. The protection will absorb a large part of the impact should you fall.

SAFETY PRECAUTIONS

WARNING – FAILURE TO COMPLY WITH SAFETY INSTRUCTIONS/ INAPPROPRIATE USE OF UNIT MAY LEAD TO PROPERTY DAMAGE, BODILY HARM AND IN EXTREME CIRCUMSTANCES, DEATH.

1. Before you use the RiDD Foldable Scooter, ensure that the steering rod is fully engaged and that all the screws are tight. Also ensure that the wheels have been correctly secured and that they show no signs of friction. Adult assembly is required, or proper assembly must be checked by an adult before use.
2. Warning: protective equipment should be worn. Ensure that you always wear a helmet and wrist-, elbow- and kneepads. Shoes with rubber soles are also required.
3. Ensure that you do not ride down any hills. The brake is not designed to decelerate from high downhill speeds.
4. The brake pad becomes hot when it is used. Make sure that you do not keep the brake on for a long period of time. Direct skin contact may cause burns.
5. Ensure that you do not ride on roads, paths or other places with motor vehicle traffic.
6. Always observe traffic regulations and laws. The RiDD Foldable Scooter may not be used on public roads.
7. Only one person may ride on the RiDD Foldable Scooter, it is not designed for more persons at the same time.
8. Never ride the RiDD Foldable Scooter at dusk or at night because it has no lights.
9. The RiDD Foldable Scooter must not be used on wet, oily, sandy, dirty, icy, rough or uneven surfaces.
10. Never use the RiDD Foldable Scooter in wet conditions.
11. Practice first to gain control of the vehicle. Do not attempt any experiments or risky manoeuvres. Riding style should always be adjusted to the personal skill of the rider.
12. Do not make any modifications to the RiDD Foldable Scooter. If you do, the guarantee is expired.
13. Load capacity is up to 100 kg body weight.
14. Important: undoing the axle screws several times will reduce the effect of the screw securing product. This means that the screws may come loose by themselves. Therefore, you should always use a conventional screw securing product.

WARNINGS

1. Only use the RiDD Foldable Scooter with the steering rod fully engaged.
2. Always make sure you wear a safety-approved helmet to ride the RiDD Foldable Scooter.
3. Falling off the RiDD Foldable Scooter without safety precautions may cause serious or even fatal accidents. Warning: Protective equipment should be worn.
4. In wet condition there is a major risk of slipping.
Do not use the RiDD Foldable Scooter in these circumstances.
5. Riding at dusk, at night or in poor visibility is very dangerous and increases the risk of accidents and injury.
6. Ensure that you wear safety equipment. In addition to the recommended safety equipment, wear bright, reflective clothing.
7. The hand grips contain metal tube, a foam grip and plastic endpiece and are attached by an elasticated string.
8. Caution - the brake pad becomes hot after using.



RIDD HELPDESK AND SERVICE & REPAIR CENTRE



International e-mail support: support@ridd.eu

Please note: our service & repair centre will approve the warranty claimed, after receipt of the product. This judgement will be substantiated with arguments and supported by visuals.

In the event the warranty term is expired or when damage is self-inflicted our service centre can also arrange a paid repair.

IMPORTANT

RiDD is distributed by Pirox International B.V. / Blaak 6 / 3011 TA Rotterdam / The Netherlands



**Kids Scooter
RDD KIDSST02**



**Foldable Kids Scooter
RDD FOLDST03**



**Foldable Scooter
RDD AFOLDST05BL**



**Stunt Scooter
RDD ST010**



**Xtreme Stunt Scooter
RDD XTRST04**

AGE	3+	5+	8+	8+	8+
WEIGHT LIMIT	80 KG	50 KG	100 KG	100 KG	100 KG
HANDLEBAR HEIGHT	ADJUSTABLE 66 - 89 CM	ADJUSTABLE 77 - 100 CM	ADJUSTABLE 77 - 100 CM	82 CM	82 CM
BEARINGS WHEELS	ABEC-7 118 MM LED	ABEC-7 125 MM	ABEC-9 200 MM	ABEC-7 100 MM	ABEC-9 110 MM
FOLDABLE	NO	YES	YES	NO	NO

